

VOYAGER



SCOOTER BEATS

User Manual
SCOT4045SB

Safety Precautions

When using your Voyager Scooter Beats Scooter, the following basic safety precautions should always be adhered to:

BEFORE RIDING

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SCOOTER.
2. Your scooter is designed to be used by riders age 8 and older.
3. Do not ride scooter in temperatures below 0°F.
4. Do not let children use your scooter without adult supervision.
5. Never immerse the scooter in water.
6. Do not leave the scooter in high temperatures.
7. Make sure to wear a helmet and other protective gear when riding your scooter, making sure to comply with the laws of your local municipality.
8. Do not ride your scooter with any loose clothing that can get caught in the wheels.
9. Do not expose your scooter's battery to liquid or moisture. Similarly, do not expose your scooter or its battery to excessive heat or fire.
10. When charging the battery, only use the supplied charging cable included with your scooter.
11. Connect all wires properly, making sure they are not entangled.
12. Do not ride your scooter if you notice any defects or irregularities. Contact the manufacturer or a certified technician immediately for support.
13. Some assembly is required. Make sure that all assembly is completed by a capable adult.

WHILE RIDING

1. When riding your scooter, make sure to always follow all traffic and safety rules based on the laws of your local municipality.
2. Do not ride your scooter while under the influence of any alcohol, medication or other substance which can cause impairment.
3. Do not attempt to do any tricks while riding your scooter. Furthermore, do not ride your scooter over rough terrain, icy roads, or uneven surfaces.
4. Ride carefully. Avoid applying the breaks abruptly.
5. Practice riding in spacious areas at low speeds until you become more experienced and comfortable with higher speeds.
6. Do not allow your scooter to be dragged by cars or bikes. Do not use your scooter on escalators or in crowded areas.
7. Do not use your scooter at night or in areas of low visibility.
8. Always power off your scooter when it is not in use.
9. Never allow more than one person on the scooter at a time.
10. Do not ride your scooter near stairs or bodies of water.

Introduction

Thank you for purchasing your new Voyager Scooter Beats Electric Scooter and welcome to the Voyager family. We hope that you'll do plenty of exploring on your new scooter. Please enjoy your new scooter responsibly and be sure to read the entire instruction manual before your first use. Have a blast, be safe and Get Moving!

 
Specifications

- **Battery Type:** Rechargeable 2Ah18650 Lithium Battery
- **Motor Power:** 50W
- **Max Mileage Per Charge:** Up to 4miles
- **Max Speed:** 6.2mph
- **Charger:** AC110-240V; 50-60Hz
- **Charge Time:** ~5 Hours
- **Net Weight:** 14.66 Pounds
- **Max Rider Capacity:** 120 Pounds
- **Minimum Rider Capacity:** 44 lbs
- **Recommended For Ages:** 8+
- **Wheels:** 4.5inches (front) 3.5inches (rear)
- **Dimensions (l/w/h):** 29.1/14/32.9 inches *unfolded*
29.1/14/12 inches *folded*
- **Temperature Limits:** Charging temperature range: 0°C - 40°C
Discharging temperature range: 0°C - 40°C
Store temperature range: -20°C - 25°C
- **Charger Information:** Charger model HGJS210040 manufactured by ZHEJIANG HENGGAO ELECTRONICS CO.,LTD

In The Box



- Voyager Scooter Beats Electric Scooter
- Charging Adapter
- Locking tool (wrench)
- User's Manual with Warranty Information

Your Scooter

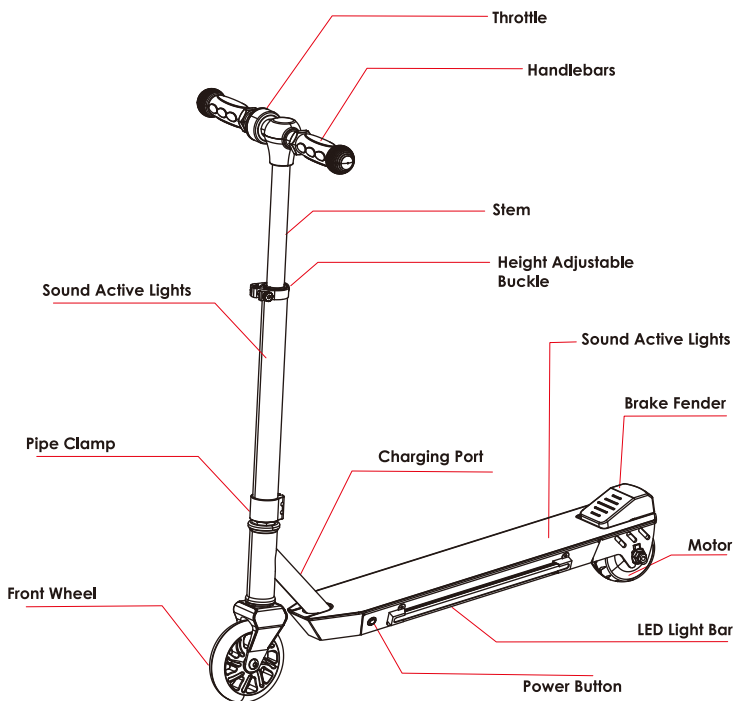


Assembly

  Make sure that your scooter is securely assembled before riding.

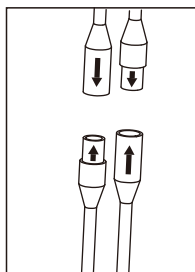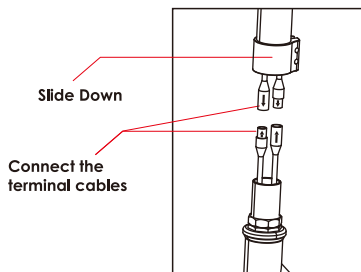

IMPORTANT NOTE

 When connecting terminal cables make sure to connect cables of the same color and to carefully align the arrows before connecting to ensure that the pins do not get damaged.

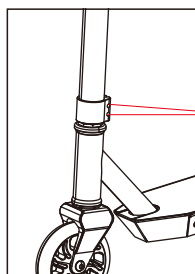

Tighten Bolts Securely

Ensure that the front wheel is aligned before tightening bolts.

Use the provided tool (wrench) to tighten securely, alternating between each bolt until they both can no longer be turned.

Charging

Before riding your scooter, please make sure that the battery is fully charged. In order to charge your scooter's battery, follow the steps below:

Step 1.

Make sure that your scooter is powered off before charging.

Step 2.

Make sure that your scooter is completely dry.

Step 3.

Connect one end of the include charging adapter into the charging port on your scooter. Plug the other end into a suitable power outlet in your home.

Step 4.

While your scooter's battery is charging, the LED light on the charging adapter will turn red. Once fully charged, the LED light will turn green.

Step 5.

Unplug the charging adapter once charging is complete.

NOTES:

 
--Charging takes approximately 5 hours to complete. To extend the lifespan of the scooter's battery, make sure to charge it at least once every 20-30 days.

--Always unplug the E-Scooter from the charger before powering on. If the E-Scooter is powered on while connected to the charger, make sure to power off and then back on after unplugging from the charger to restore normal functionality.

Bluetooth Speaker


In order to use your scooter's built in Bluetooth speaker, follow the steps below:

1. Power on the scooter by pressing the power button.

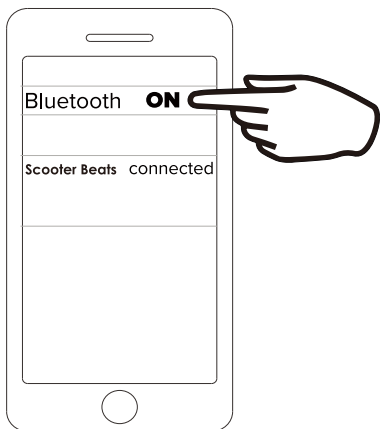

2. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "Scooter Beats."

 3. When asked to enter a PIN Code, enter "4040."

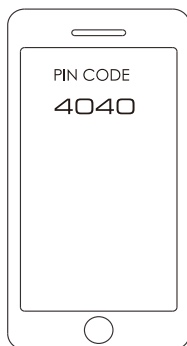

4. Once connected, your E-Scooter will emit a "Paired" tone.

 
Using The Controls

1. Power ON/OFF

Press the power button and the LED lights on your scooter illuminate, indicating that it is powered on. Hold the power button for 3 seconds to power it off.

2. Accelerating

Kick off with one foot while holding the thumb throttle down.

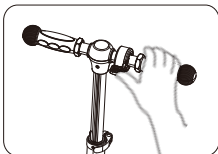


IMPORTANT NOTE

Your scooter will **NOT** accelerate by pressing the thumb throttle down alone.

You must kick push the scooter so it starts to move forward and build speed and **THEN** press the thumb throttle down for your scooter to accelerate.


3. Braking

 Press the brake fender with your back foot to slow down.

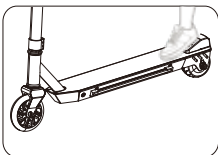



4. Height Adjustment

 Loosen the height adjustment buckle and then lower or raise the stem to a desired height. Make sure the buckle is tightened once complete.

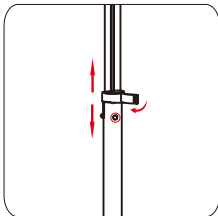

Ride Safely

  1. Avoid leaning forward while accelerating or decelerating and do not keep your body weight on the handlebars.
2. While riding, keep one foot in front of the other, so that your body is stable and you can easily step on the rear brake.
3. Keep your body and handlebars parallel when turning. Be sure that the road is in smooth condition, especially while turning.
4. Ride thoughtfully. Plan your route before traveling. Be aware of any uneven surfaces. Avoid applying the brakes abruptly.

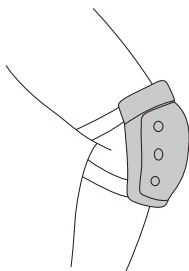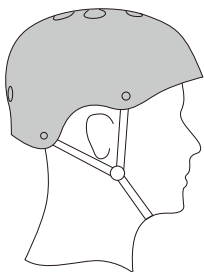

5. Make sure to wear a helmet and other protective gear when riding your scooter, making sure to comply with the laws of your local municipality.

Strictly abide by local laws and regulations and traffic laws.
Do not ride this scooter under conditions with low visibility.
Do not carry passengers.

FCC Compliance

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call (877)-444-0345 in the U.S. or visit our website at www.ridevoyager.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepairs.

LOCAL LAWS

Prior to purchasing any motorized vehicle, we highly recommend that you research your local regulations and country-specific laws. Ultimately, you are responsible for complying with all applicable laws and regulations. Voyager waives all liability relating to your use of Voyager products.

VOYAGER

成品尺寸：100mm*180mm

材质：封面封底250克銅板外內覆亞膜，
封面封底彩色印刷4C，封面背面和封底背面是黑色。內頁128克銅板黑白印刷。

骑马钉裝訂成册：封面+封面背面(空白黑色)+內頁+1张空白页（2P）+封底背面(空白黑色)+封底