

材质

封面128g铜版纸过哑油 内页90g铜版纸过哑油


尺寸

100*140mm

装订方式

骑马钉

GT801 Dash Camera

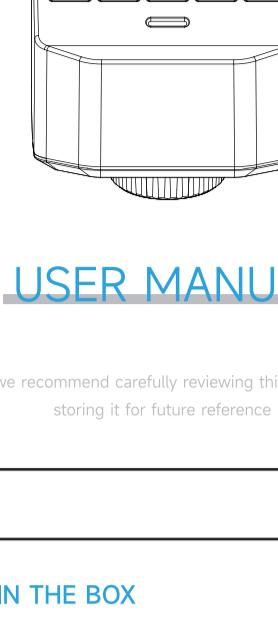

USER MANUAL

Before use, we recommend carefully reviewing this user manual and storing it for future reference


V2.03

Thank you for purchasing our product. We hope that this user manual will help you get started with basic features that our camera has.


NOTICE

- 1. Please read this instruction manual carefully before using the camera. It contains important information for your safety as well as operating and maintenance instructions.
- 2. Follow all safety precautions in order to prevent damage due to improper use of the camera.
- 3. In the event of improper use or erroneous handling, no liability can be assumed for any possible damage which may occur.
- 4. You should always use a camera in a place that does not obstruct or reduce a driver's view. Make sure your usage complies with pertinent vehicle codes of your state, province, territory or country.
- 5. You should release the required record notification to the occupant in the car, if you will record sounds or other information / signals related to car activity.
- 6. You should avoid extended exposure of the dash cam to direct sunlight or extreme temperatures (either high or low temperature) which tend to degrade or damage the unit and its normal functionality.
- 7. Do not try to open the cover or try to repair it yourself. If the accessories for this device have any problem, please contact the seller for assistance.
- 8. Pay attention to the environment when cleaning the device. Use a soft, moist cloth to clean the lens to avoid causing video quality.
- 9. This device is intended to be used inside the vehicle only.
- 10. Do not expose this product to rain, moisture or water under any circumstances, or it will result in external or internal damage.
- 11. Do not operate or install the camera while driving, or attempt to change any setting, etc.
- 12. Please insert a formatted memory card into the product before your first use (see on page 04).


WHAT'S IN THE BOX

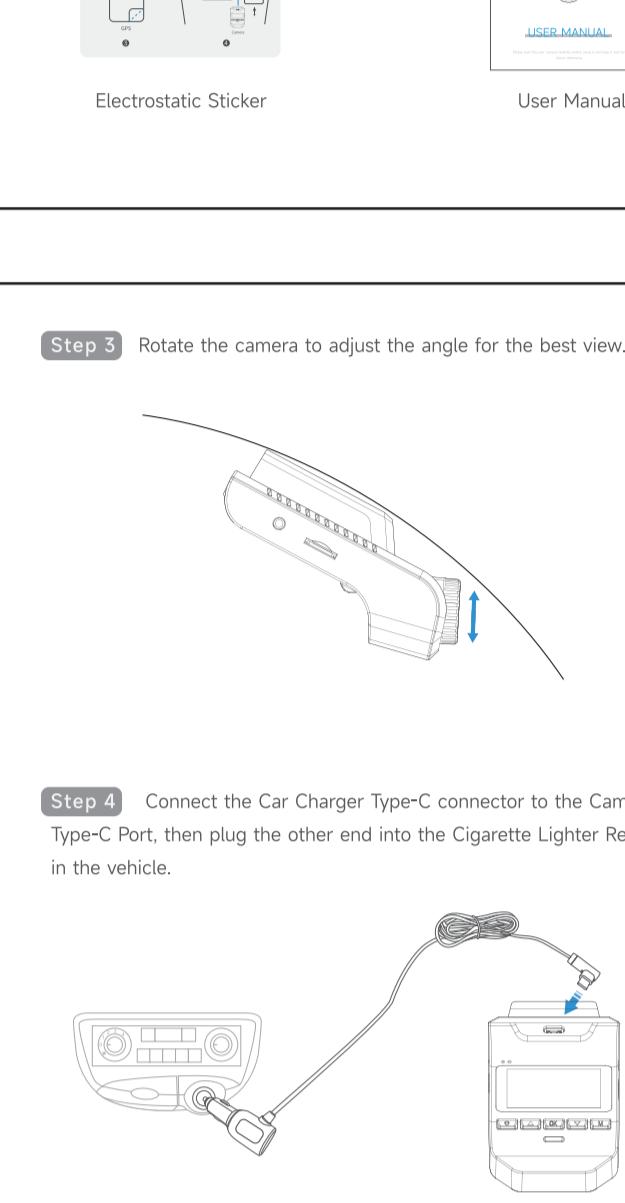

Step 3 Rotate the camera to adjust the angle for the best view.

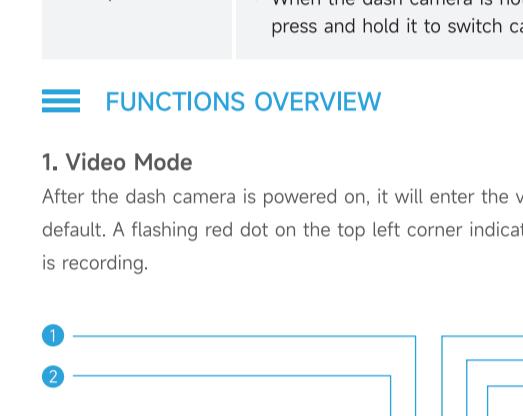

Step 4 Connect the Car Charger Type-C connector to the Camera's Type-C Port, then plug the other end into the Cigarette Lighter Receptacle in the vehicle.

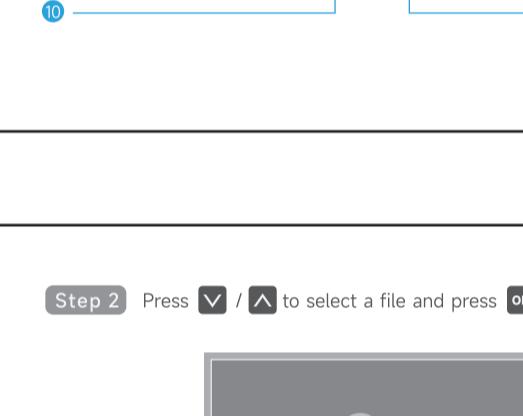


05.


06.

INSTALLATION INSTRUCTIONS

Step 1 Clean the front windshield and attach the Electrostatic Sticker to it.

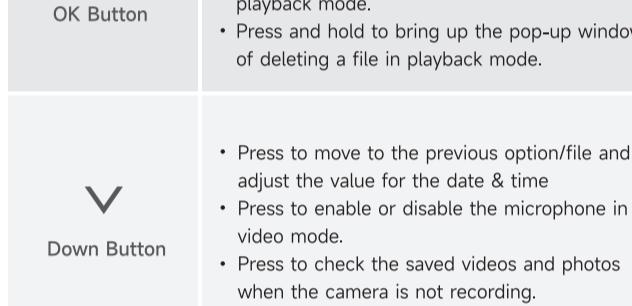

Step 2 Peel off the 3M adhesive pad and attach the stand to the Electrostatic Sticker.

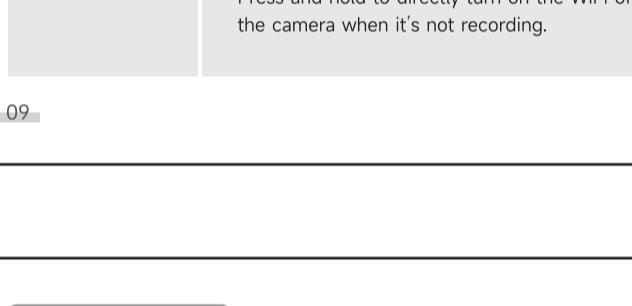


Tip: Mount the camera close to the rearview mirror for best results.


Step 5 Insert a memory card into the dash camera and format it (see page X).

PRODUCT OVERVIEW

Camera

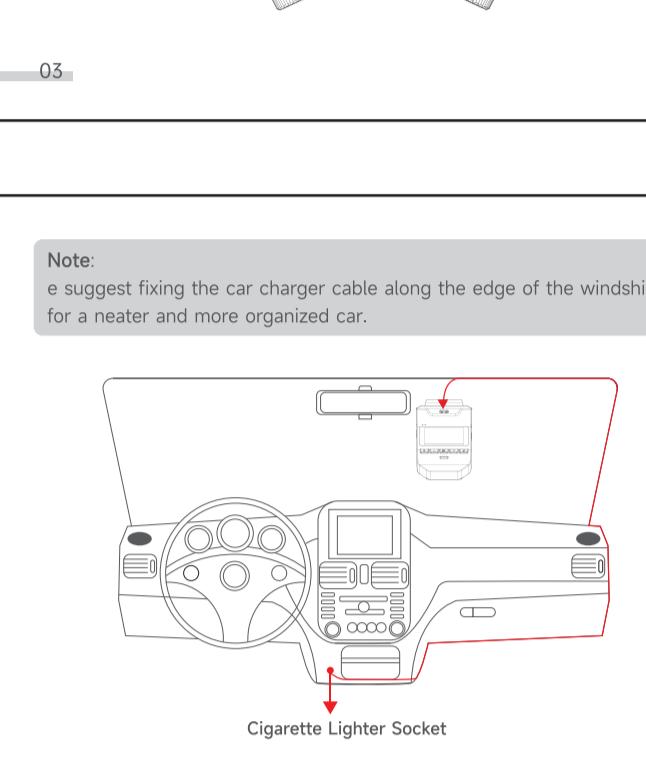

Mount with 3M Adhesive Pad

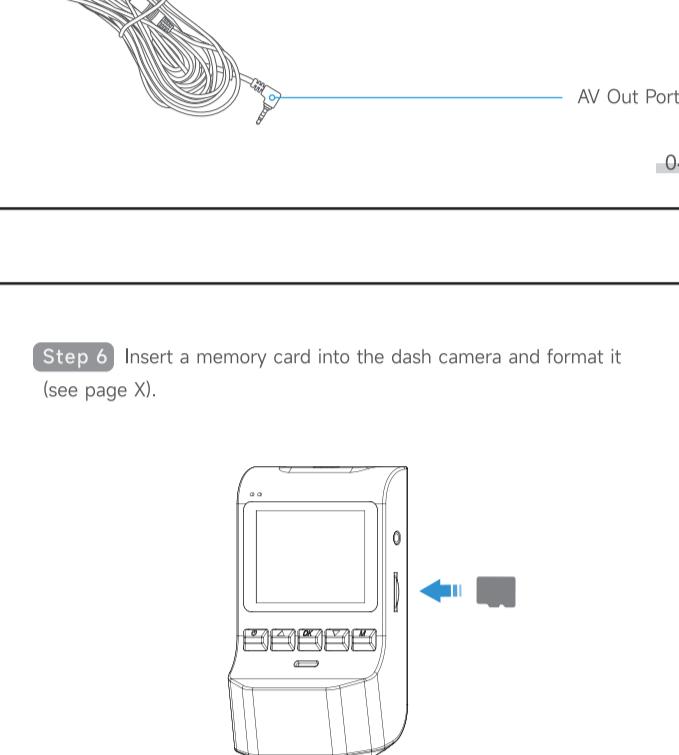

Rear Camera Kit



Rear Camera

Mounting Bracket

AV Out Port

AV In Port

Reset

Mic

Memory Card Slot

AV Out Port

Cigarette Lighter Socket

Power On/Off

OK Button

Power Indicator (Red)

Recording Status Indicator (Blue)

Display

OK Button

Power Button

Down Button

Speaker

AV In

Memory Card Slot

Reset

Mic

AV Out

Cigarette Lighter Socket

Power On/Off

OK Button

Power Indicator (Red)

Recording Status Indicator (Blue)

Display

OK Button

Power Button

Down Button

Speaker

AV In

Memory Card Slot

Reset

Mic

AV Out

Cigarette Lighter Socket

Power On/Off

OK Button

Power Indicator (Red)

Recording Status Indicator (Blue)

Display

OK Button

Power Button

Down Button

Speaker

AV In

Memory Card Slot

Reset

Mic

AV Out

Cigarette Lighter Socket

Power On/Off

OK Button

Power Indicator (Red)

Recording Status Indicator (Blue)

Display

OK Button

Power Button

Down Button

Speaker

AV In

Memory Card Slot

Reset

Mic

AV Out

Cigarette Lighter Socket

Power On/Off

OK Button

Power Indicator (Red)

Recording Status Indicator (Blue)

Display

OK Button

Power Button

Down Button

Speaker

AV In

Memory Card Slot

Reset

Mic

AV Out

Cigarette Lighter Socket

Power On/Off

OK Button

Power Indicator (Red)

Recording Status Indicator (Blue)

Display

OK Button

Power Button

Down Button

Speaker

AV In

Memory Card Slot

Reset

Mic

AV Out

Cigarette Lighter Socket

Power On/Off

OK Button

Power Indicator (Red)

Recording Status Indicator (Blue)

Display

OK Button

Power Button

Down Button

Speaker

AV In

Memory Card Slot

Reset

Mic

AV Out

Cigarette Lighter Socket

Power On/Off

OK Button

Power Indicator (Red)

Recording Status Indicator (Blue)

Display

OK Button

Power Button

Down Button

Speaker

AV In

Memory Card Slot

Reset

Mic

AV Out

Cigarette Lighter Socket

Power On/Off

OK Button

Power Indicator (Red)

Recording Status Indicator (Blue)

Display

OK Button

Power Button

Down Button

Speaker

AV In

Memory Card Slot

Reset

Mic

AV Out

Cigarette Lighter Socket

Power On/Off

OK Button

Power Indicator (Red)

Recording Status Indicator (Blue)

Display

OK Button

Power Button

Down Button

Speaker

AV In

Memory Card Slot

Reset

Mic

AV Out

Cigarette Lighter Socket

Power On/Off

OK Button

Power Indicator (Red)

Recording Status Indicator (Blue)

Display

OK Button

Power Button

Down Button

Speaker

AV In

Memory Card Slot

Reset

Mic

AV Out

Cigarette Lighter Socket

Power On/Off

OK Button

Power