 
 


ZIKKER

Portable Wireless Charger for Apple Watch

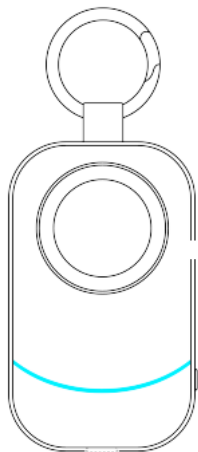

Product Diagram

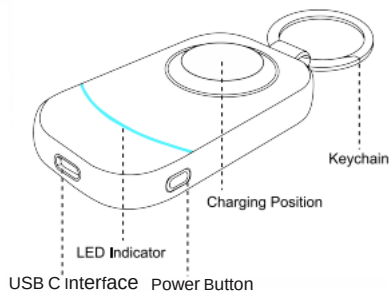 


Technical Specifications

Model: D3 FCC ID:2A7KE-D3


Product Weight: 0.18 lb
Product Dimensions: 3.03x 1.89x0.71 inch
Battery Type: Polymer Battery
Battery Capacity: 2500mAh
Maximum Input: 5V/2A
Charger Power: 2.5W
Compatibility: Apple Watch 10/9/8/Ultra/7/
6/5/4/3/2/1/SE

Charge Your Apple Watch

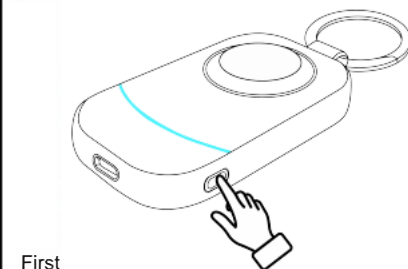

First

 
Press the power button to turn on.

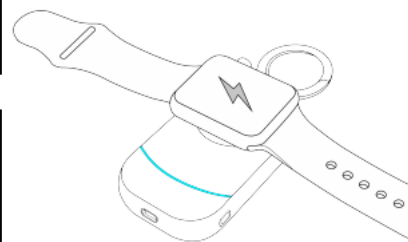

Second

Place your Apple Watch on the wireless charging area,
it will automatically begin charging the Apple Watch.

 Charge Your Power Bank

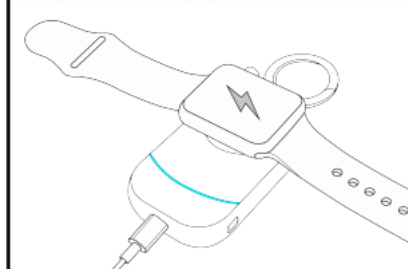

1. For best results, use a 5V/2A power adapter to connect the power bank.
2. You can also connect the power bank to a computer's USB port to charge it.
3. While charging, the LED power indicator will blink sequentially.
4. When fully charged, the LED power indicator will remain solid blue.
5. You can also charge your Apple Watch while the power bank is charging.

Charging Instructions

1. During the charging process, the LED power indicator displays the remaining battery level:
 - A solid blue light indicates 66%-100% power remaining.
 - One blue light fading indicates 34%-65% power remaining.
 - An orange light indicates 1%-33% power remaining.
2. Once the Apple Watch is fully charged, the power bank will automatically shut off within 30 seconds of disconnection. The watch takes 1-3 hours to fully charge, depending on your watch model.
3. The power bank takes approximately 2-3 hours to fully charge, though actual time may vary.
4. If the power bank or Apple Watch isn't charging, check the connection cable and charging accessories for any issues. Ensure they are properly connected. It's recommended to use a certified power adapter.
5. Due to conversion rates, the power bank's capacity may differ from the actual rechargeable capacity.
6. If the power bank does not turn on due to short-circuit protection, recharge it to reset and activate it.

Safety Information

1. Keep the product stored at a temperature between 50°F and 95°F (10°C to 35°C).
2. Do not drop, disassemble, puncture, or attempt to repair the power bank yourself.
3. Avoid exposing the power bank to fire, high temperatures, or water.
4. Stop using the power bank immediately if you notice any abnormalities, such as swelling or damage to the device being charged.
5. This device is not suitable for use by children or individuals with limited physical, sensory, or mental capabilities unless supervised by a responsible adult. Keep it out of reach of children and do not allow them to use it as a toy.
6. Do not leave the product in a car for extended periods, especially in direct sunlight.
7. Avoid inserting foreign objects into the product's ports.
8. Charge the power bank at least once every three months to maintain its functionality.

Warning

Failure to follow these safety instructions may result in fire, electric shock, damage, or injury.



Made in China

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- a. Reorient or relocate the receiving antenna.
- b. Increase the separation between the equipment and receiver.
- c. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- d. Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.