

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



# C1

 
## SMART REMOTE CONTROLLER

Single Motor Electric Blinds · Quick Start Guide



Applicable to  
various single-motor electric blinds


---



Roller Blinds



 Zebra blinds



Shangri-la Blinds



Pleated Blinds



Honeycomb Blinds



Venetian Blinds



Smart Curtain

Contents

---

Smart Remote Controller Button Function Explanation .....	1
---	---

Motor Diagram .....	3
---------------------	---

Motor Settings ("admin" Mode) .....	5
-------------------------------------	---

Quick Matching .....	5
----------------------	---

Setting Limits .....	6
----------------------	---

Motor Reversing .....	7
-----------------------	---

Delete Emitter Matches .....	8
------------------------------	---

Normal Usage ("user" Mode)

Favorite Point .....	9
----------------------	---


Add A New Remote .....	9
------------------------	---

Motor Speed Regulation .....	10
------------------------------	----

Remote Lock Channel .....	11
---------------------------	----

## Smart Remote Controller

Button Function Explanation

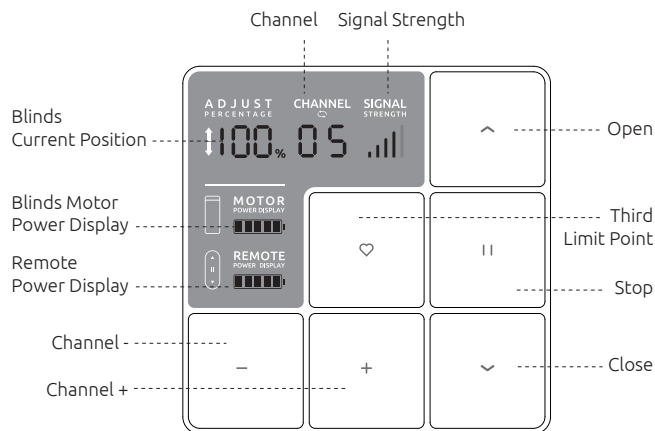


Front

**Charging Status:** When the controller is charging, the battery icon on the controller will blink and display . Once fully charged, the battery icon will remain steady and show .

## Smart Remote Controller

Button Function Explanation

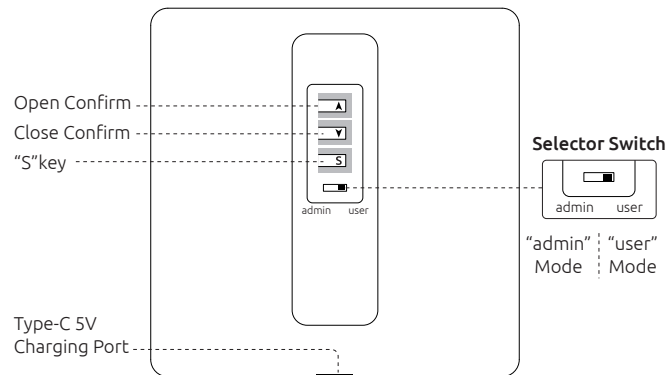


Back


- 1. Controller Charging:** It is mandatory to use a 5V voltage for charging. Excessive voltage may easily damage the controller, while insufficient voltage will prevent charging.
- 2. Selector Switch:** After setting up the motor, you must switch back to "user" mode to use it normally.

## Motor Diagram

For more detailed settings  
please refer to the motor manual

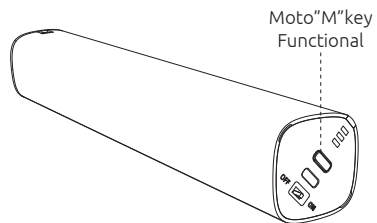


Smart Curtain Motor

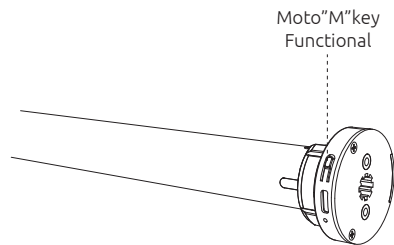


Tubular Motor

## Motor Diagram

For more detailed settings  
please refer to the motor manual

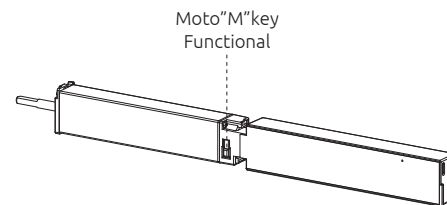

Honeycomb Blinds Motor

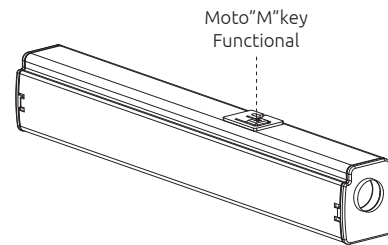


Venetian Blinds Motor


## Motor Settings

("admin" Mode)


### 1. Quick Matching (Take tubular motor as an example)

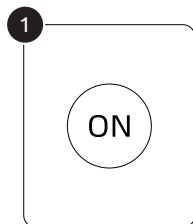


Make sure the motor is energized.

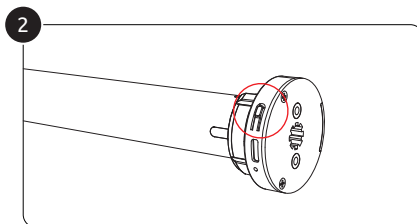


press the motor "M" button for 2"  
The motor rotates back and forth once  
The motor enters the matching state,  
(Valid for 60 seconds)

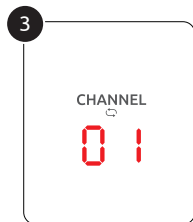

Select the channel you want to match

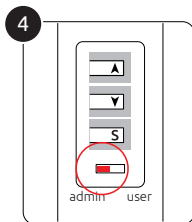

The switch selects  
"admin" mode

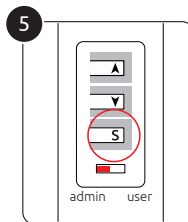


Long press "S" for 2"  
The motor will rotate  
back and forth once .  
Match successfully

## Motor Settings


("admin" Mode)

### 2. Setting Limits

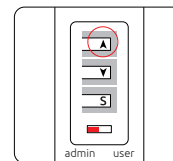


#### Step 1: Set Upper Limits

Use the front button of the transmitter to stop the curtain at the required up travel point  
press ▲ for 2 seconds , motor rotation once,upper limit is set

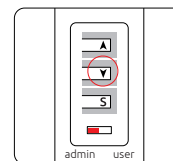

#### Step 2: Set Lower Limits

Use the front button of the transmitter to stop the curtain at the desired down travel point  
press ▼ for 2 seconds , motor rotation once,Lower limit is set

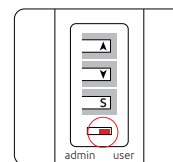

#### To "user" mode.

Limits setup successful, normal use


- ① In Admin mode, blinds operation will switch between inching operation and continuous operation, so as to set the stroke more accurately
- ① If you need to modify the route, repeat the above route setting method.

## Motor Settings

("admin" Mode)


### 3. Motor Reversing

Hypothesise this operation when the blinds runs in the opposite direction to the transmitter button.

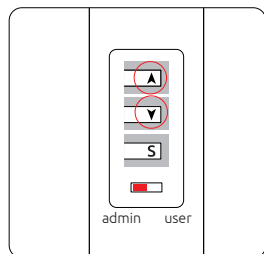

#### Method 1

Press both together until the motor rotates once.

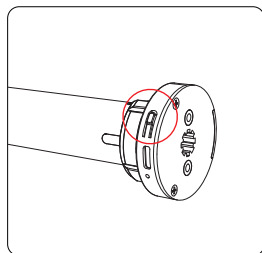


#### Method 2

Press M key 10" motor rotation the third time.

## Motor Settings

("admin" Mode)

### 4. Delete Remote Matches

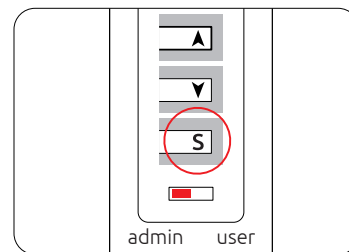


In "admin" mode,  
"S" Press 5 times, motor rotation once.  
Deleting completed

A re-pairing is required. For detailed operations, refer to "Quick Matching" on page 5.

## Normal Usage

("user" Mode)

### 1. Favorite Point

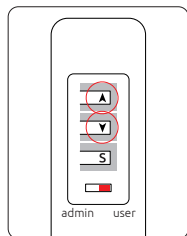

Users need to set a common shading effect, such as open to 50%. This position can be set to the Favorite point.


Operate the product to desired preferred position, + press both together for 2 seconds, motor rotation once. Set to complete.

**Repeat , set a new favorite point.**

### 2. Add A New Remote

Normally, Remote A controls the motor, Remote B also needs to control.

#### Method 1

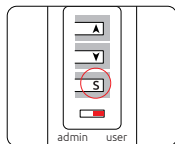

Press 2 times

**A**

Press 2 times

**B**

Press the S key once,  
The motor rotates once.

#### Method 2


Remote B ,P5 "Quick Matching"

## Normal Usage


("user" Mode)

### 3. Motor speed regulation

The running speed of the motor is three gears in total, and the default is gear 1. Slower and quieter.

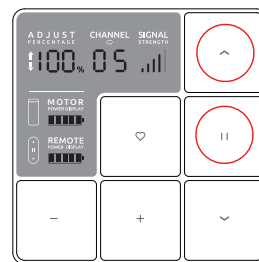

Both Hold  
Until the motor jog  
up one gear

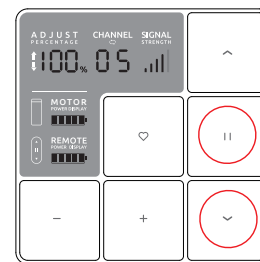

Both Hold  
Until the motor jog  
reduced by one gear

Only one gear can be raised or lowered in one operation. When switching to the corresponding gear, the number of motor rotation is the same as that of the gear.


## Normal Usage

 ("user" Mode)

### 4. Remote Lock channel

One channel of transmitter controls one motor, and 15 channels control up to 15 motors.


For example, the 15 channel transmitter only uses 1-5 channels, the remaining 6-15 channels are not used and can be hidden without display.



While the remote screen is on, simultaneously press and hold the + key for 2 seconds.

After the channel number appears on the display screen, release the key.

 Press the key to select the desired number of channels to retain.



The screen displays the number of channels.

Press and hold the key for 2 seconds to confirm completion.

① Reserved channels can only be counted from channel 1. For example, 1-5. No support for 3-7. Repeat the operation to adjust the final required number of channels.