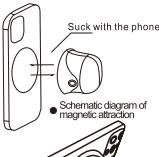
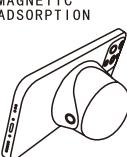
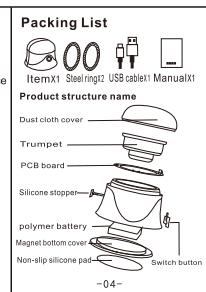
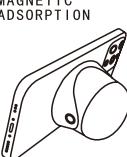
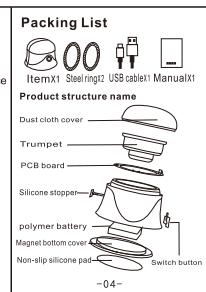


Disconnect from the device ● Turn off the Bluetooth connection with this speaker on your device. ● The speaker beeps once, and Bluetooth exits after disconnecting the link. Note: Before connecting another Bluetooth device, disconnect the current device first. Reconnect device.	Disconnect for 5 minutes  Notice The device will automatically shut down in the power-on state if the Bluetooth is not connected or disconnected for more than 5 minutes.	Bluetooth device situation: 1. The audio quality is poor after connection. ● Move the device close to the product or remove the obstacles. 2. Cannot connect with the device: ● This product is connected to another Bluetooth device. ● Disconnect from the other device and try again. Common troubleshooting methods No electricity: charge the speaker No sound: ● Adjust the volume of the connected device. ● Make sure your Bluetooth device is within the effective working range. The speaker does not respond: ● restart the speaker.	  ● Can be used as mobile phone holder	 Notice The non-magnetic mobile phone or non-metallic object can be attached to the package with a steel ring to achieve the magnetic function.	(1) Free repair of defective products and replacement of new parts. (2) Replace with a new product. Notice The warranty period of this product is as follows: within one year from the date of purchase, the company shall be responsible for all problems arising from product materials and workmanship. If the product fails to meet the requirements during the specified warranty period and the reason is justified, the company will deal with it according to the specific requirements of the purchaser.	Exclusions and restrictions Within the scope of the improper warranty, the company will not be responsible for any damage to the mobile device or loss of data caused in the use of the mobile device or in the products and parts of the company. And in accordance with the stipulated warranty clauses, we are not responsible for the above-mentioned lost procedures, data restoration and reinstallation. The above clauses are not applied in the following situations: (A) Damage caused by accidents, misuse or misuse of products, and non-company products. (B) Damage not caused by the company's services. (C) Products with unclear or scraped serial numbers.	Warranty Card Describe the repair problem in detail: <table border="1" data-bbox="1365 718 1556 853"><tr><td>Name: _____</td></tr><tr><td>Telephone: _____</td></tr><tr><td>Address: _____</td></tr><tr><td>Problem: _____</td></tr></table>	Name: _____	Telephone: _____	Address: _____	Problem: _____
Name: _____											
Telephone: _____											
Address: _____											
Problem: _____											
Mag-HiFisound MAGNETIC ADSORPTION  CQ-01 Instruction Manual	Thank you for purchasing our products. I am very happy that you share the company's product development. Our smart product technology with us. With the popularity of mobile lifestyles, we will use the latest technology to inject energy into your mobile life. Please read the instructions and warnings carefully when using this product. Improper use may cause damage to the product or endanger the safety of others. Warning Removing the built-in battery will invalidate the warranty and destroy the product. Notice Rechargeable batteries have a limited number of recharges, and battery life and recharge times depend on usage conditions and settings. This product and pictures are for reference only, and everything is subject to the actual product.	Important safety information 1. Please observe the following basic safety instructions to ensure the safe and reliable use of the product. 2. Observe all warnings and instructions marked on the product. Please use in a clean surface with an output voltage of 5V to avoid damage to the product. The product uses a built-in polymer battery, please turn it off when not in use. Warning Removing the built-in battery will invalidate the warranty and destroy the product. Notice Rechargeable batteries have a limited number of recharges, and battery life and recharge times depend on usage conditions and settings.	 Product structure name Dust cloth cover Trumpet PCB board Silicone stopper polymer battery Magnet bottom cover Non-slip silicone pad Type-C interface Switch button/indicator	Packing List Item 1: Steel ring 2: USB cable 1: Manual X1	How to use this product to charge the built-in battery The speaker is powered by a built-in rechargeable battery. Note: Fully charge the built-in battery before use. 1. Press and hold the power button for 3 seconds until the voice playback prompt is on/off, and the voice playback prompt is displayed after the Bluetooth connection is successful, and the indicator status is blue. 2. When the music is playing, press the power button once to pause/play.	3.TWS mode: two devices are required: long press the power button to turn on one of the devices, and pair Bluetooth, then connect the second device, long press the power button to turn on the other device, and double-click the power button to enter TWS mode; double-click again to turn off TWS mode. Note: If the device is paired on and enter TWS mode, only one device needs to be connected to the Bluetooth paired phone; if you make a mistake, please press and hold the device shutdown button to turn off and re-enter the TWS mode operation.	Use Bluetooth device You can use speakers to listen to the audio of the player. Notice: ● The working range between this product and the Bluetooth device is approximately 10 meters. ● The working range will be reduced if there is any obstacle between this product and the Bluetooth device. ● Keep away from other electronic devices that may cause interference. Link device ● Search for Bluetooth devices on your device and select Mag-HiFisound in the device bar. The speaker will sound prompt once the link is successful after the link is established.				

Mag-HiFisound MAGNETIC ADSORPTION  CQ-01 Instruction Manual	Thank you for purchasing our products. I am very happy that you share the company's product development. Our smart product technology with us. With the popularity of mobile lifestyles, we will use the latest technology to inject energy into your mobile life. Please read the instructions and warnings carefully when using this product. Improper use may cause damage to the product or endanger the safety of others. Warning Removing the built-in battery will invalidate the warranty and destroy the product. Notice Rechargeable batteries have a limited number of recharges, and battery life and recharge times depend on usage conditions and settings. This product and pictures are for reference only, and everything is subject to the actual product.	Important safety information 1. Please observe the following basic safety instructions to ensure the safe and reliable use of the product. 2. Observe all warnings and instructions marked on the product. Please use in a clean surface with an output voltage of 5V to avoid damage to the product. The product uses a built-in polymer battery, please turn it off when not in use. Warning Removing the built-in battery will invalidate the warranty and destroy the product. Notice Rechargeable batteries have a limited number of recharges, and battery life and recharge times depend on usage conditions and settings.	 Product structure name Dust cloth cover Trumpet PCB board Silicone stopper polymer battery Magnet bottom cover Non-slip silicone pad Type-C interface Switch button/indicator	Packing List Item 1: Steel ring 2: USB cable 1: Manual X1	How to use this product to charge the built-in battery The speaker is powered by a built-in rechargeable battery. Note: Fully charge the built-in battery before use. 1. Press and hold the power button for 3 seconds until the voice playback prompt is on/off, and the voice playback prompt is displayed after the Bluetooth connection is successful, and the indicator status is blue. 2. When the music is playing, press the power button once to pause/play.	3.TWS mode: two devices are required: long press the power button to turn on one of the devices, and pair Bluetooth, then connect the second device, long press the power button to turn on the other device, and double-click the power button to enter TWS mode; double-click again to turn off TWS mode. Note: If the device is paired on and enter TWS mode, only one device needs to be connected to the Bluetooth paired phone; if you make a mistake, please press and hold the device shutdown button to turn off and re-enter the TWS mode operation.	Use Bluetooth device You can use speakers to listen to the audio of the player. Notice: ● The working range between this product and the Bluetooth device is approximately 10 meters. ● The working range will be reduced if there is any obstacle between this product and the Bluetooth device. ● Keep away from other electronic devices that may cause interference. Link device ● Search for Bluetooth devices on your device and select Mag-HiFisound in the device bar. The speaker will sound prompt once the link is successful after the link is established.
---	---	---	---	---	---	---	---

FCC Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has evaluated to meet general RF exposure requirement. The device can be used be in portable exposure without restriction.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.