

90.0 mm

360.0 mm

60.0 mm

Wireless Speaker


User Manual

YS-W1

WATER RESISTANT

IPX7

RATING

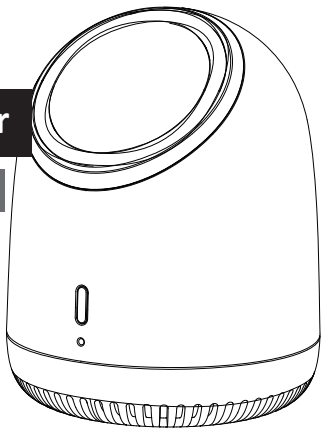

SAFETY INSTRUCTIONS

Read all instructions

Only charge with devices rated and marked with 12V to avoid damage to the speaker. Do not open up the speaker, it voids the warranty and may damage the product. Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles varies by use and settings. Never place the speaker close to high temperature heat sources. To keep the warranty valid, never try to repair the product yourself.

PARTS AND FUNCTIONS

1. Speakerphone.


2. Bluetooth Indicator

3. Type-C charging port.

4. Power button:

power on/off, play/pause,tws, reset.

5. Micphone.

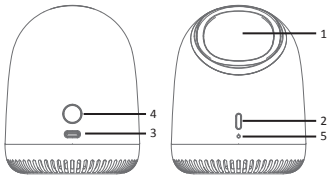

THE SPEAKER'S BATTERY

A built-in rechargeable battery powers the speaker.

SPEAKER CHARGE

Connect the supplied charging cable to the charge input and to a USB port on your computer or a USB charger. The white light will flashes three times and then light off. The LED turns off when fully charged. It is recommended to charge 10 minutes before power on if you 7 days unused, then you can continue to use while charging.

POWER ON/OFF

Power on: Long press power button 3 seconds to power on the speaker, then the Bluetooth indicator light is on and you can connect Bluetooth devices.

Power off: Long press power button 3 seconds to power off the speaker, and then Bluetooth indicator will turn off.

CONNECT THE SPEAKER

Turn on the speaker, the Bluetooth indicator flashing blue, on your device search for Bluetooth devices. Select the speaker from the list. It will give an indication sound when the connection is successful. The Bluetooth indicator solid blue. Only one Bluetooth device can be connected at the same time. If you want to connect another device to the speaker, then first disconnect the current one.

DISCONNECT THE SPEAKER

When it's connected via Bluetooth: triple press power button to disconnect.

RECONNECT THE SPEAKER

Some Bluetooth devices support automatic reconnection, with those devices the speaker will automatically reconnect.The speaker will not automatically reconnect on devices that does not support automatic reconnection.When it's not connected: triple press power button to connect to the last disconnected device.

THE POWER BUTTON'S FUNCTIONALITY

Short Press: 1) Under music playing state: play, pause function.
2) In the state of incoming call: short press to answer the call.
3) When the call has been answered: short press to hang up.

Long Press: 1) In the power-off state, press and hold for 3 seconds to turn on.
2) In the power-on state, press and hold for 3 seconds to turn off.
3) When the speaker is abnormal or crashes, press and hold for 10 seconds, the speaker will automatically reset and shut down.

Double press: 1) TWS pairing and disconnecting.

Triple press: 1) In the state of Bluetooth connection, three clicks to disconnect the current connection.
2) When the Bluetooth connection is disconnected: triple-click to return to the last disconnected mobile phone

HANDS-FREE FUNCTIONALITY

1. Connect your phone via Bluetooth, the speaker will play ringtones while a call coming.
2. Short press the pause button to answer the call on the speaker, you can talk to each other through the microphone hole, after call ended, it will continue to play music.
3. When the call has been answered: short press to hang up

RESET FUNCTIONALITY

Hold the pause button for 10 seconds to automatically reset the speaker and turn it off .

AUTOMATICALLY TURN OFF FUNCTIONALITY

The speaker will automatically turn off in 10 minutes when Bluetooth is not connected and no music is playing.

正面

TECHNICAL PARAMETERS •Model: YS-W1 • Speaker: Ø52mm 4Ω 5W*1 • Charging time: 1-2 hours • Input: 5.0V  2.0A • Product Weight: 350g • Bluetooth: V5.0 • Built-in rechargeable battery: Li-ion, 3.7V, 800mAh • Playing time: 6-8 hours • Product Size: 90.0*90.0*114.0mm • Range: Up to 10m PACKAGE INCLUDING •1pcs* D5 speaker • 1pcs* Product manual • 1pcs* Type-C USB cable TWS CONNECTION 1: Turn on both speakers 2: Double-press the power button of one of the two speakers. The default is the primary speaker that you operated the Play/Pause-button of this spaker for pairing initially. 3: It can take a few more seconds before speakers connect to each other. Check the indicator lights to distinguish the L/R channel: The blue light on one speaker flashes quickly that should be the left channel(the primary speaker); the blue light on the other speaker is solid blue that should be the right channel. 4: Go into the Bluetooth menu on your smartphone and pair the speakers with your phone by selecting the speaker model number. (It will only display 1 number which is both combined into one) TWS DISCONNECTION Double-press the power button of one of the two speakers. Then you will hear "beep"sound, the TWS have been disconnected.	FAULT AND MAINTENANCE First fault: connection failed. Solution: (1) Please check whether the multifunction indicator light flashes white. Please power on your speakers if the light isn't on. Please charge the speaker if the light is still not on. (2) Please turn off the other Bluetooth devices, if there are many Bluetooth devices surrounding. This may result in search difficulties. (3) Restart wireless speaker on devices for Bluetooth search function. Second problem: The music player appears sound breaks. Solution: (1) View the distance between the player and the speaker has not been exceeded effective Bluetooth connection distance 8-12meters. (2) Ensure there is not any obstacle between the play device and speakers. (3) Check the playback device or whether the speaker is in a low power state. NOTES BEFORE USE This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules: 1. Place the speakers in a stable position avoid fall and cause damage or personal injury. 2. Do not drop, disassemble, open, crush, bend, puncture, burn speaker. 3. Do not close to any heat source (such as radiators, heating equipment, stoves, or other heat-generating equipment) where the use of speakers. 4. Please send professional maintenance staff to repair for any reason damage. 5. Before wiping with a dry cloth to clean the speakers, set the power switch to the off position and unplug the power cord from the power outlet.	6. Health considerations, please adjust the sound to a suitable level. FCC STATEMENT: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation. WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.	FCC Radiation Exposure Statement: The device has evaluated to meet general RF exposure requirement. The device can be used be in portable exposure without restriction. TROUBLESHOOTING The speaker does not turn on ? Recharge your speaker. The speaker does not turn off or does not respond ? Reset your speaker. hold the power button for 10 seconds to automatically reset the speaker and turn it off . There is no sound? Adjust the volume. Make sure that your Bluetooth device is within range. Ensure there is no obstacles in the way that can block/disturb the signal. Check via the device's Bluetooth connection if the speaker is connected with the device. There is poor sound quality? Move the device closer to the speaker or try removing obstacles between them. Cannot connect the device with the speaker? Disconnect other connected devices and then try again. You can force a disconnection by moving out of Bluetooth range (10 m). In order to avoid harming the product performance, please do charge your device each 3 months at least.
---	--	--	--

反面