



KidzAdventure™

2 PK Rechargeable Kids Walkie Talkie

With 2PK Interchangeable Cases





Dear valued customer,

Thank you very much for being a valued Kidz-Adventure customer. At Kidz-Adventure, we are dedicated in providing fun, cute and safe products to our young friends. What is most important for a family trip? Having fun! Isn't it? With our various themes of adorable camping/beaching items, we guarantee our young friends will have more fun and memorable experiences on their exciting trips!

Please visit www.kidz-adventure.com for more products.

Safety and Precautions:

- Chocking hazard, small parts, not for children under 3
- Consult your doctor if you are using any kind of personal medical devices
- To avoid the risk of burns, do not use the device if the antenna is damaged
- Do not use the device near radios to avoid interference
- Position the transmitter and antenna at least 5 cm from your mouth
- The device cannot be used to contact emergency services

Technical specifications:

Channel: 1-22

Sub-ground code: CTCSS 01-38, DCS 39-99

Lithium Battery: 650mA

FRS frequency: 462.55000-467.71250MHz

Range: Up to 3 KM (open field)

Transmission power: 0.23W

Modulation Type: FM

Channel spacing: 12.5KHz



What are included in the package: Please carefully examine all the components included in the package. Contact us at: info@kidz-adventure.com immediately if anything is missing.



Adventure
Walkie Talkie (1)



Best Friends
Walkie Talkie (1)



Sailing Fun
Case (1)



Lovely Panda
Case (1)



USB C charging
cables (2)



Colorful
Lanyards (2)

KidsAdventure™
2 PK Rechargeable Kids Walkie Talkie
with Interchangeable Cases



User manual (1)



Basic Walkie Talkie Operation Guide



- 1. Turn On/Off the walkie talkie:** Press and hold “Menu” key for 3-4s to turn on or turn off the walkie talkie
- 2. Set channel:** While the walkie talkie is turned on, press the “Menu” button once to enter the channel setting mode. The channel number on the LCD will start to flash. Press the up and down key to select a desired communication channel (1-22 channels). Press the PTT key to confirm and exit.



3. Select sub-group code: When sub-group code is selected, the device can reduce the interference from other undesired FRS radio users who are on the same communication channel.

While the walkie talkie is turned on, press the “Menu” button twice to enter the sub-group code setting mode. The sub-group code number on the top right of LCD screen will start to flash. Press the up and down key to select a desired sub-group code (“OF” means no code selected, 01-38 refers to CTCSS codes and 39-99 refers to DCS codes). Press the PTT key to confirm and exit.

4. Activate VOX (Voice Activation) function: While the walkie talkie is turned on, press the “Menu” button 3 times to enter the VOX setting mode. Press the up and down key to select a desired VOX sensitivity level (1-3). “OF” means no VOX activated. Press the PTT key to confirm and exit.

5. Select Calling Tone: While the walkie talkie is turned on, press the “Menu” button 4 times to enter the calling tone selection mode. Press the up and down key to select a desired calling tone (01-10 tones). Press the PTT key to confirm and exit.

6. Set key tone On/Off: While the walkie talkie is turned on, press the “Menu” button 5 times to enter the key tone setting mode. Press the up and down key to set key tone on or off. Press the PTT key to confirm and exit.

7. Set End-Of-Call Tone On/Off: While the walkie talkie is turned on, press the “Menu” button 6 times to enter the End-Of-Call tone setting mode. Press the up and down key to set the End-Of-Call tone on or off. Press the PTT key to confirm and exit.

Talking through the walkie talkies:

Before talking through the walkie talkies, please make sure both walkie talkies are turned on and set at the same channel/sub-group code (if selected)

- VOX OFF mode:** Press and hold the PTT/Talk button on the top left of the walkie talkie to start a conversation; Hold the walkie talkie 2-3 inches away from your mouth and speak directly toward the speaker. Release the PTT/Talk button to end the talk



- **VOX ON mode:** Depending on the sensitivity level selected and the quietness of the environment, speak directly toward the speaker at appropriate distance to start a conversation.

Charging: A rechargeable Lithium battery was pre-installed in your walkie talkie. When the battery signal on the LCD screen shows low or empty, please charge the walkie talkie. Each walkie talkie comes with a USB C charging cable. Plug the small end of the USB C cable in the walkie talkie charging port (top right) and connect the other end of the USB C cable with power source (computer USB port or compatible USB adapter: Output 5V1A).

Volume adjustment: While the walkie talkie is turned on, press the up/down key to adjust the speaker volume. Total 8 levels of volume can be selected.

To Lock/Unlock the keypad: To avoid unexpected changes to your channel setting or other settings, you can lock the keypad. While the keypad is locked, only the “Lock” key and the “PTT/Talk” key will function.

While the walkie talkie is turned on, press and hold the “Lock” key 3-4s to lock the keypad. A key symbol will appear on the screen and you will hear a “beep” sound (if key tone is set on) indicating the keypad is locked.

Press and hold the “Lock” key for 3-4s again to unlock the keypad.

Active Channel scan: If you are not sure which channel your friends are on, you can use the active channel scan function to scan all active channels in your area. While the walkie talkie is turned on, press and hold the “Light” key for 3-4s to activate the channel scan function. When an active signal is detected, the scan will stop, and the walkie talkie will stay on that channel. If no signal is detected, the scan will continue. During scan, press PTT, Menu or Monitor key to stop the scan.



The Monitor function on the walkie talkie: The Monitor mode helps you receive weak signal by disabling the CTCS/DCS code, which means even you and the other party are on the different sub-group codes, you can still receive signal under this mode.

While the walkie talkie is turned on, press the “MON” key to enter the monitor mode.

Flashlight: The walkie talkie is equipped with a bright LED light. Press the Light key to turn on the LED light and press it again to turn it off.

How to put on/take off the silicon walkie talkie case: When kids play with the walkie talkies, they are having lots of fun, and we are doubling it! The 2 additional silicon cases feature a cute panda pattern and a wonderful sailing trip pattern. The cases are made of high-quality silicon material which is extremely stretchable. We have prepared a demo video to show you how to put on and take off the silicon cases. Please go to below webpage and locate the video demo for the instructions regarding the cases.

<https://www.kidz-adventure.com/pages/user-manual>

FCC ID: 2A7MT-DJ02

FCC Statement:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection



against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help.

Transmit no more than the rated duty factor of 50% of the time. To transmit (talk), push the Push-To-Talk (PTT) key. To receive calls, release the PTT key. Transmitting 50% of the time, or less, is important because the product generates measurable RF energy only when transmitting (in terms of measuring for standards compliance).

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tests

For face-up, 25mm was used for test, this equipment should be installed and operated with minimum distance 25mm

This product is in compliance with the CPSC ASTM F963-17, and HR4040 tests



Please do not return this product to stores. If you have any issues or questions regarding,

- **Customer support**
- **Product returns**
- **Product replacement**
- **Refund**

Please contact us at info@kidz-adventure.com and we would be happy to assist you.