

Allway

Magic 10 Product Manual

 


Please make sure to read this manual carefully and keep it properly

1. Package Content



Magic 10*1



Date cable*1



Lanyard*1



Product manual*1

2. Specifications

Model No.: Magic 10	BT Version: V5.3
Driver Unit: 1.25"*1	Frequency Response: 20Hz~20KHz
Output Power(RMS): 2W	Battery: 3.7V/800mAh
Power Input: 5V==1A	S/N Ratio: \geq 70dB
Product Size: W54*D54*H68.5mm	Product Weight: 116g

*The above measurement data is for reference only. Please refer to the actual product for any discrepancies.

3. Operation Guide



Power

·Power on/off.

-1

- Funny Mode:
 - a.Short press to play the selected voice pack.
 - b.Long press for 2 seconds to cycle through the built-in voice packs.
- Normal Mode:
 - a.Short press to decrease the volume of music and built-in voice packs.
 - b.Long press to switch to previous song.

+1 ▶ Play/Pause

: Press and hold until the announcement of a number then followed by the "dong" sound to restore factory settings. This will clear the Bluetooth pairing history, reset the volume to default, and switch to Funny Mode.

Play/Pause

- Short press to pause or play music.
- Long press for 2 seconds to switch mode.

+1

- Funny Mode:
 - a.Short press to play the selected voice pack.
 - b.Long press for 2 seconds to cycle through the built-in voice packs.
- Normal Mode:
 - a.Short press to increase the volume of music and built-in voice packs.
 - b.Long press to switch to next song.

(1) On/Off:

- Long press "①" for 2 seconds to power on/off.

Note: The speaker will automatically turn off after 10 minutes of inactivity without a Bluetooth connection or button presses.

(2) Bluetooth Pairing:



- After powering on, the speaker enters Bluetooth mode. The blue indicator below the power button will flash slowly. Enable Bluetooth on your device, search for "Allway Magic 10," and pair. Once paired, the indicator will turn off, followed by a Bluetooth confirmation beep.

(3) Mode Selection:

- Long press "②" for 2 seconds to switch mode. Switching order: Funny Mode–Game Mode–Normal Mode (Defaults to Funny Mode when first switched on.)
- Funny Mode: Short press to play the built-in voice pack, with a rainbow cycle breathing effect on the button light. Long press to switch between voice packs.
- Game Mode: A button will randomly light up to simulate the gopher effect. Pressing the lit button will produce a gold coin beep.
- Normal Mode: Short press -1/+1 to decrease/increase the volume of the music and the built-in voice packs in Funny Mode. Long press -1/+1 to switch to the previous/next song.

Note: *Music will pause when switching modes.

*After 3 minutes of inactivity, the button light will turn off. Short press any button to wake up.

(4) APP Installation:



1. Support smartphones, Android, and iOS systems.
2. Download method:
 - a. Open the mobile app store and search for "Allway" to download;
 - b. Scan the QR code on the left to download.

(5) Charging Instructions:

- Connect the supplied Type-C charging cable to a compliant power adapter for charging. The charging port indicator will remain red while charging and will turn green when fully charged.

Note: When the battery is low, the power button will flash red and a low-battery tone will sound, indicating the need for charging.

(6) What to do when the speaker is silent?

- Check whether the battery is sufficient.
- Make sure the Bluetooth device is turned on and Bluetooth is connected.
- In Bluetooth mode, if the sound is cut off, move the speaker closer to the Bluetooth device.
- In Bluetooth mode, set the Bluetooth device to an appropriate volume for optimal sound.
- If the Bluetooth connection fails, restart the speaker, and then reconnect the Bluetooth device.
- For further assistance or inquiries, please contact us (400-7882-050).

4.CAUTION

1. Do not place any open flame sources, such as lit candles, on the speaker.
2. Do not cover the ventilation holes with items such as newspapers, tablecloths, or curtains that would prevent ventilation.
3. Do not expose the speaker to prolonged exposure to moisture, continuous rain, or strong shocks.
4. Do not place objects such as vases filled with liquids on the speaker.
5. Do not expose batteries (battery packs or assembled batteries) to sunlight, fire, or other overheating environments.
6. Incorrect battery replacement may cause explosion. Replace only with the same type or an equivalent battery.

7. If debris or liquid enters the speaker, immediately disconnect the power and have it inspected by a qualified technician before use.
8. To reduce the risk of electric shock or other accidents, do not open the back cover. Contact company personnel for repairs.
9. This product does not come with a power adapter. If an adapter is required, use one that is CCC-certified or conforms to relevant standards. The output specification of the adapter should be 5V==1A.

5. FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**WARRANTY CARD
DISTRIBUTOR'S COPY
WARRANTY REGISTRATION CERTIFICATE**

Mr./Mrs/Ms First Name: _____

Last Name: _____

Address: _____

Contact No.: _____

Product Name: _____

Model No: _____

Serial No.: _____

Date Purchased: _____

Invoice No.: _____

Retail Outlet Where Purchased: _____

(Please print the name & address)

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of Allway product within the warranty period from its date of purchase from our Authorized Dealer. The period and conditions of our warranty service are as follow:

1. The warranty covers services by our Allway Authorized Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our Allway Authorized Dealer. (Parts would be replaced when necessary)

A.Parts: _____ 1 year

B. Technical service free _____ 1 year

3. Under the following circumstances, service and parts will be chargeable even within the warranty period:

- A. Failure to present the warranty card and receipt when servicing is required. Full particulars not clearly shown or alterations made against the actual information. For example: Alteration of the date of purchase, serial numbers-altered or removed.
- B. This unit being tampered with, altered in any way by any unauthorized technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occur in transit by or from the customer.
- C. The defect is caused by the attack of household pests, fire, lighting, natural disasters, pollution, abnormal voltage or the usage of generator.

SHENZHEN TKT INNOVATIONS CO., LIMITED

Add : Fenda Hi-Tech Park, Zhoushi Road, Shiyan Town, Baoan District, Shenzhen City, Guangdong, China
<https://allwaylife.com/>