

 
1. If there has no WIFI, firstly open 4G network of iPhone, then open WIFI hot spot in the "Settings" interface of the phone.
2. Collect iPhone's hot spot WIFI for the projector.
3. Open "Eshare".
4. Open "Airplay" / "Screen Mirror".
5. Find the projector and click.

1. Ensure the Phone and Projector are under the same WIFI.
2. Open video software of the mobile phone and finds the TV push icon in the four corners (it's usually on the top right or on the bottom right) (Each APPs have different push icon design).

* Note: Not all video software have function of push.

3. Click this icon to push videos to the projector. At the same time, we can have other operations on the phone, it will have no conflict.

Shenzhen Wanbo Technology Co., Ltd
www.szwambo.cn



The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).

Note:
If you want to return to the previous layer, please press the return key;
If you want to return to the main interface, please press the main screen key.

3. Clean the exterior with an electric vacuum cleaner, please install brush head adapter on the vacuum cleaner first. Kindly take note: don't use vacuum cleaner with no connector or brush.

 The number in the logo represents the normal environmental service life of the product. (Battery Excluded)

Certificate
QC: 05

Thank you for purchasing our products. For your safety and benefit, please read this product manual carefully before using. If you fail to follow the product instructions or precautions, and cause any personal injury, property or other losses, the company will not bear any responsibility.

- Don't open the shell to prevent electric shock. Please turn to qualified professional maintenance personnel for the maintenance as there are no parts in the machine that users can repair themselves.
- Don't expose the machine to rain or moisture so as to prevent misfire or electric shock.
- The product is applicable to be used under a temperature of 0-35°C for a safe side.

Diagram illustrating the correct and incorrect connection of the power cord to the power port.

Correct: The power cord is inserted fully into the power port.

Incorrect: The power cord is inserted partially, with the tip of the plug visible.

*Please check whether the connection is correct according to the mark on the power cord.

Focus Length: When the picture image is blurred (indicated as the right picture), adjust the lens focus through "C" "D" on the remote control to achieve the best definition

1. Ensure the Phone and Projector are under the same WIFI (For Android Only).
2. Open"Eshare"of the projector.
3. Choose the device with the same name with Eshare to complete mirror.

Note: Specific operation contents are subject to actual situation due to irregular update of the product system.