

英文


Remote Control Pairing

Turn on the remote control and place it within 10cm of the device.

1. Press and hold the buttons “*” and “*” at the same time.

2. Release the buttons after the indicated light flashes.

3. The pairing page appears and prompts “Pairing successful”. The remote control is paired successfully.

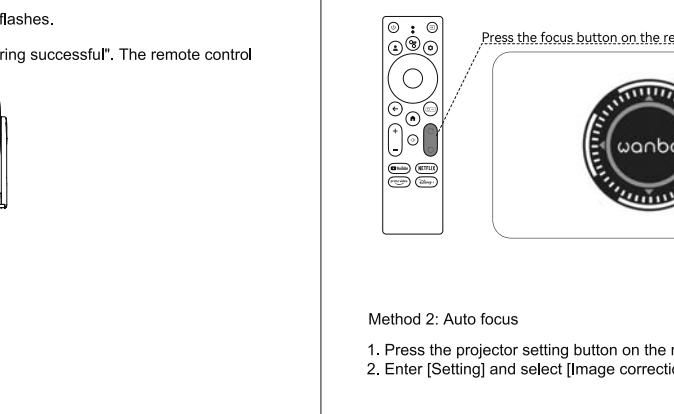

If pairing still fails, you need to disconnect the device from the power source, then restart it following the above steps again.


Voice Control

Voice control: Press and hold the Remote Control. Press and hold the language button “*” of remote control, move closer to the remote control and give a voice command, then release the voice button to complete voice control.


Tip: The interface will be updated from time to time, please refer to the actual display for the interface style.

Focus Setting

Method 1: Manual focus
Press the Focus button on the remote control and use the Up and Down focus buttons to adjust the focus.

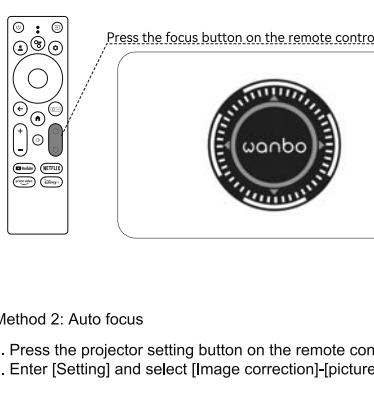


Method 2: Auto focus
1. Press the projector setting button on the remote control
2. Enter [Setting] and select [Image correction]-[Focus/Keystone] to focus

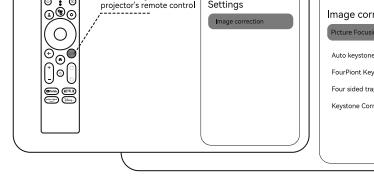


Calibration Settings

Method 1: Manually trigger automatic correction
Moving the projector can trigger real-time autofocus and keystone correction to complete image calibration in one step.

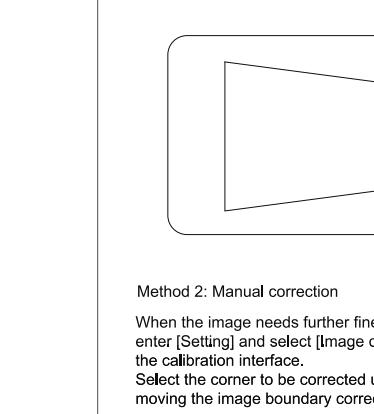

Method 2: Manual correction
When the image needs further fine-tuning, enter [Setting] and select [Image correction]-[Four-Point Keystone] to enter the calibration interface. Select the image to be corrected using the OK button on the remote controller, and moving the image boundary correction position using the arrow keys.

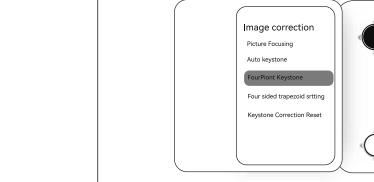

Wireless Screen Casting

Method 1: Chromecast
Cast from the device Phone / Pad / PC to “Google TV / Android TV”. Connect the device Phone / Pad / PC and “Google TV / Android TV” to the same WiFi. Open the app you want to cast. In the APP, click the video you want to cast and click the “Cast” icon .

Method 2: Android Screen Cast

a. Connect your Android device and “Google TV / Android TV” to the same WiFi.
b. Set up the screen casting function on the Android device to open the Control Center (Quick Settings).
c. Press the “Cast” icon  on the device Phone / Pad / PC and select “Screen cast”.

Method 3: Airplay

a. Make sure the iOS device and the “Google TV / Android TV” are connected to the same WiFi.
b. Search the keyword “Airplay” or “Cast” in the Google Play Store and download the application.
c. Open the downloaded APP on the “Google TV / Android TV” device and follow the steps to connect the device.
d. Open the mobile phone control center, click “Screen Mirroring” to search and connect the device. Find the projection menu corresponding to the APP, and click Connect to complete the screen mirroring.

Tip: The interface will be updated from time to time, please refer to the actual display for the interface style.

Wired Connection for Screen Casting

1. Connect the projector and the input device using an HDMI cable.
2. Press the  button on the Remote Control and select the HDMI channel to complete the connection display.

Cleaning Method

Please make sure the power plug is unplugged before cleaning. Do not use pesticides or other volatile chemicals on the projector or lens. Do not let rubber or vinyl products contacts the projector for a long time, which will damage the coating and make it peeling off.

Poisonous and Harmful Substance, Element Name and Content

Part name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hazardous chromate (Cr(VI))	Polymerized benzene (PBP)	Brass	Others
Shell	○	○	○	○	○	○	○
Optical Machine	○	○	○	○	○	○	○
Circuit Board	○	○	○	○	○	○	○
Fan	○	○	○	○	○	○	○
Other Wires	×	○	○	○	○	○	○
Remote Control	○	○	○	○	○	○	○
Power Supply	○	○	○	○	○	○	○

After-sales Service Policy:

Products enjoy 12 months of warranty service from the date of purchase in the official store. If the purchased product has defects, please contact the corresponding purchase store for processing.

Note: The warranty policy only applies to products purchased in the official store (projectors and other accessories). Products are not subject to this policy, and the purchase of products in other stores shall prevail.

Users who need after-sales service or exercise warranty rights, please exercise the purchase store's warranty rights.

Due to different warranty policies of each dealer, users who do not purchase in the official store should contact the corresponding dealer for warranty service.

If products are damaged by the user, including but not limited to, burn, heat or food spills, liquid damage, damage caused by the user's own negligence, damage caused by extreme temperatures or other product defects caused by human behavior. And the warranty will not be applicable.

The product under warranty does not cover the appearance damage to peripheral devices or other gifts in the box, product outer surface coating and external parts, including but not limited to the appearance damage to the projector, the appearance damage to the housing, and product deterioration caused by normal wear and tear, including but not limited to the appearance damage to the projector.

Damage caused by reliability or compatibility issues when using unauthorized repairs or disassembly, modification and use of third-party parts.

Product failure caused by any software program (whether provided with the product or subsequently installed).

Invisible damage to the machine caused by downloading firmware updates from download sites.

Product damage caused by disasters such as fire, floods, local power problems or other forms of force majeure.

Product's warranty period has expired.

wanbo

Wanbo Projector

Instruction Manual

Before using this projector, please read this Instruction Manual carefully.

Thank you for purchasing our products. For your safety and benefit, please read the Instruction Manual carefully before using. If you fail to follow the Instruction Manual or precautions, and cause any personal injury, property or other losses, the company will not bear any responsibility.

Important Safety Precautions

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Important Safety Precautions


Don't install in places with poor ventilation
Don't install in places that are hot and humid
Don't block the vent (Input or Output)
Don't install in dusty and smoky areas

Basic Parameters

Product Name	Wanbo Projector	Display Principle	LCD
Light Source	LED	Horn	6W*2
Operation Mode	Remote Control	Working Environment	5~40°C
Output Port	Headphone Audio Output	Input Port	HDMI/USB
Net Weight	2.8kg	Machine Size	254*168*227mm
Power Supply	AC 100~240V 50/60Hz 2.5A(MAX)		
Accessory	User Manual / Remote Control / Power Cord		

*The poster is used below 2000m


List of Items

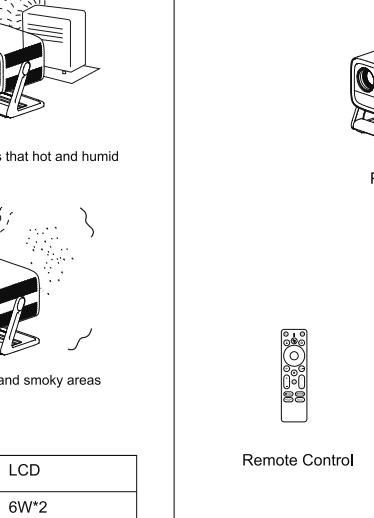


Projection Distance Reference

Projection size (inch)	40	70	100	130
Screen length* width (cm)	88*50	158*87	221*125	288*162
Lens - screen (m)	1.2	2.1	3.0	3.9


Recommended size

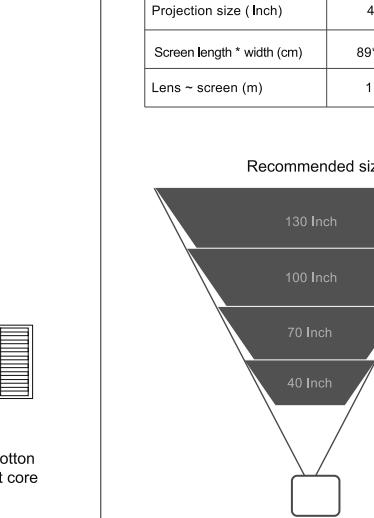


Introduction to Projector Appearance

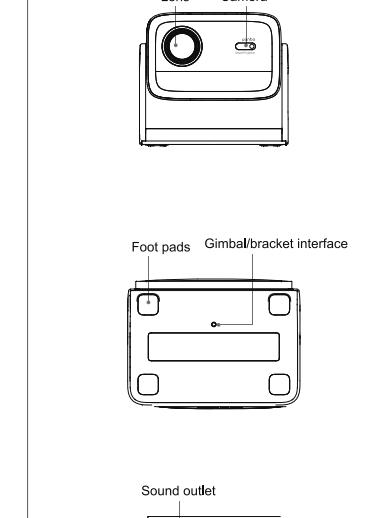

External Device Connection

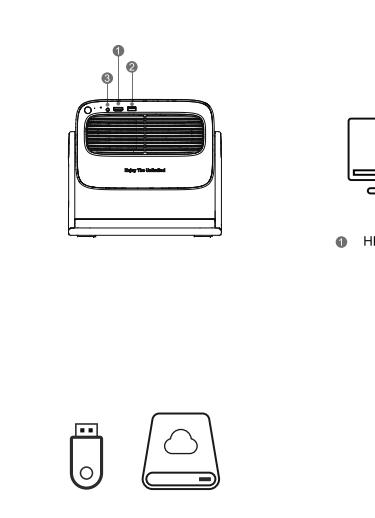


Remote Control

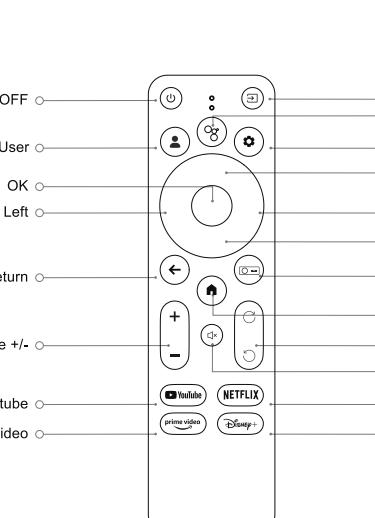

Facebook Twitter Instagram

Shenzhen Wanbo Technology Co., Ltd. www.szwanbo.cn

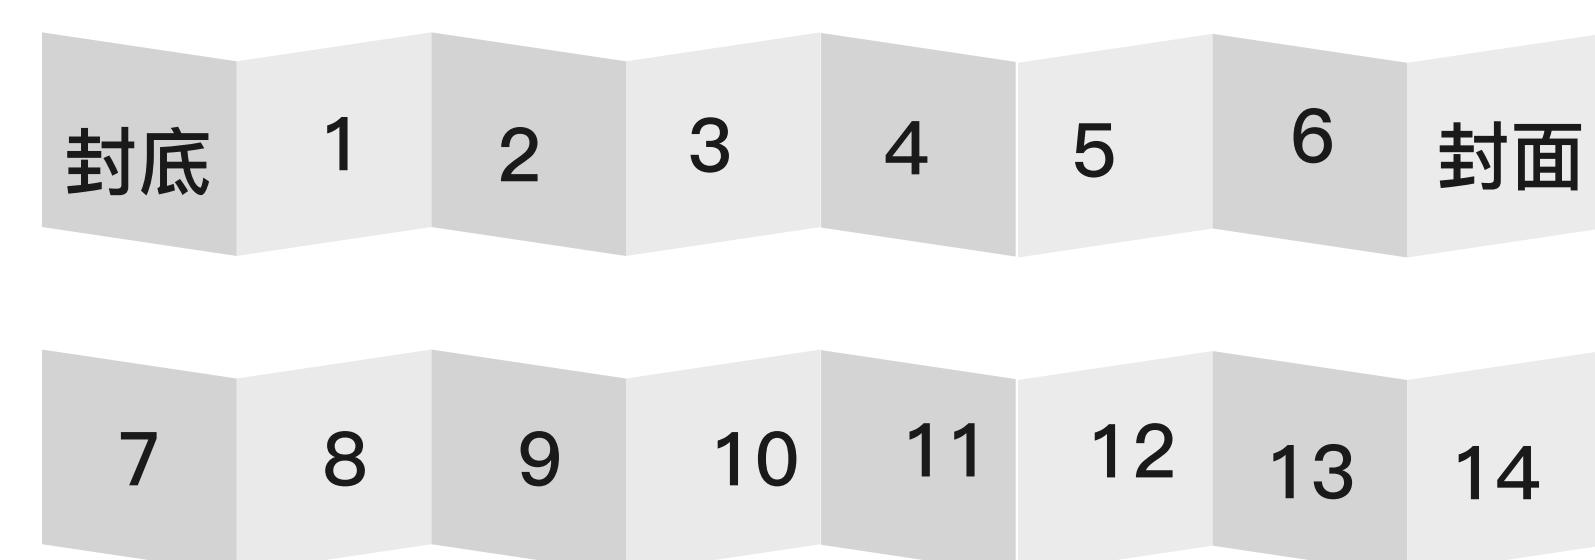

图纸号	S1(1+1)-SMS01-003	类型	S1(1+1) 英文说明书
颜色	黑白印刷	尺寸	折前尺寸:810*120mm 折后尺寸:90*120mm
材质工艺	128g铜版纸 白色 ; 9页风琴折双面		
备注	修改喇叭瓦数 增加海拔2000m以下使用备注		