


USER MANUAL

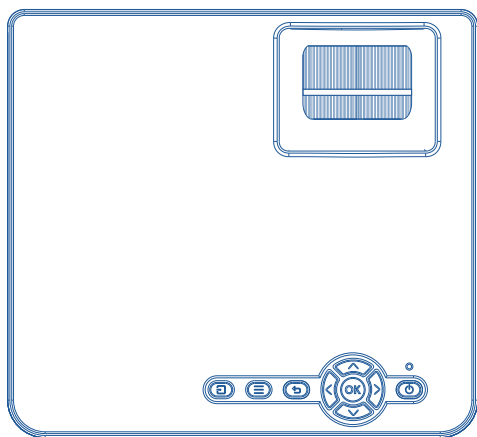

Power Your Life

✉ support@dbpowershop.com

☎ 1-855-888-5533

(English) CONTENTS

NOTICE	02
ACCESSORY LIST	03
SAFETY PRECAUTIONS	04
REMOTE CONTROL	05
PROJECTOR OVERVIEW	06
OPTICAL ADJUSTMENTS	11
CONNECTIONS	12
MENU SETTINGS	18
SCREEN MIRRORING	20
PROJECTOR INSTALLATION	26
TECHNICAL SPECIFICATIONS	27

Notice

1. Not recommended for PPT, Excel, Word presentations.
2. Change your PC/laptop screen resolution to 1920*1080 for the best clarity.
3. Please note that it is suitable for use only in a totally dark environment.
4. Dolby Audio is NOT supported.
5. Projector adopts Miracast co-screen protocol, if your phone does not support Miracast, you cannot mirror the phone with the projector, such as Google Pixel/Motorola mobile phone.
6. Due to copyright issues, the projector can not stream Netflix or Amazon Prime Video thru your phone. Please use a TV stick or Roku to watch Netflix or Disney.
7. When this machine uses USB, it supports up to 64G storage devices in FAT32 format, and mobile hard drives support 2T devices

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help important announcement Important .
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Statement The distance between user and products should be no less than 20cm.

Accessory list

1 x AV Signal Cable

1 x Remote Control (battery not included)

1 x HDMI Cable


1 x Power Cable

1 x Adjustable Screw

Safety Precautions

1. Please read the user manual carefully before using the projector.
2. Only use the power cord supplied with this product with an electrical socket that is earthed properly.
3. Please use the same power voltage as marked on the projector.
4. Please do not disassemble the projector by yourself, otherwise it will void your warranty.
5. Please do not look into the lens directly while the projector is turned on, it may cause damage to your eyes.
6. DO NOT block the air vents during the use.
7. Please keep the projector away from water or any other liquid as it is not waterproof.
8. Please do not put the projector in wet or moist conditions to prevent electric shock.
9. Please switch off and unplug the appliance when it is not in use for a long time.
10. Please use the original packaging foam or other anti-shock material when relocating the projector.
11. Please contact the DBPOWER customer support team if you encounter any problem with the projector.
12. This mini projector is covered by the DBPOWER 12-month warranty.
13. Please contact us if you want to know more about the warranty. (The frame, user manual, and packaging are not covered by the warranty)

REMOTE CONTROL

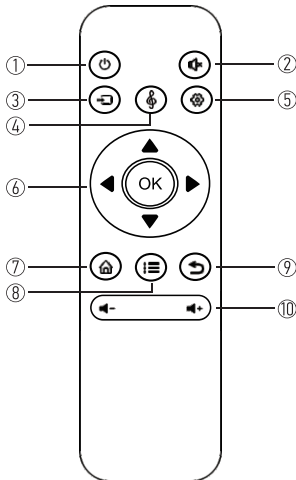

1. Power On/Off
2. Mute
3. Source
4. SoundBar Function
5. Settings
6. Direction Buttons
7. Home
8. Menu
9. Return
10. Volume +/-

Caution

Do not submerge the remote control in water.





Do not expose the remote control to the outdoors, liquid, moisture, excessive heat, or fire.

Do not use old and new batteries together in the remote control.

Please take the batteries out if not using the remote control for a long time to avoid battery leakage.


The remote control must be held perpendicular to the projector's IR remote sensor to function correctly.

PROJECTOR OVERVIEW

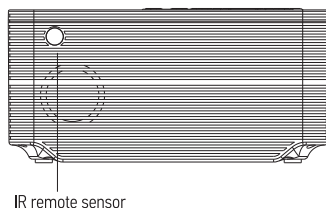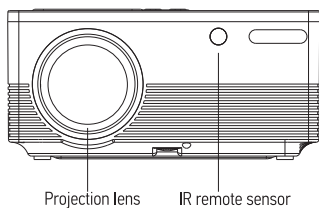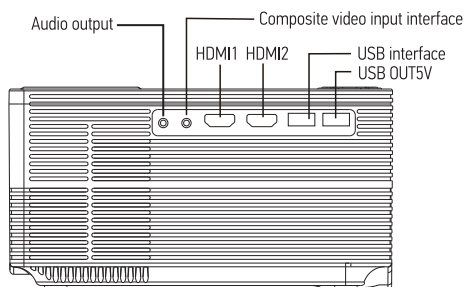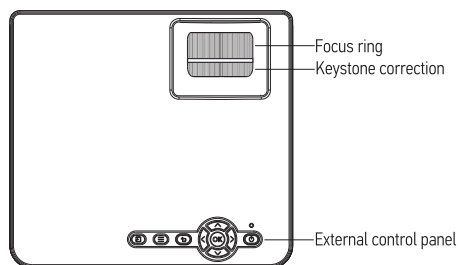


1. Connecting the projector to power

a. Plug the power cord to the projector.

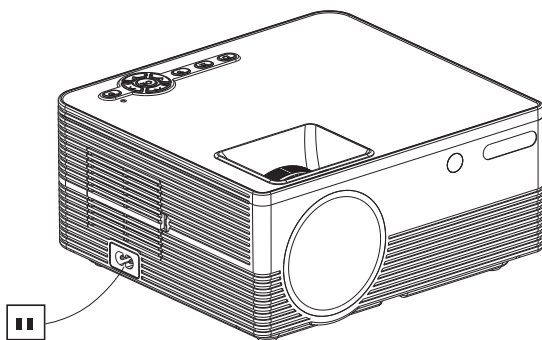


b. The power indicator on the projector lights up after the power cord has been connected.

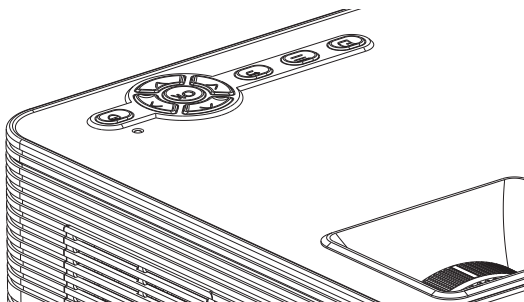


2. Power ON/OFF

Press the "⏻" button on the projector or on the remote control to power on.

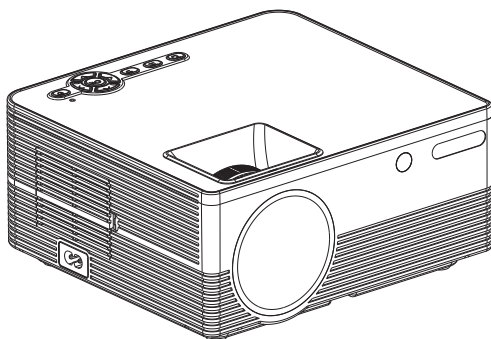

Projector

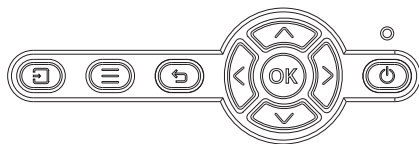


External control panel



Remote Control

3.Multimedia boot screen


The multimedia screen will be displayed in 10-20 seconds after you press the power button.

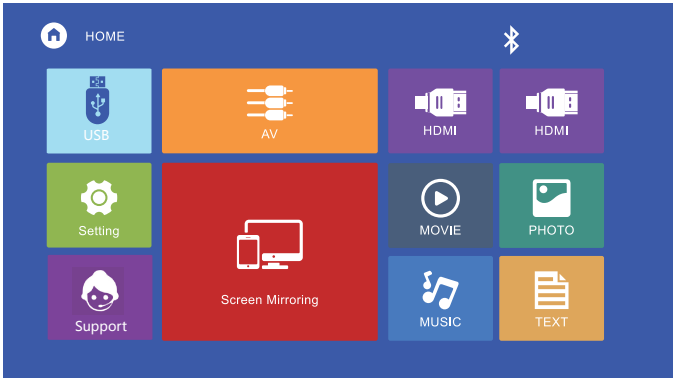

4. Focus & keystone correction


- a. If the image is displayed as a trapezoid shape, turn the keystone correction knob on the upper surface of the projector until the projected image becomes rectangular to correct the keystone issue.

- b. Make sure the projector is horizontal to the projector screen and rotate the focus ring to sharpen the projected image.

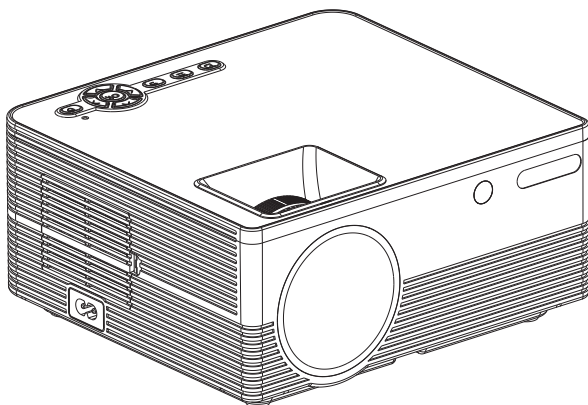

Optical adjustments


The projector corrects the image deformation by the optical keystone correction. See the example below:

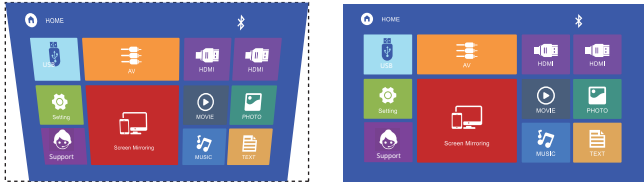

However, this projector does not have a horizontal keystone correction function. The projector must be placed horizontally to the projection screen. If you encounter the problem as shown above, it is probably because the projector has not been placed horizontally to the projection screen, or the projection screen is not vertically positioned.


Solution: Adjust the projector's position so that it is horizontal to the projection screen

Connections

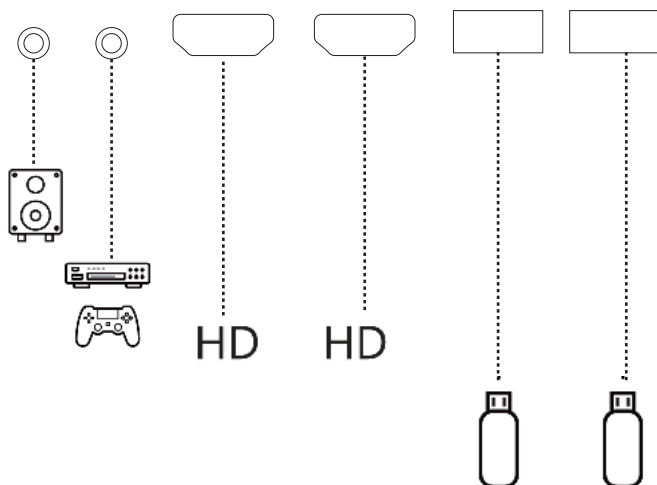


1. Playing media files from a USB Drive

a. Insert a USB storage device into a USB port.

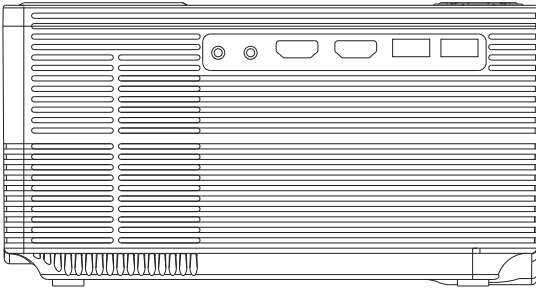

b. Pick USB at the Signal Sources menu.

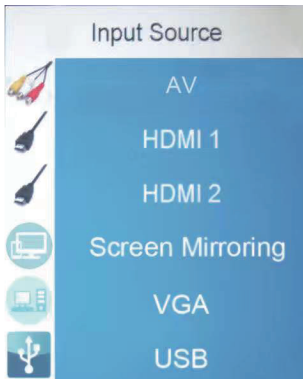


Supported multimedia file formats and types

Multimedia	Audio file	MP3/WMA/OGG/AAC/MA4/FLAC/APE/WAV
	Picture file	JPEG/BMP/PNG
	Video file	MPEG1, MPEG2, FLV, MPEG4, RM, AVI /RMVB, MOV, MKV, DIVX, FVOB M-JPEG (only unsported 640*480)
	Text file	TXT

c. Choose the content you need to display:

Video/ music/ photo/ text.

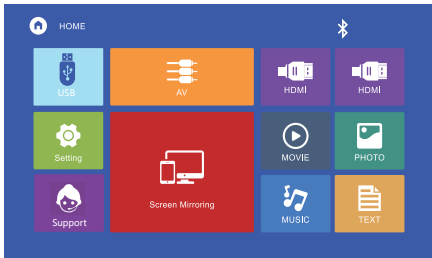

d. Choose the file you want to play. Press the "OK" key to play or to pause.

