




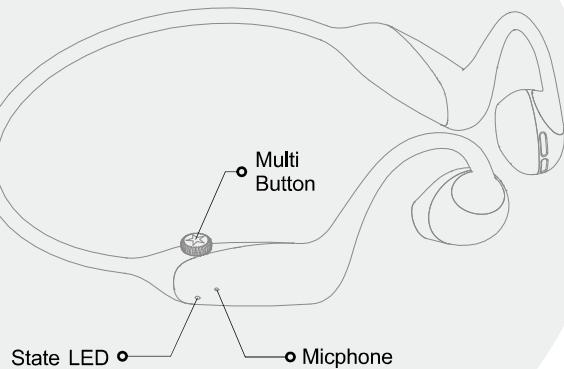


Front view

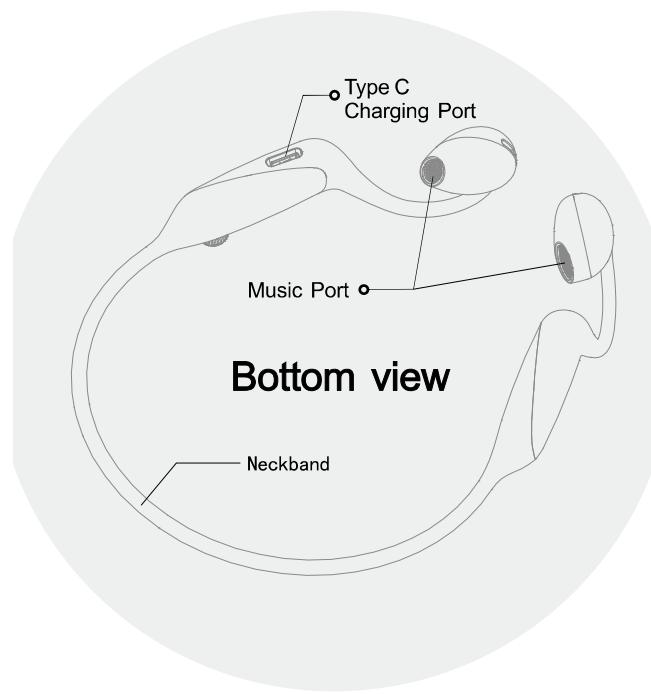

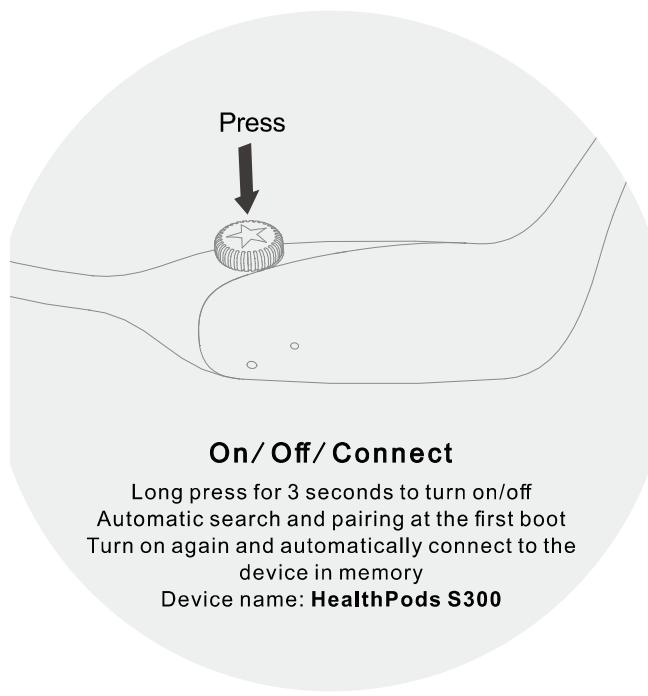




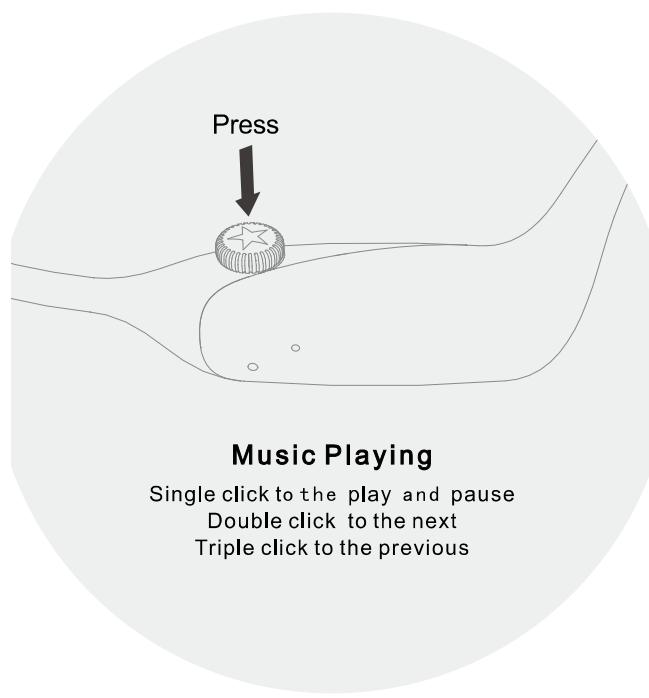


Music Playing

Single click to the play and pause
Double click to the next
Triple click to the previous

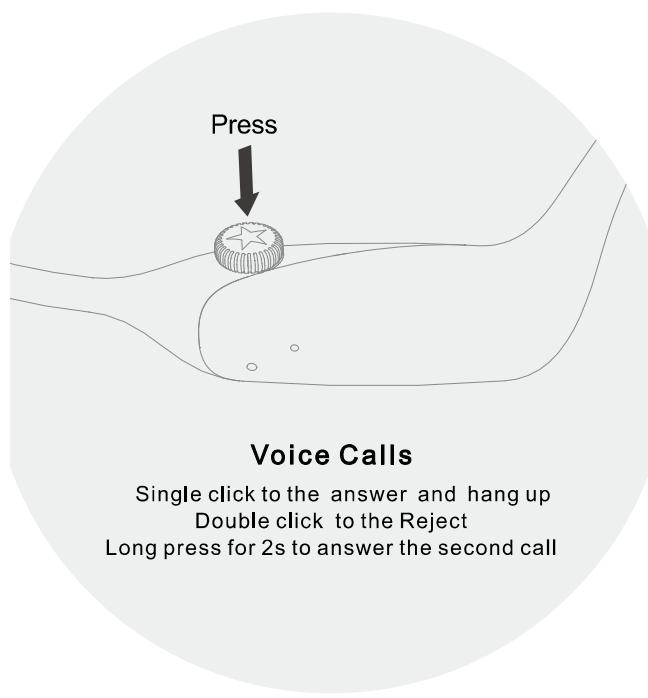

Voice Calls


Single click to the answer and hang up
Double click to the Reject
Long press for 2s to answer the second call

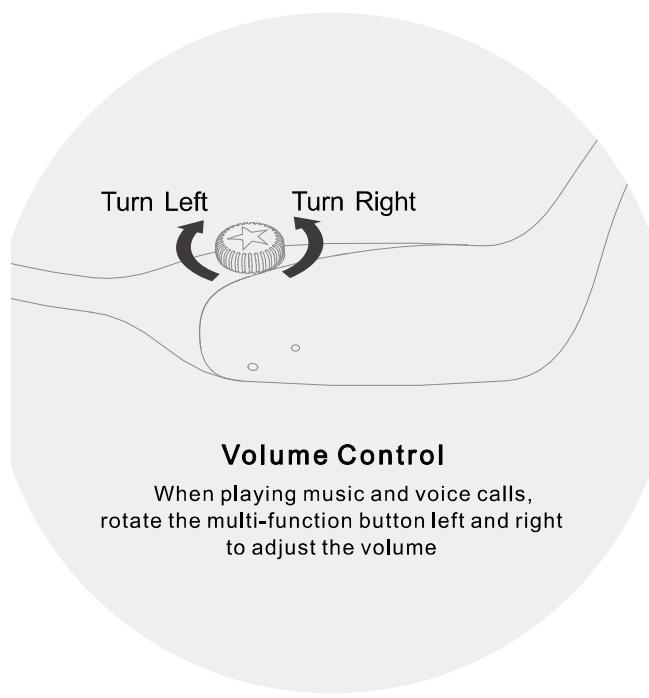

Volume Control


When playing music and voice calls,
rotate the multi-function button left and right
to adjust the volume




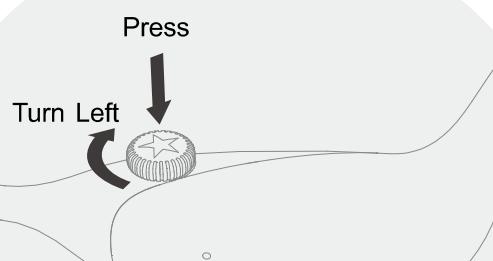

Disconnect


Press the "multi-function button" and turn left to disconnect the current connection and restart the search and pairing

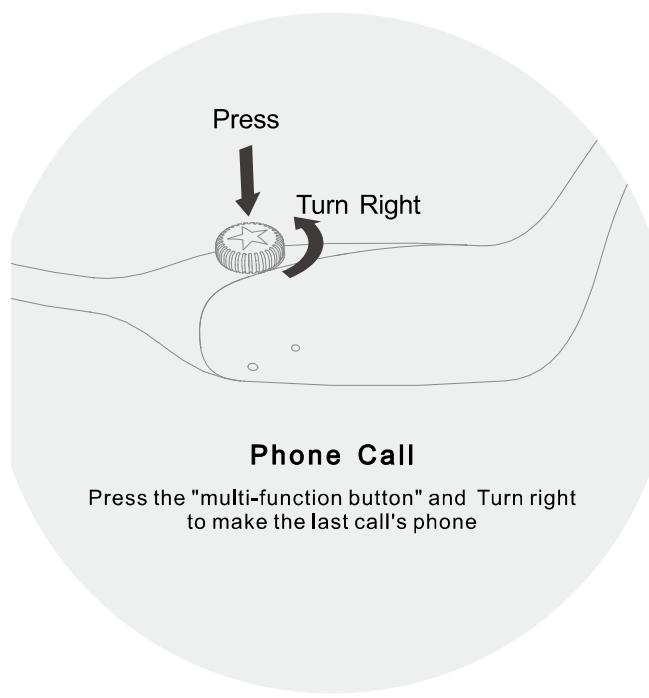

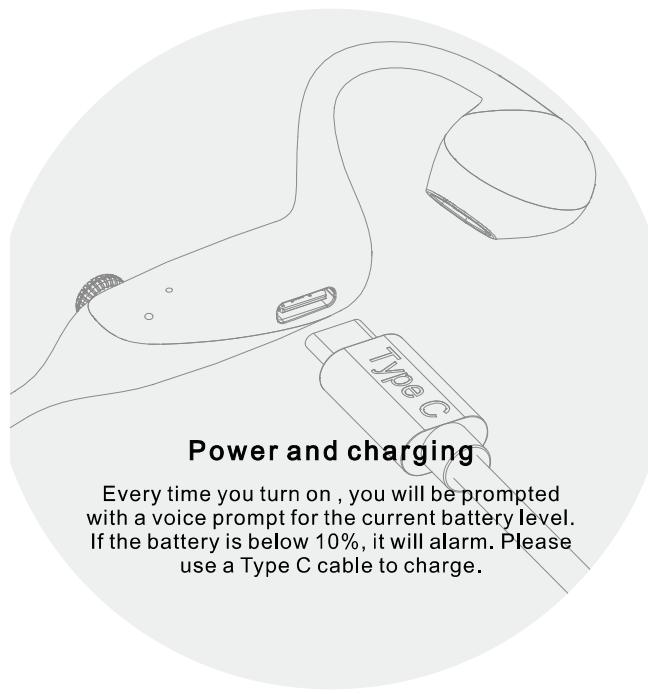

Power and charging


Every time you turn on , you will be prompted with a voice prompt for the current battery level. If the battery is below 10%, it will alarm. Please use a Type C cable to charge.

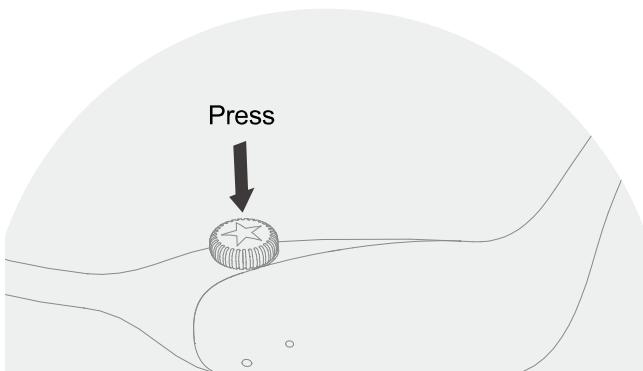

Press

Reset and Reboot

When booting press and hold for 6 seconds to reset the device and clear all memories, press and hold for 10 seconds in any state to restart the device

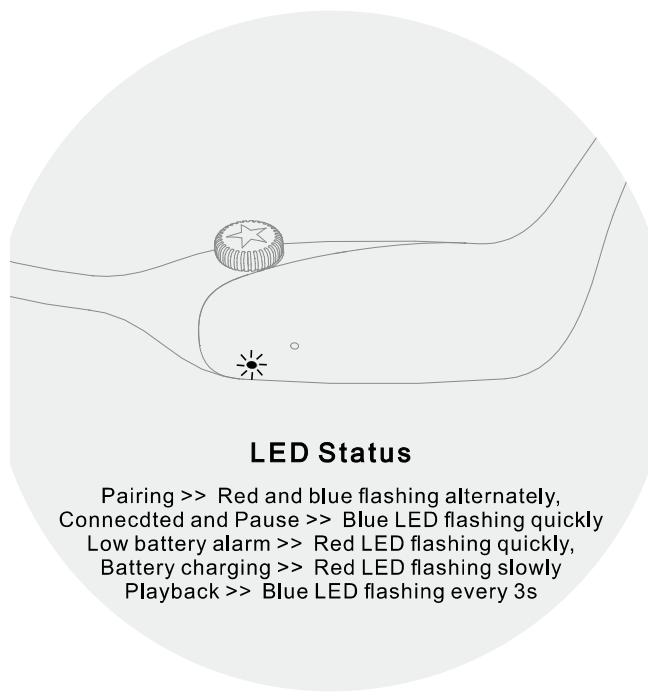

LED Status

Pairing >> Red and blue flashing alternately,
Connected and Pause >> Blue LED flashing quickly
Low battery alarm >> Red LED flashing quickly,
Battery charging >> Red LED flashing slowly
Playback >> Blue LED flashing every 3s



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.