 


Zoopabaus Oblong

Item Locator Quick Start Guide

Getting Started	01	Add Your Item Locator	02	Locate Your Item	03	Find Item When Out of Range	04	When Your Item is Lost	05
1. Power On / Off:		1. Start the App		1. Find Item Locator when it is Nearby		1. Enabling "Notify When Left Behind"		1. Enabling "Lost Mode"	
<ul style="list-style-type: none"> Press your Item Locator's function button once to turn on - it should beep once indicating it is powered on To power off, hold the same button for at least 3 seconds. You will hear 2 beeps indicating your Item Locator is powered off 		<ul style="list-style-type: none"> Open Find My app on your supported iPhone or iPad Allow notifications from the app 		<ul style="list-style-type: none"> Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch Tap on your Item Locator from the list Tap "Play Sound" to make your Item Locator beep Tap "Stop Sound" to stop the beeps once you find your item 		<ul style="list-style-type: none"> Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch Tap on your Item Locator from the list Under "Notifications", enable the "Notify When Left Behind" toggle You will receive a notification when you leave your Item Locator behind and it's no longer in range of your device 		<ul style="list-style-type: none"> Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch Tap on your Item Locator from the list Under "Lost Mode", tap "Enable" A screen detailing Lost Mode will pop up, tap "Continue" Enter your phone number or email address and tap "Next" You may enter a message that will be shared with the person that finds your item Tap "Activate" to enable "Lost Mode" Note: When "Lost Mode" is enabled, "Notify When Found" is automatically enabled Note: When "Lost Mode" is enabled, your Item Locator is locked and cannot be paired to a new device 	
2. Check For Updates:		2. Connect your Item Locator		2. Find Item Locator's Last Known Location		2. Enabling "Notify When Found"			
<ul style="list-style-type: none"> To use the Apple Find My app or the Find Items app on Apple Watch to locate your Item Locator, the latest version of iOS, iPadOS, watchOS or macOS is recommended 		<ul style="list-style-type: none"> Power on your Item Locator Tap "i" then "Add Other Item" Once your Item Locator is located, tap "Connect" Choose a recognizable name and emoji for your Item Locator and tap "Continue" Find My will ask for confirmation to add your Item Locator to your Apple ID - tap "Continue" Tap "Finish" and your Item Locator will be set up and ready to be connected to whatever item you wish to locate, e.g., your keys 		<ul style="list-style-type: none"> Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch Tap on your Item Locator from the list Your Item Locator's last known location will appear on the map To navigate to that last known location, tap "Directions" to open the Maps app 		<ul style="list-style-type: none"> Under "Notifications", enable the "Notify When Found" toggle When your Item Locator is seen by another Find My enabled device, you will receive a notification of its updated location Note: "Notify When Found" can only be activated when your Item Locator is out of range 			

I'm back cover.

Turn to continue

Resetting Your Item Locator 06

1. Remove the Item Locator from Find My™ app

- Open Find My app and select the "Items" tab
- Tap on your Item Locator from the list
- Please ensure "Lost Mode" is disabled
- Scroll to the bottom of the screen and tap "Remove Item"
- A summary will open, tap "Remove" to confirm

2. Factory Reset Your Item Locator:

- After successfully removing the Item Locator from Find My app, press the Item Locator's function button four times rapidly, you will hear a beep each time you press it and then hold it a fifth time until you hear a ringing chime
- The Item Locator is now reset and ready to be paired to a new device

And more 07

1. Replace the Battery:

- Use your fingernails at the small gap on the side of your Item Locator to carefully open the case
- Replace the battery with a new CR2032 battery placing it positive side up (text facing up)
- Carefully align the top hole on both sides to close

2. Unwanted Tracking Detection

- If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways: (1) If you have an iPhone, iPad, or iPod touch, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later. (2) If you don't have an iOS device or smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved. These features were created specifically to discourage people from trying to track you without your knowledge.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes not expressly approved by the party responsible for compliance could void the user's authority to operate this device. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. Federal Communication Commission (FCC) Radiation Exposure Statement Power is so low that no RF exposure calculation is needed.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards. © Apple, Apple Watch, watchOS, iPad, iPadOS, iPod touch, Mac, and macOS are trademarks of Apple Inc., registered in the U.S. and other countries. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

 support@zoopabaus.com