

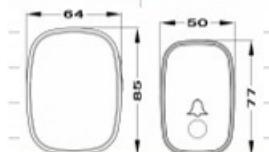


Doorbell Manual

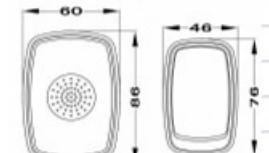

Using our product, please install and use according to the manual.

Transmitter

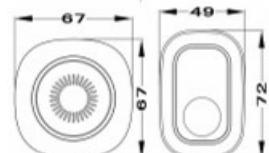

Receiver



Parameters:

	Receiver	Transmitter
Power Supply	85V~260V	DC 12V23A
Work Temperature	-20°C~55°C	-20°C~55°C
Power Consumption	0.25W (working)	<20mA (working)
Waterproof Level	-	IP44
Volume	5 Level	-
Work Frequency	433.92MHz	

Instructions:

Transmitter Button: Press the transmitter button, the receiver indicator will flash and ring.

Music choice: Short-press to change music, and the default music is Dingdong when receiver turn on.

Volume control: Short-press to change volume level.

Signal Match:

How to match:

- Plug receiver into a power outlet, the indicator will flash 5S.
- When indicator is flashing, press transmitter button, the 2 parts will be matched.
- Repeat the steps, if you need more receivers or transmitters.

Note: Match the parts while indicator is flashing.

How to cancel match:

Press the receiver music button about 10 seconds to cancel the current match and re-match with new/more transmitters as your

Note: signal match has been completed by manufacture, no further actions required.

Transmitter Installation:

Option 1 - Adhesive patch mounting way:



Option 2 - Fixation by screw:



disassemble transmitter



take off housing



screw on the wall



Check function

Attention:

1. Test transmitter at installation position before fix, check the receiver can work properly or not.
2. Wireless signal transmission distance is affected by metal, walls, concrete, obstacles, etc, avoid installing the transmitter on a metal door or frame (signal only can reach 10-80m if need to through metal doors, concrete walls, etc).
3. Keep the receiver away from magnetic field interference sources such as televisions, induction cookers, speakers, etc.

- . Please don't disassemble the receiver to avoid safety problems.
- . Please avoid prolonged exposure under the sunlight, it will cause product life shorten.
- . When the transmission signal becomes weak, please replace the battery.

Packing List:

Transmitter/Receiver/Battery/Manual/Tape/Screw

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment