


# 858mobile karaoke treasure Use guide


## Directory

1. Product introduction	01
2. Product interface description	02
3. Directions for use	03
4. Routine status and treatment	04
5. Charging instructions	05
6. Product technical parameters	06
7. After-sales service description	07

## 01. Structure diagram

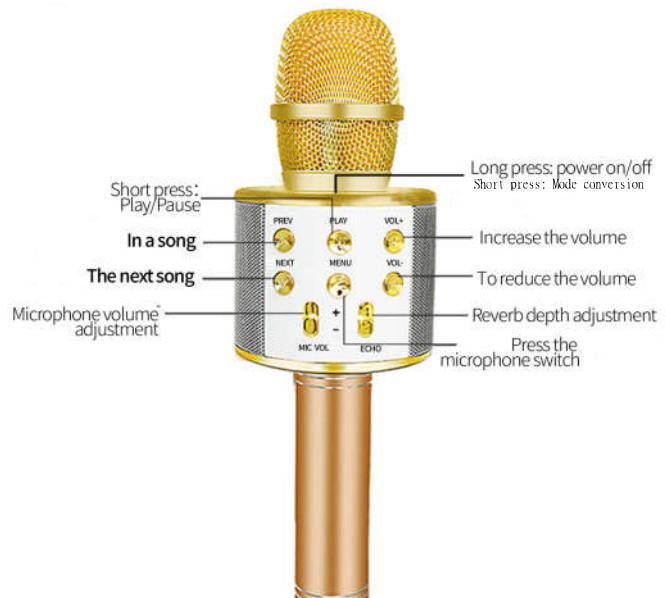

## 02. Product interface description

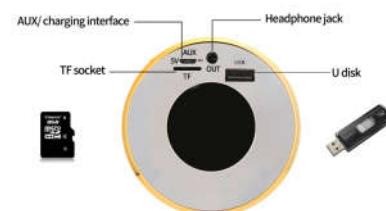

## 03. Instructions for use Bluetooth wireless karaoke

1. Long press the power button to turn it on, and the blue light is on (normal)
2. Teeth connection: turn on the bluetooth scan of the mobile phone, search to858, and then pair the connection.  
After the connection, you can hear the prompt sound that the phone's karaoke is issued and the teeth have been connected  
(Note: Please enter 0000 if password is required in the pairing process)
3. Adjust the volume of playing songs, and adjust the MIC volume and reverb to match. In position, start karaoke  
Note: After connecting with the mobile phone once, 858K Gobo has memory function, after turning on the machine Can automatically connect the last connected mobile phone, if you need to disconnect, you can through Disconnect the Bluetooth setting of the mobile phone.  
If you only want to listen to music, please set it Turn the microphone to minimum volume

## 04. Routine conditions and treatment

The fault phenomenon	The cause of the problem	Elimination method
The charging indicator is off	The battery is low or the charging cable is not properly connected	Charging check connector or charging cable
The microphone is dead	Whether the device is turned on or the audio volume is not turned on	Turn on or adjust the accompaniment volume
The microphone has no reverberation effect	The reverb switch is not properly set	Adjust reverb volume to appropriate position
There is a cacophony of singing	Environmental noise, cell phone signal interference, karaoke software Settings problems	Use it in a quiet place, widen the distance from the phone, and adjust the sound of karaoke software
The tone is broken during bluetooth playback	The bluetooth distance is too far, and the mobile phone and microphone are obstructed	Stay close to the phone and avoid obstacles
Bluetooth sound is small or silent	Turn down the volume of your phone, or the volume of your source music files	Turn up the volume of mobile media, download loud music, and adjust the volume of music to the right position
Bluetooth failed to connect	The Bluetooth distance is too far and there are obstacles. Another mobile phone has been connected	Close to the phone, avoid obstacles, disconnect the connected phone
Bluetooth playback music distortion	The volume is too high and the battery is low	Turn down the volume of media on your phone and charge the battery
Bluetooth failed to connect, iPhone singing bar and other software	Apple IOS does not support Bluetooth output	The proposal uses the whole nation K song, ing the software such as try
Duets don't pair	Whether a Bluetooth device is connected	Turn off the device's Bluetooth and pair it up

## 05. Charging instructions

- 1, when the battery voltage is too low, the product will automatically shut down
2. Use the USB charging cable of the accessory., connect the USB port of the standard phone charger to charge At this time, the red light below the show is charging
3. Normal charging 3-8 hours, charging finished, the red light automatically off
4. Normal continuous use time :2.5-5 hours

## 06. Product technical parameters

pick-up: capacitor type  
 Output power :3~5W  
 Frequency range: 100HZ-10khz  
 Maximum loud pressure level :>90dB1 KHZ THD<1%  
 Reverb mode: Echo sound reverberation  
 The power supply mode: Built-in polymer lithium battery  
 Battery capacity :800 mah  
 Charging power supply :DC5V

## 07. After-sales service description

Dear users, thank you very much for using our products, in order to ensure In your interest, the distributor and the company shall be responsible for the repair and replacement of the products

Return (hereinafter referred to as: Sanbao) Responsibilities and obligations, please read the following items:

"Product warranty card" is our company to provide free after-sales service during the warranty period of its products

Necessary proof of service:

2. According to the principle of "Who sells who is responsible for three guarantees", if the product has quality problems, the"

Product warranty card and dealer contact, by the dealer to provide services to customers, I public

The company will provide service support to dealers;

3. The following situations do not enjoy the three-guarantee service:

(1) Exceeding the period of three guarantees

(2) Damage caused by failure to use, maintain or keep the product in accordance with the instructions

(3) damage not caused by disassembly by the repairman who undertakes three packs

(4) No Product Warranty Card

(5) The content on the Product Warranty Card is inconsistent with the product physical identification or altered

(6) Damage caused by force majeure

(7) artificially broken or damaged

4. The company reserves the right of interpretation of the above matters

## Product warranty card

Product Model:

Purchase Date:

Agent:

Invoice Date:

Customer name:

Zip code:



MADE IN CHINA

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.