


尺寸: 100*70mm

Instruction

Please kindly read the instruction carefully at the first time and keep the user manual for future reference.

Standard Packaging List

1. Instruction*1.
2. Alarm*1
3. USB*1

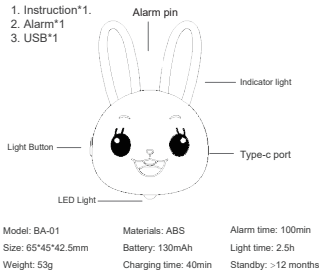

HOW TO USE:

1. Pull out the alarm pin to activate the alarm, red and blue light flash; insert the pin, both off

2. Press the light button, bright light; press again, strobe; press it the third times, red and blue light flash; press it the fourth times or press the light button twice quickly, light off.

3.APP Download

App name to suit this device is "Kindelf"

- (1)For iOS user, search "Kindelf" from APP Store then download and install it.

- (2)For Android user, search "Kindelf" from Google play then download and install it. Users in China mainland can download it from MyAPP or other Mobile Appmarket. All screenshots used in user manual are from iPhone X. Allowing system location, microphone and camera all accessible, Android users are subject to practice, phone bluetooth opened before using.

4. Bluetooth function:

- (1)Startup: Press and hold the side button for 3 seconds, beep sound and light flash, the Bluetooth anti-lost function is turned on.

Find items:

After connecting to the mobile phone, when click the alarm button in APP, alarm sound and the indicator light flash. The mobile phone disconnects Bluetooth: alarm sound and the indicator light flash.

Turn off Bluetooth: Press and hold the light button, a beep sound, the indicator light will flash and Bluetooth will turn off.

Note: When the Bluetooth function is turned on and the mobile phone is not connected, when the side button is pressed, there will be beep sound.

5. Automatically enter the sleep function without operation.

(2) Device

Open APP into the "Device" interface as below.



Click "⊕" below graphic signs appeared

- A. Click "Unconnected", as graphic sign.

- B. Appear "Connecting", as graphic sign.

- C. After connected as graphic sign.

- D. Click "Click alarm", as graphic sign. The device starts to make sound of "DIDI" all the time and will stop "DIDI" when clicking "Stop alarm" again. Double click of bluetooth device button quickly, an alarm ring pre-set up will be happened and it will stop once click of that button again. Click "Setting" as graphic sign.




- A. Click graphic signs to change the device picture as picture.

- B. Change the device name as graphic signs

- C. "Alarm when Bluetooth Disconnected" default in closed can be opened by manual, otherwise smart phone won't alarm when it disconnects with bluetooth anti-lost device, recommend to open as graphic signs.

- D. Click on "Select Ringtone" the right side to enter the ringtone interface, select the ringtone type as graphic sign.

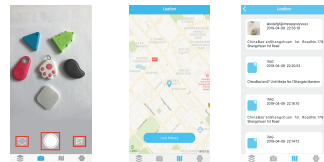

(3) Camera

With camera function, single click on the device to have fun of selfie, and switch between front and rear camera freely.

(4) Location

The device will work with positioning function when it gets disconnected with smart phone, which will keep the exact positioning location when disconnecting and is able to find the history of last seen position. Turning on GPS and keep smart phone connected with internet, otherwise map not updated.

(5) Settings

WiFi Do Not Disturb: Default in closed, but in a WiFi covering area when opened to get connected with a smart phone, the smart phone won't ring when disconnecting.

Silent Period: Default in opened, set up period from 23:00PM to 07:00AM next day, non-interference can be set up closed or reset up the time period.

Recording: Get into below interface to use voice recorder, single click on button to start voice recording and click the button again to stop and recorded file will saved in wav format.



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation. The devices have been evaluated to meet general RF exposure requirement. The device can be used in uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

4.Help

(1) Why can't the anti-lost device connect to smart devices (Mobile phones, tablets, etc)?

A. Confirm if the smart device is turning on Bluetooth.

B. Determine if the battery has power? If it is a button battery, pull out the battery, then load it, and connect the anti-lost device to the APP again.

C. Restart the smart device or restart the app.

(2) Why does the device alarm frequently? Due to the differences in the materials of the products themselves, individual anti-lost devices may have frequent alarms. The following steps can be set to further improve the user experience.

A. Disconnect, no mobile phone alarm. "Alarm when Bluetooth Disconnected" in the "Setting" option in Device (default in closed), the option does not affect the function of the anti-lost device to find the phone.

B. In the "Settings" there is "WiFi Do Not Disturb" option to turn on (default in closed), the mobile phone is disconnected from the anti-lost device in this area, and the mobile phone will not sound an alarm.

C. There is a "Silent Period" option in "Settings" (Default in opened), the default time period is 23:00-07:00, and the time period can be changed according to the user's habits.

(3) The Working distance of the device? The anti-lost device is a personal communication consumer product, it belongs to the Class 2 standard, and the general distance is 12-30 meters (without any barriers).

(4) Why is the device alarming frequently at home? Due to the poor penetration of the Bluetooth standard to the spaces, if there are more load-bearing walls in the actual living room, the anti-lost device will be frequently alarmed. It is recommended that the user can refer to the help point 2 to optimize the experience. If you are sensitive to this requirement, it is recommended to consider it. Please be cautious to purchase such products.

Key points: Some of the information in this manual is based on network information. If there is any dispute or objection to the citation, please refer to the professional information. This description is only for how the APP is used, and does not bear the loss or legal liabilities caused by other misunderstandings.