

# Say hello to your Lucky Voice Karaoke Kit ✖

 
Very many congratulations. You're on the verge of transforming your home computer into the ultimate karaoke machine. Within minutes you'll be able to sing thousands of songs from Ed Sheeran to Elvis.

## What you need



### ✖ A COMPUTER, TABLET OR SMARTPHONE

PC, Mac or laptop, it doesn't matter. It just needs to have a broadband internet connection.



### ✖ AMPLIFIED SPEAKERS

You can use with any home speaker that has an AUX input. Or use your TV or HI-FI as a speaker if it has a phono input.

### ✖ A HEALTHY LACK OF INHIBITION!

Just because it makes the singing a bit more fun. Try humming a little Elton or Beyonce now to get you in the mood.

## What you get



Mixer



Microphone



Microphone cable



USB power cable



3.5mm to phono cable



3.5mm to 3.5mm cable (x2)

## Got all those? Good. Then here's how you get singing.

### 1. GET SIGNED UP.

On your laptop, tablet or smartphone go to [luckyvoicekaraoke.com](http://luckyvoicekaraoke.com) and enter in your details. On the next page, enter the voucher code below.

Voucher code:

Now just fill in your details and you'll be singing in no time!

### 2. TURN THE MIXER ON.

Plug in the USB power cable into a USB plug or a computer that has a USB port, and then connect it to your mixer and turn the mixer on by pressing the ON button, the LED light should turn red.

### 3. CONNECT THE MIXER TO YOUR DEVICE(FROM STEP 1).

There are 3 ways you can connect (each option is labelled on the diagram overleaf).

- A) **AUX CONNECTION** - Using one of the 3.5mm to 3.5mm cables, connect one end to your computer, tablet or smartphone headphone socket and the other end to 'music in' on your mixer.
- B) **BLUETOOTH CONNECTION** - Hold down the 'Mode' button for 3 seconds and the light will start flashing blue, you can then pair this with your bluetooth device by searching for 'Lucky Voice' on the device you are pairing. Once it is paired it will flash red and blue. Please note, you will only be able to pair with one device at a time so be sure to turn bluetooth off any previous devices that have connected to the mixer if you're looking to switch devices.

- C) **USING THE USB PORT ON YOUR LAPTOP** - If you are using your computer USB port to power the mixer AND play the songs, you don't need to connect via Bluetooth or use the 'music in' port on the mixer. The USB connection will already connect the music to the mixer.

### 4. CONNECT THE MIXER TO YOUR SPEAKER.

Choose which speaker you are connecting to from the options below:

- ✖ **SPEAKER WITH AUX IN** (recommended) - Using the other 3.5mm to 3.5mm cable, connect one end to the 'AUX In' socket on your speaker. Connect the other end to 'audio out' on your karaoke mixer. Check your speaker is set to AUX mode rather than Bluetooth.  
(!) Important to note that the Bluetooth

function is not able to connect the mixer with the speakers. You must connect your speaker to the mixer with the cables provided.

- ✖ **HI-FI / TV SPEAKERS** - Using the 3.5mm to phono cable, plug the red and white connectors into the 'AUX In' red and white sockets on your HiFi or TV. Connect the other end (3.5mm jack) to 'audio out' on your mixer. Check your TV settings to ensure audio is diverted via the RCA ports if necessary.

### 5. GET SINGING!

Connect the microphone cable to the microphone and plug it into the 'mic one' socket on your mixer. (You can add an additional microphone using the 'mic two' socket).

Now switch on the microphone, turn up the volume and echo, choose your song and get singing!

Let's sing

Device connected to luckyvoicekaraoke.com

Headphone socket

Bluetooth

audio in

audio out

A

B

C

music in

power

USB power cable

mic one

mic two

music

echo

mode

lucky voice

Amplified speakers

Microphone

(Second microphone not included)

**We hope that your Karaoke Kit will provide you with enough entertainment for a lifetime's worth of parties and to give you some inspiration we've compiled a little warm up playlist! You can ignore our suggestions entirely, of course - there are thousands of other songs to choose from!!**

Title	Artist
Shotgun	George Ezra
Perfect	Ed Sheeran
Wonderwall	Oasis
Don't Stop Me Now	Queen
Suspicious Mind	Elvis Presley
Take On Me	A-Ha
9 To 5	Dolly Parton
A Little Respect	Erasure
Faith	George Michael
Valerie	Amy Winehouse
Before You Go	Lewis Capaldi
Parklife	Blur

luckyvoicekaraoke.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction