



9.12.1 Entering a PLU Using Discount Rate (S11 Mode)


Note: To use the default End Time simply press the Print/* key again.

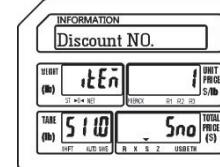

Press the SAVE key

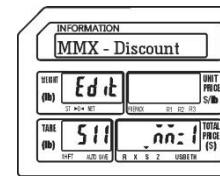

Press the FEED/ESC key.

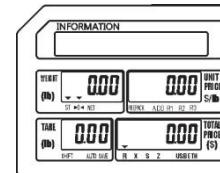

Note: After a discount has expired it must be manually deleted. Please refer to the Delete Discount procedure for the proper method to delete a discount.

9.13 MMX – New Price (S12 Mode)

9.12.2 Deleting a Discount

Follow the steps below to delete a Discount.

1.) From the Discount Number Screen



2.) Enter the Discount Number to delete


Ex.) Select Discount Number 1 to be deleted by pressing the number one key

1




Press the VOID key

VOID

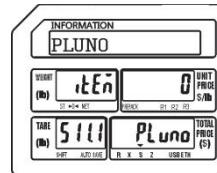

Press the FEED/ESC key

FEED
ESC

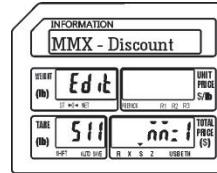

Note: Each Discount programmed can be deleted individually using the method above.


9.13 MMX – New Price (S12 Mode)

9.13 MMX –New Price (S12 Mode)


The MMX mode provides the ability to apply discounts to programmed PLU's. The S12 Mode allows you to discount PLU's based on a new Unit Price. This type of discount may also be programmed to be active based on a date and time schedule.

9.13.1 Entering a PLU Discount using New Price

1.) Start at the normal weigh mode screen


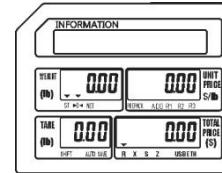


2.) Press the Mode Key twice

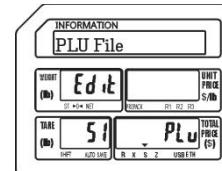


3.) Press the number 1 key then the number 2 key then press the X key

Note: This has the same results as pressing the X key eleven times.

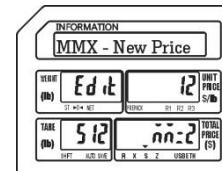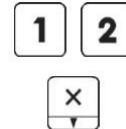


4.) Press the Print/* key

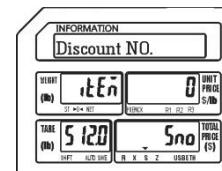


5.) Enter the Discount Number

Ex.) Enter Discount Number 5 by pressing the number five key.

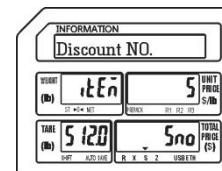

9.13 MMX – New Price (S12 Mode)

Press the Print/* key

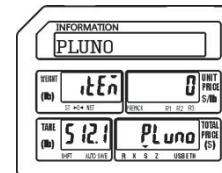


9.13.1 Entering a PLU Discount Using New Price (S12 Mode)

6.) Enter the Discounted PLU Number


Ex.) Select PLU Number 18 for Discounting by pressing the number one key then the number eight key.

1 8

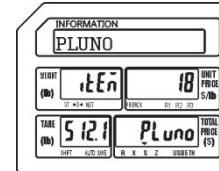

Press the Print/* key

PRINT
*
Enter

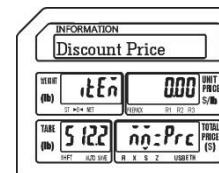

7.) Enter the New Price Discount


Ex.) Use \$7.99 as the New Price Discount by pressing the number seven key then the number nine key twice.

7 9 9



Press the Print/* key

PRINT
*
Enter

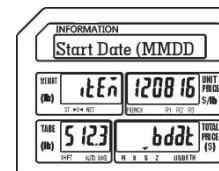


Note: The current date will be displayed. If you wish to use the current date you can just press the Print/* key again.

8.) Enter the Discount Start Date

Ex.) Enter a Start Date of December 20, 2016 (122016) using the number keys.


1 2 2 0 1 6

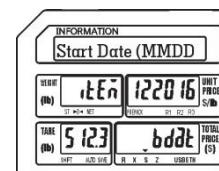

9.13.1 Entering a PLU Discount Using New Price (S12 Mode)

Press the Print/* key


Note: The current date will be displayed. If you wish to use the current date you can just press the Print/* key again.

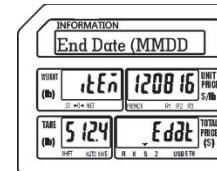


9.) Enter the Discount End Date

Ex.) Enter an end Date of December 27, 2016 (122716) using the number keys.

1 2 2 7 1 6

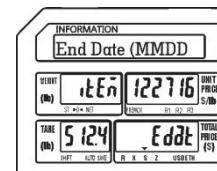


Press the Print/* key

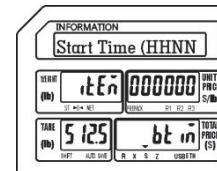

10.) Enter the Discount Start Time on each day in the date range


Ex.) Use the Start Time of 9:00AM (09:00:00)

0 9 0 0 0 0

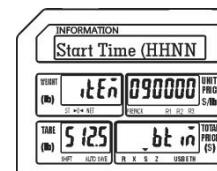

Note: To use the default Start Time simply press the Print/* key again.

Press the Print/* key

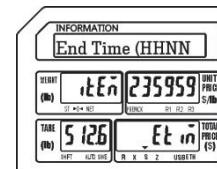


9.13.1 Entering a PLU Discount Using New Price (S12 Mode)

11.) Enter the Discount End Time
on each day in the date range


Ex.) Use the End Time of 6:00PM

1 8 0 0 0 0

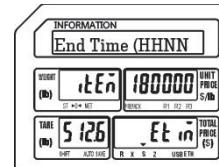


Note: To use the default End Time
simply press the Print/* key again.

Press the Print/* key

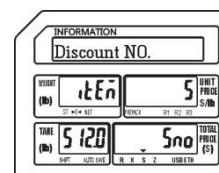

Press the SAVE key

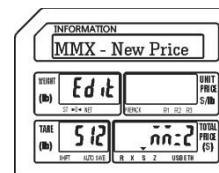

Note: After a discount has expired it must be manually deleted. Please refer to the Delete Discount procedure for the proper method to delete a discount.

9.13.2 Deleting a Discount (S12 Mode)

9.13.2 Deleting a Discount

Follow the steps below to delete a Discount.

1.) From the Discount Number Screen



2.) Enter the Discount Number to delete


Ex.) Select Discount Number 5 to be deleted by pressing the number five key

5




Press the VOID key

VOID

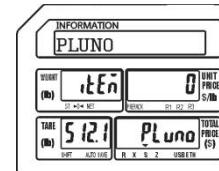

Press the FEED/ESC key

FEED
ESC

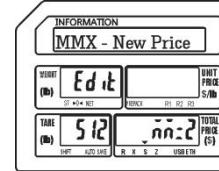

Note: Each Discount programmed can be deleted individually using the method above.


9.14 Clerk Information (S13 Mode)

9.14 Clerk Information (S13 Mode)


This mode allows you to enter Clerk Information such as Clerk No., Clerk Name and Clerk Password.

- Note: To use the Clerk function you must assign the function key of Logon/Logoff.

- 1.) Start at the normal weigh mode screen


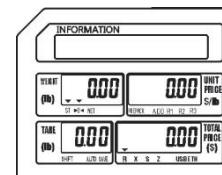


- 2.) Press the Mode Key twice

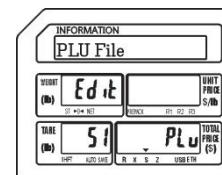


- 3.) Press the number 1 key then the number 3 key then press the X key

Note: This has the same results as pressing the X key twelve times.

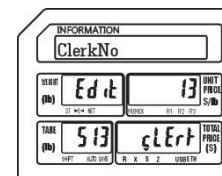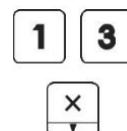


- 4.) Press the Print/* key

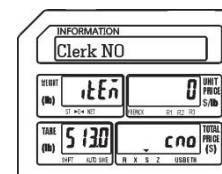


- 5.) Enter the Clerk Number

Ex.) Enter Clerk Number1 by pressing the number one key.

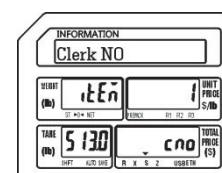

9.14 Clerk Information (S13 Mode)


Press the Print/* key

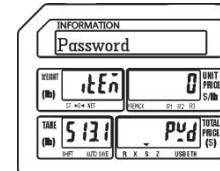


6.) Enter the Clerk Password

Ex.) Enter 1537 for Clerk Number 1's password (1537) using the number keys.

1 5 3 7

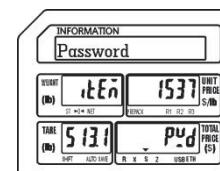


Press the Print/* key

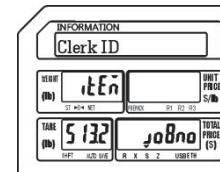


7.) Enter the Clerk Job ID Number

Ex.) Use 9 as the Clerk Job ID Number by pressing the number nine key.

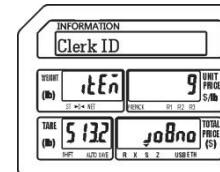


Press the Print/* key

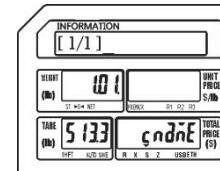


9.14 Clerk Information (S13 Mode)

8.) Enter the Clerk Name


Ex.) Enter Clerk 1's Name as MIKE.

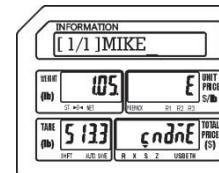
 A diagram of a keyboard layout showing the keys for entering the name 'MIKE'. The keys are arranged as follows: SHIFT (top left), M (29), I (25), K (27), and E (21).


Press the Print/* key

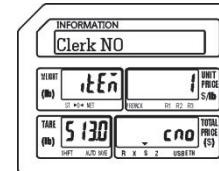
 A diagram of a key labeled 'PRINT *' with an 'Enter' button below it.


Press the SAVE key

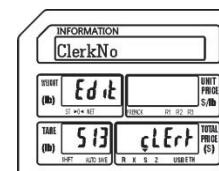
 A diagram of a key labeled 'SAVE'.


DLP-300 Series

ShangHai DB Scale Co.,Ltd

No.788 SongXiu Rd, QingPu District, ShangHai, PR.CHINA Tel: 86-21-59757333 Fax: 86-21-59757058

<http://www.dbscale.com.cn>