



# User Manual

Addressable Led Light with USB Controller

**DreamColor**



v2.0

FCC-ID:2A7WU-SPX003

## Introduction

Thanks for choosing our product !

This dreamcolor led lights has many dynamic modes.

It contains addressable LEDs.

Accompany with our first-class controller, the product performs outstanding colors and magic light effects.

With the APP, your can adjust its colors, brightness, preset modes, DIY modes and music modes.

## Install

1. Plug in the controller into USB adpater,Please use 5V2A power supply.
2. Short or long press the button on controller to turn on light. If the light not light up, contact support for help.
3. Unroll the light, put or stick the light where you want.
4. Take care not tear the light broken.
5. Any question or defect issue please contact us.


## Control by app

1. Scan the QR code on controller to install the APP.
2. Turn on the Bluetooth on your phone.
3. Open the APP, tap the "+" icon in the top right corner and search new device.
4. APP will show the device found, just add it.
5. Tap the device icon to enter control panel. Just explore it.

## Control by button

1. Short press or long press button on controller to turn on light.
2. Long press the button to turn off light when light is on.
3. Short press button to change mode when light is on.

## Remote(optional)

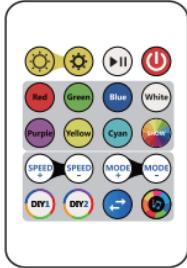

	Power on and off
	Brightness up and down
	Play and pause
	Seven basic static color
	Auto mode cycling
	Speed up and down
	Mode up and down
	Long press to save current mode. Short press to activate
	Directions switch
	Music Sync mode switch

## Troubleshooting

### 1.APP can not find the device.

- Make sure the phone bluetooth is on.
- Allow the permissions of APP. APP needs them to connect the device. Check string light is on.
- Kill APP, turn off bluetooth and turn on bluetooth again, then start APP to add device again.
- Ensure phone within 4ft of product without obstructions when connecting.
- Your phone may be incompatible with the APP, try another phone.

### 2.All lights don't work.

- Ensure the power is on.
- Connect APP and turn on light and turn up brightness.

### 3.Some light beads keep off or fail working.

- Check the pixel num setting on APP.
- Contact us.

## Customer Service

If you have any questions or product issues, please contact seller via the email on the package or get the product support on the order page in your purchasing account. All messages will be replied within 24 hours.

## FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.