

Bluetooth Speaker& Digital Player

English



Operation instruction
(Reading in depth)

Button operation

Long pressing key “ \odot ” to switch on/off

Short pressing key “ M ” to open mode conversion

Short pressing key “ \gg ” to play / pause / answer / hang up

Long pressing key “ \gg ” to refuse to answer a ringing phone

Music mode: long pressing key “ \gg ” to switch the mode

between single infinite loop and full infinite loop

Radio mode: long pressing key “ \gg ” to auto search; short

pressing key “ \gg ” to mute and continued play

Bluetooth mode: short pressing key “ \gg ” twice to call back the last call

Short press key “ \gg ” play the last song; long pressing key “ \gg ” to rewind and play music

Short press key “ \gg ” play the last song; long pressing key “ \gg ” to fast-forward and play music

Long / short pressing key “ $-$ ” to lower volume; long / short pressing key “ $+$ ” to increase volume

Short pressing numerical keys of 0-9 to quickly select music and channel

Accessing the headset to detect automatically, disconnecting to publicly play and convert to headphone output.

Bluetooth connection mode

Our Bluetooth speakers are stereo, so we require Bluetooth mobile phone or Bluetooth adapter to support A2DP function.

First, users long press the power switch “ \odot ” of Bluetooth speaker movie for 3 seconds, and please keep the Bluetooth speakers fully charged. After the speaker is switched on, it will send the voice of “Bluetooth mode pairing” and its screen will also brighten. At this point, the Bluetooth speaker is in a state waiting for the connection and it can properly connect the device only in this state.

Mobile connection

Step 1: turning on the Bluetooth switch on your phone.

Bluetooth symbols will appear on the screen of your phone and then your phone will automatically enter the Bluetooth search mode.

Step 2: opening phone Bluetooth settings and clicking scan search device.

Step 3: your phone has found the Bluetooth speakers and then click to match them if your phone has a “Antimi” device model.

Step 4: entering the code of “0000” if your phone is asked to enter a password in the pairing process.(Bluetooth version of mobile phone below 2.1 is required to enter the code of “0000” but there is no requirement for the Bluetooth version of mobile phone higher than this version).

Step 5: there will be the voice of “pairing” after pairing is successful
At this time, you can operate the speaker to play music

Computer connection

Please plug in Bluetooth adapter for computer without Bluetooth function, and then install Bluetooth driver, you can use it properly
Please open Bluetooth function for computers with Bluetooth function, and then connect devices step by step:

Step 1: finding the Bluetooth symbol in the bottom-right corner of computer and clicking right key to select “adding device”

Step 2: entering the mode of searching for Bluetooth devices and quickly displaying the “Antimi” device model

Step 3: clicking on this device model, adding speakers to the computer, and automatically installing the drive, the computer will show that “this device has been successfully added to the computer” and the voice that “your computer has paired with the device successfully and you can play music on the computer player now”

Bluetooth call

Answering the phone: Short pressing key “▶” can answer the phone (please aim at the microphone to make the call clearer) after the phone and the speaker pair successfully. Hang up: short pressing key “▶” can hang up or callback after finishing the call; the last phone number shall be dialed automatically if you short press key “▶” twice. Refuse to answer: long pressing key “▶” to refuse to answer the phone.

Bluetooth mode

This mode can play musics through Bluetooth wireless communication technology for computers, iPad mobile phones and other devices with Bluetooth function.

TF card/ U disk music mode

Automatically entering TF card/ U disk music mode after inserting TF card/ U disk, that is, the contents in the TF card/ U disk can be played. If you simultaneously insert TF card/ U disk the device will adopt the mode of “first insert and first read” so the music in the U disk will be played after the last music in the TF card, vice versa. What’s more, the mode can request a targeted song when you short press the numerical keys from 0 to 9. For example, you can rapidly press key “0” and “1” if you select the No. 10 song, you can rapid press key “1” and short press key “1” if you want to select the No.11 song, and you can rapidly short press key “1”, “0” and “1” if you select No. 101 song. After you finishing your selection, the screen will present the song name you selected and the device will directly turn to the song number you selected. (Note: it is invalid if the number you selected exceeds the number in the memory disc; the songs in TF card and U disk can be played in the format of Mp3 compressed files and WAV loss-less audio files.

FM radio mode

After you pressing key “M” to FM mode,

Long pressing key “” to automatically search and store all the local FM Broadcast programs and short pressing “

Short pressing “

4

Switching mode

The mode can be switched among the Bluetooth mode, TF card or USB mode and external audio input line mode when you short press key “M” after connecting the Bluetooth/ inserting TF card or USB/ external audio input line.

Headset Profile

Inserting headset into the “3.5” stereo head interface “” to automatically cut the efficacy output (public mute) to headphone output. Please turn the volume down first, put on the headset, and then adjust the volume to the right level; Pulling out earphone plug and turn it to the mode of public play. ((This device does not support simultaneously headset play and public play).

Charging

The device can be charged by connecting the USB line or the USB power adapter in state of tuning on and off.

Charging indicating lamp

The red light of charging indicator are always on and the screen battery icon flashes to indicate that the device is in the charging state. The red light of charging indicator are always on and the screen battery icon stops blinking to indicate that the battery is full. (Note: the screen is not lit and the charging light is long in the state of shutdown.)

Low battery warning

When the sound is low, the screen battery icon will be flashing with low power voice prompt that “low battery, please charge” and “shutdown” warning tone after a period of time, and then the speaker shall automatic shutdown.

Interface and key-press definitions



① play/pause/answer/hang ou	⑨ Microphone
② turn up	⑩ U disk interface
③ turn down	⑪ Headset jack, reset hole
④ next song/ speed	⑫ Charging lamp
⑤ last song /rewind off	⑬ TF memory card slot
⑥ mode switching	⑭ Digital key
⑦ switch on/off	⑮ Charging-audio two-in-one
⑧ digital display screen	Interface

Reset function

Please use a toothpick or non-metal bar to trigger the reset switch from the audio line insertion hole of device body when the device is dead due to abnormal operation or other reasons. The device can be used properly after reboot.

Technical parameter

Operating voltage: 3.7V

Charging voltage: USB 5V 500mA

Speaker specifications: 40mm, 4Ω, 3W

Noise-signal ratio: >80DB

Frequency response: 20-20KHz

Distortion factor: <1%

Receiving distance: >10M

Product size: 170mmX67mmXx33mm

Product weight: 295g

Packing list

Bluetooth speaker 1

Micro USB charging audio two-in-one line 1

Instruction manual 1 Certificate 1 Warranty card 1

Safety and maintenance

- 1:Please don't use speaker in hot environment to avoid damaging mainboard or battery explode.
- 2:Please don't put speaker into water or other corrosive chemical to avoid mainboard or battery explode.
- 3:Please don't use sharp objects to touch audible unit to avoid causing some irreparable damages.
- 4:Please charge in time when the power low
- 5:Please charge the speaker every 20 days if don't use for a long time
- 6:Please put speaker in dry environment if don't use
- 7:Please use the The original cables to connect
- 8:Please stop using speaker if you find some unusual situations such as hot smoking, peculiar smell.
- 9:Please don't tear down the speaker if you are not professional.
- 10:Please do not charge with the charger higher than the DC5V to avoid the damage to product components.

Summary

This model is a two channel stereo Bluetooth speakers, with Bluetooth / Bluetooth hands-free call, /AUX external audio / stereo headset, output /TF, play /USB, play /FM radio and VOD function By two Ø40mm magnetic full frequency loudspeaker, beautiful sound, novel design, convenient operation, external equipment with automatic detection, Mode conversion, digital display, on / off, adjust the PPlay Prev/V- Next/V+ button, press the on / off, “ø ” press the play / pause, the number of 0-9 on demand songs and words the radio channel access, headset automatic detection

Common problems

- 1、The power-on indicator does not work
- 2、Charge light does not work
- 3、Bluetooth status is silent
- 4、Off-screen sound input is silent
- 5、There is no voice when playing the musics in TF/U disk
- 6、FM mode no channel or few

Solutions

- 1、Please check if power enough or not,check if you long press “ \odot ” to turn on the speaker
- 2、Check the cable is connect correctly,damaged,check the adaptor
- 3、Check if match correctly and confirm if the speaker is playing or not,not in mute mode.Check if the volum is in MIN.
- 4、Check if the cable connect correctly and the speaker is in AUX input mode
- 5、Check if the TF card/USB disk is plused in right direction and right place,check if the format of the files is correct or not, volume is in MIN,check if the speaker is in right mode or not
- 6、The signal of your location is weak ,you location is remote and surrounded by some high buildings,or there is strong magnet, rainy day or you are far away from the launch station.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment