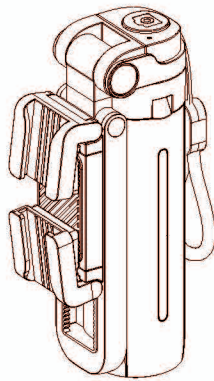
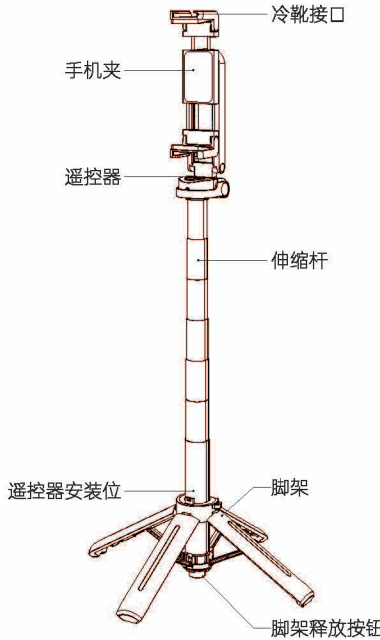
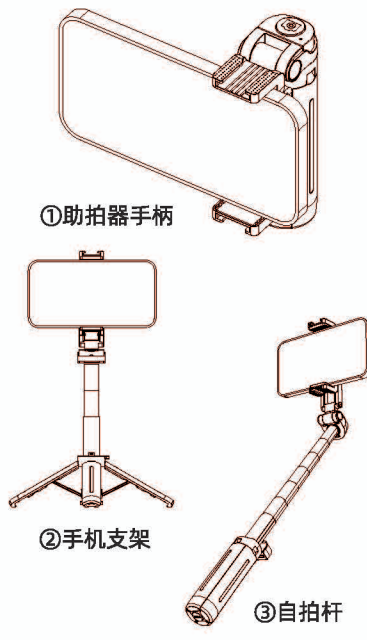
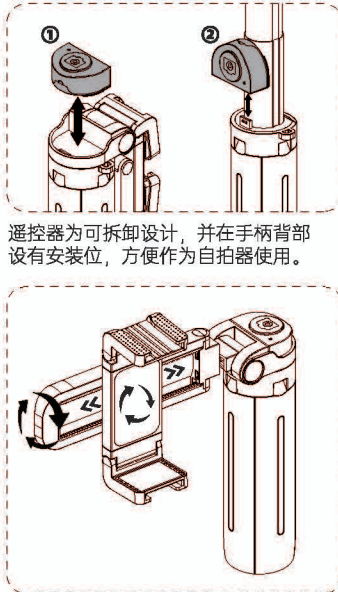
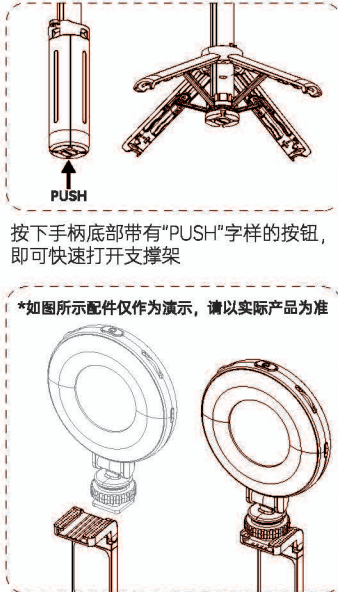
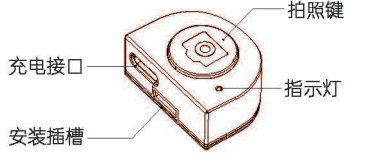
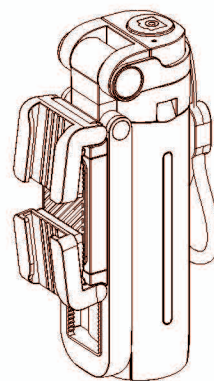
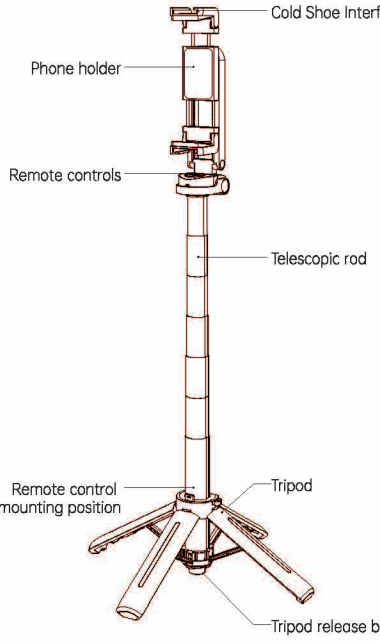
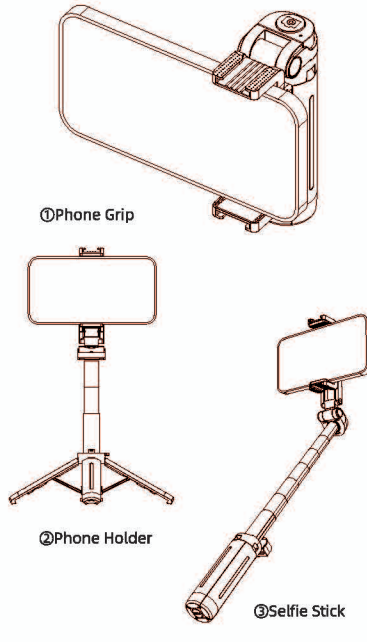
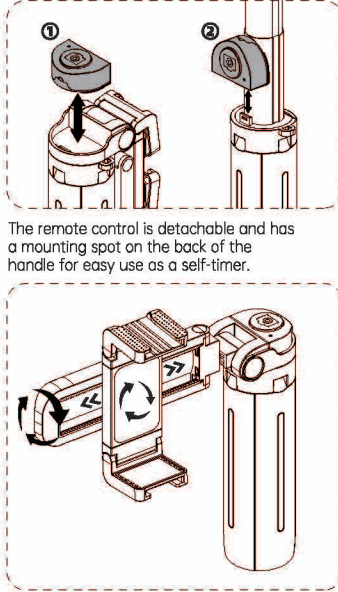
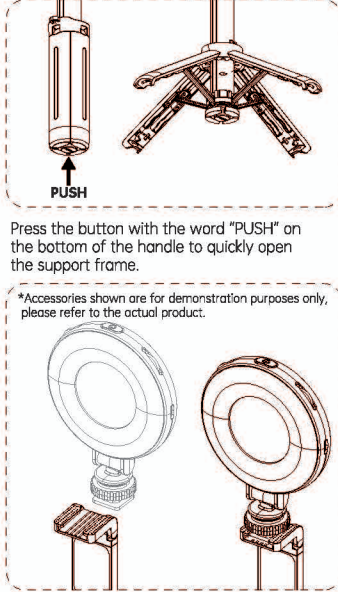
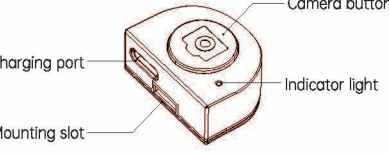


<div>口袋助拍器支架</div> <div>M50系列</div> <div></div> <div>使用前请仔细阅读说明书</div>	<div>功能示意图</div> <div><div>冷靴接口</div><div>手机夹</div><div>遥控器</div><div>伸缩杆</div><div>脚架</div><div>脚架释放按钮</div><div>遥控器安装位</div></div>	<div>产品形态示意图</div> <div><div>①助拍器手柄</div><div>②手机支架</div><div>③自拍杆</div></div>	<div>功能示意图</div> <div><div>①</div><div>②</div><div>遥控器为可拆卸设计，并在手柄背部设有安装位，方便作为自拍器使用。</div><div>高自由度手机夹，解锁更多创意拍摄模式</div></div>	<div>功能示意图</div> <div><div>PUSH</div><div>*如图所示配件仅作为演示，请以实际产品为准</div><div>按下手柄底部带有“PUSH”字样的按钮，即可快速打开支撑架</div><div>手机夹两侧均带有冷靴接口，将带有冷靴接口的设备（如补光灯、麦克风等）置入后旋紧旋钮即可将其固定。</div></div>	<div>蓝牙遥控器</div> <div><div><div>1. 开/关机：长按拍照键约2S直至指示灯闪烁，此时遥控器进入搜索状态。 结束使用时，长按拍照键约2S可关闭电源。</div><div>2. 蓝牙连接：打开手机蓝牙功能，在设备列表中找到名为“Selfie”的设备，并点击进行配对。</div><div>3. 蓝牙使用：打开手机相机应用，单击拍照键进行相片拍摄或视频录制。</div></div><div>充电：请使用DC 5V适配器连接充电接口进行充电。充电时指示灯常亮。充满时指示灯熄灭，请及时移除电源。</div><div>温馨提示:此蓝牙遥控器兼容Android 4.3、IOS 5.0及以上系统版本。</div><div><div>拍照键</div><div>指示灯</div><div>充电接口</div><div>安装插槽</div></div><div><div>自助排障</div><div><div>1. 遥控器无法开机： 将遥控器连接适配器进行充电后再次尝试。</div><div>2. 无法连接蓝牙或搜索不到设备： 重启手机与遥控器后再次进行连接。</div><div>3. 连接后按下拍照键无法拍照/录像： 在相机设置中将音量键功能设置为“快门”</div></div><div>部分智能手机机型的设置方式不同，请参考该手机型号的说明书。</div></div></div>	<div>注意事项</div> <div><div>1. 请勿将产品置于低温、潮湿环境保存。</div><div>2. 请勿将产品置于曝晒、火烤等高温环境。</div><div>3. 请勿在设备被限制的场所中使用，避免违反公共秩序。</div><div>4. 本产品含有电池，请放置于婴幼儿无法触及处，防止小孩误吞。</div><div>5. 产品图片、尺寸仅供参考，请以所购买款式为准。</div></div> <div><div>产品信息</div><div>产品名称：口袋助拍器支架</div><div>产品型号：M50</div><div>主要材质：铝合金；ABS</div><div>收纳尺寸：117.5*55*31mm</div><div>本产品已检验合格</div></div>
<div>Pocket Phone Grip</div> <div>M50series</div> <div></div> <div>Please check the instruction manual carefully before use</div>	<div>Functional diagram</div> <div><div>Cold Shoe Interface</div><div>Phone holder</div><div>Remote controls</div><div>伸缩杆</div><div>脚架</div><div>脚架释放按钮</div><div>遥控器安装位置</div></div>	<div>Form Schematic</div> <div><div>①Phone Grip</div><div>②Phone Holder</div><div>③Selfie Stick</div></div>	<div>Functional diagram</div> <div><div>①</div><div>②</div><div>The remote control is detachable and has a mounting spot on the back of the handle for easy use as a self-timer.</div><div>High-freedom phone clip to unlock more creative shooting modes</div></div>	<div>Functional diagram</div> <div><div>PUSH</div><div>*Accessories shown are for demonstration purposes only, please refer to the actual product.</div><div>Press the button with the word “PUSH” on the bottom of the handle to quickly open the support frame.</div><div>There are on both sides of the clip, so devices with cold shoe ports (fill light, microphone) can be fixed by tightening the knobs after placing them in the clip.</div></div>	<div>Bluetooth remote control</div> <div><div><div>1. On/Off: Long press the photo button for about 2S until the indicator light blinks. At this time, the remote control enters the search state. At the end of use, long press the photo button for about 2S to turn off the power.</div><div>2. Bluetooth connection: Turn on the Bluetooth function of your cell phone, find the device named “Selfie” in the device list, and click to pair.</div><div>3. Bluetooth use: Open the camera app of your phone, click the photo button to take photos or record videos. Charging: Please use DC 5V adapter to connect to the charging port for charging. Charging. The indicator light is always on when charging. When fully charged, the indicator light is off, please remove the power in time. Warm Tips:This Bluetooth remote control is compatible with Android 4.3, IOS 5.0 and above.</div></div><div><div>Camera button</div><div>Indicator light</div><div>Charging port</div><div>Mounting slot</div></div><div><div>Self-service troubleshooting</div><div><div>1. Remote control cannot be turned on: connect the remote control to the adapter for charging and try again.</div><div>2. Can't connect Bluetooth or can't search the device: restart the cell phone and remote control and try to connect again.</div><div>3. Cannot take photo/video by pressing the photo button after connecting: Set the volume button function to “Shutter” in the camera settings. Some smartphone models have different settings, please refer to the manual of the phone model.</div></div></div></div>	<div>Caveat</div> <div><div>1. Don't store the product in a low-temperature, humid environment.</div><div>2. Don't store the product in a high temperature environment such as exposure to the sun or fire.</div><div>3. Don't use the product in places where the equipment is restricted to avoid violating public order.</div><div>4. This product contains batteries, please keep it out of reach of infants and children to prevent children from swallowing it accidentally.</div><div>5. The product picture and size are for reference only, please refer to the purchased model.</div></div> <div><div>Product Information</div><div>Product Name: Pocket racketeer holder</div><div>Product Model: M50</div><div>Main material: Aluminum alloy+ ABS</div><div>Storage size: 117.5*55*31mm</div><div>This product has been tested and qualified</div></div>

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.