

 
# X7

## USER MANUAL


### Customer Service

Email: [info@golrex.net](mailto:info@golrex.net)  
Web: [www.golrex.net](http://www.golrex.net)

### Packing List

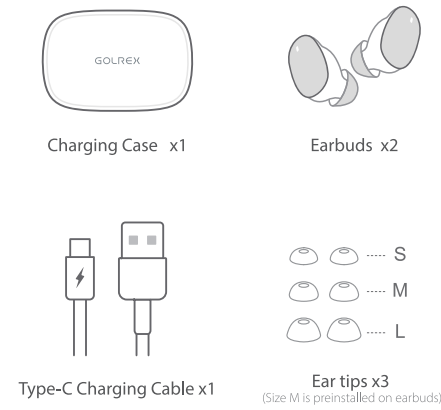

### Diagram

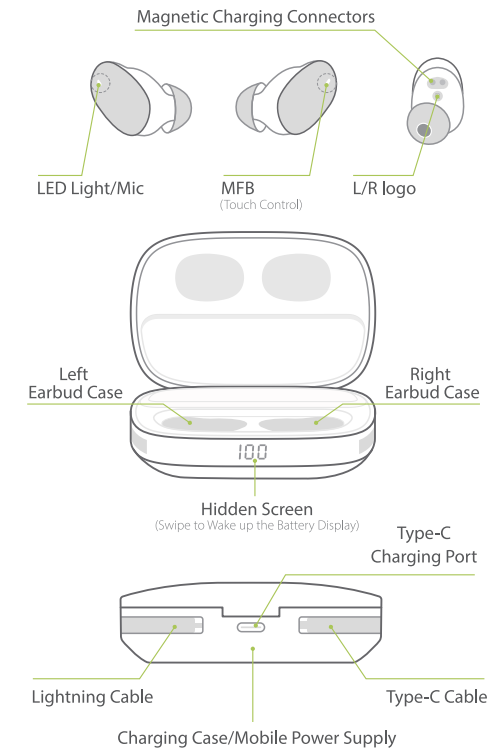 


### First-Use

Prior to first use(or not in use for long time), please charge both Earbuds and Charging Case with the supplied Type-C Charging Cable.

### How to wear?

 1. To improve wearing experience, please select a best fit ear caps for you.



2. Put earbuds into your ear. (Make sure indicator-light side is on top)


3. Rotating back earbuds to auricle side to fir snugly.



\* The indicator light is up, not down.

### Power on

 Hold or pick up earbuds from battery case to power on automatically.

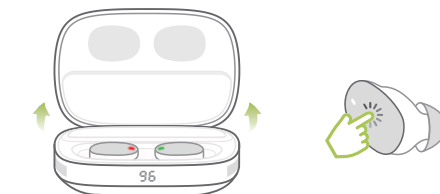

### Power off

 
Put earbuds into battery case to power off & charging automatically.



\* The earbuds will automatically power off in 5 mins when there is no device connected.

### How to Pair?

Open the charging case, they will automatically enter the pairing mode in which the LED light flashes red and green alternately, and then select [X7].

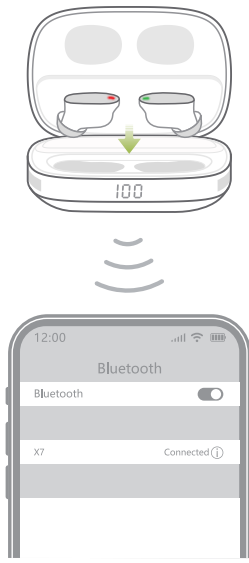

\* Note: The earbud will reconnect to the paired device by priority. If you want to pair to the second smartphone, please disconnect Bluetooth on the previous device.

## Incoming Call

### Answer / End call

Double-tap to answer or end a call.



Tap x 2

### Reject call

Touch & hold for 2 sec to reject an incoming call.



Touch 2 sec

### Activate Voice Assistant

Triple-tap to activate voice assistant(Non-Playing).



Tap x 3

6/11

## Music

### Play/Pause

Double-tap to play or pause.



Tap x 2

### Volume Control

Touch & hold on the Left earbuds to decrease volume.  
Touch & hold on the Right earbuds to increase volume.



Touch & hold

Touch & hold

### Previous Track

Triple-tap Left earbud



Tap x 3

### Next Track

Triple-tap Right earbud



Tap x 3

7/11

## How to charge?

Insert the earbuds into the charging slots correctly, earbuds will start charging, connect the Type-C charging cable to power supply, charging case will start charging.



## Work as Power Bank for Emergency

 
Equipped with Type-C and lightning output port, inside 2800mAh capacity Li-ion battery, the charging case itself can work as a power bank.



8/11

## How to check charging status?

- Earbuds LED will flash Red light while being charged.
- Earbuds LED's Red light will disappear while fully charged.
- Hidden Screen will show the remaining battery level of the charging case.

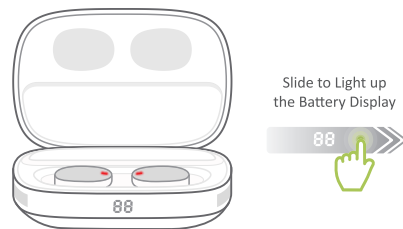

Slide to Light up the Battery Display

## Specification

1. Bluetooth Version: V5.0
2. Support: A2DP/HFP/HSP/AVRCP
3. Transmission Range: 33 feet (without obstacle)
4. Charging Port: Type-C
5. Music Time: 5H
6. Phone Call Time: 4H
7. Charging Time: about 3.5H
8. Battery of each Earbud: 40mAh
9. Battery of Charging Case: 2800mAh
10. Model Name: X7

9/11

## Safety Instruction

1. Using earphones at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised you keep volume levels moderate to low at times for your safety.
2. Do not use earbuds while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds.
3. Do not use earphone in thunderstorm weather, the earphone may not work properly in the condition, and increase the risk of being hit by lightning.
4. Earphones may not work properly under high temperature or high humidity conditions. Do not use any corrosive cleaner/oil to clean the earphone.
5. If the earphone comes in contact with liquids, quickly wipe it away.
6. If submerged in water, do not turn the earphone on until completely dried.

(Tips: liquid submersion voids the warranty.)

7. Keep the earphone and packaging out of reach of children.
8. Please use the original charging cable provided by the earphone manufacturer for charging or choosing Type-C cable.

10/11

## Troubleshooting Guide

Q1: What should I do when the earbuds can't be paired with my mobile device?

A1: Reset your earbuds and pair the earbuds with your mobile device again.

Q2: How to reset the earbuds?

A2: Put both earbuds in the charging case, press and hold the left and right earbuds for 8 seconds at the same time. At this time, the connection with the mobile phone is disconnected, and the mobile phone needs to be reconnected manually.

Q3: What should I do if there is no sound from one earbud?

A3: Turn off Bluetooth on the device and turn it on, then pair your earbuds with the mobile device again.  
For Android device, if there is no sound from one earbud after connecting, you need to check whether the phone volume is too low. If the phone volume is normal, it may be that the volume of the earbud has been turned to the minimum. Please try to adjust the volume of the earbud.

Q4: How to contact customer service?

A4: ✉ Email: [info@gorex.net](mailto:info@gorex.net)

🌐 Web: [www.gorex.net](http://www.gorex.net)

If there is any issue with your earbuds, please don't hesitate to contact us, we will reply within 24hrs and solve your problem 100%.

11/11

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.