

# User Guide

## (Common for Bluetooth and non Bluetooth versions)

Please read this user guide first before operating the unit and save it for future reference.

Congratulations on your purchase of this Roll-up Drum kit. To get the most from your purchase, please take a few minutes to read these instructions.

### 1. Safety instructions




- This product should not be exposed to water by dripping or splashing and no objects filled with liquids, such as vases, should be placed near to the product. Do not place the unit on a wet surface.
- Do not expose the product to temperatures above 35°C and keep it out of direct sunlight.
- This product has no user-serviceable parts. Do not attempt to repair this product yourself. Only qualified service personnel should perform servicing.
- Do not subject the plastic part of the product to harsh impacts. Do not drop the product as this may result in damage.
- Disconnect the product from the power source before cleaning. Never handle the USB cable with wet hands as this could cause electric shock. Unplug the product when it will be unused for long periods of time.
- This product is designed for indoor use only.
- If a USB cable needs to be replaced, replace it according to the manufacturer's specifications.

### 2. Preparation for use



Unpack the drum kit carefully. We recommend that you save the box and packing materials in case you wish to store the drum kit. Before setting up the unit, verify that the following accessories are present:

#### CONTENTS:

- 1 x Drum kit
- 2 x Pedals
- 2 x Drum sticks
- 1 x USB Power/Data cable
- 1 x 3.5mm AUX input cable
- 1 x Printed user guide

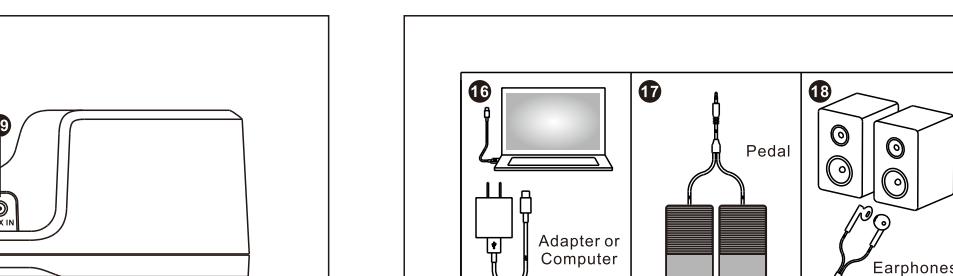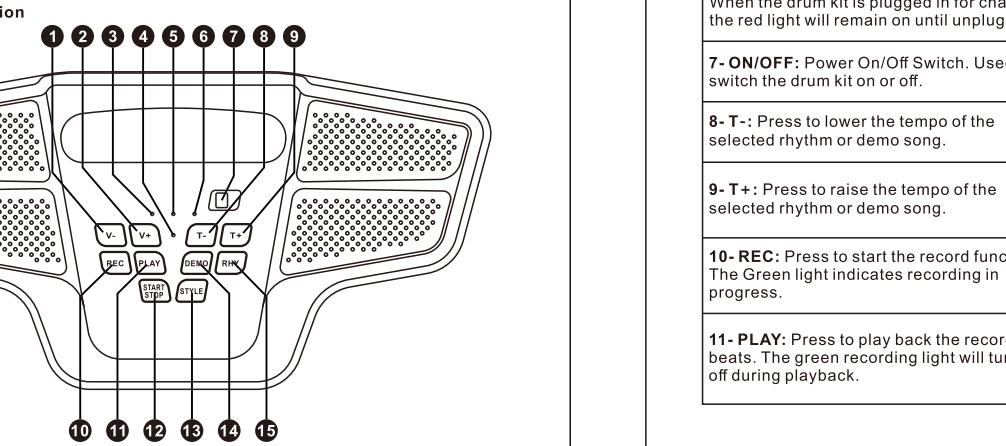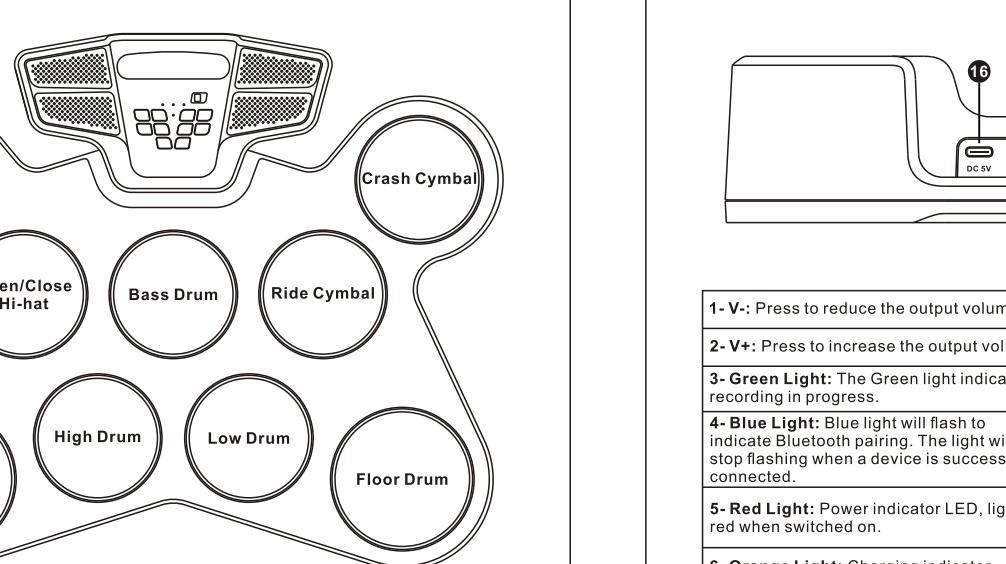

1- V-: Press to reduce the output volume.	12- START/STOP: Press to start playback of the selected rhythm. Press to stop playback of the rhythm or demo song that is playing.
2- V+: Press to increase the output volume.	13- STYLE: Press to cycle between the 7 different drum styles.
3- Green Light: The Green light indicates recording in progress.	• Press the pedals 1 and 2 for Bass drum and Open/Close Hi-hat.
4- Blue Light: Blue light will flash to indicate Bluetooth pairing. The light will stop flashing when a device is successfully connected.	• Hi-hat function – Without Pedal plugged in – OPEN Hi-Hat • Hi-hat function – With pedal pressed – CLOSED Hi-hat • Hi-hat function – With pedal not pressed – OPEN Hi-hat
5- Red Light: Power indicator LED, lights red when switched on.	14- DEMO: Press to cycle between the 12 demo songs available.
6- Orange Light: Charging indicator. When the drum kit is plugged in for charge, the red light will remain on until unplugged.	15- RHY: Press to cycle between the 10 available rhythms.
7- ON/OFF: Power On/Off Switch. Used to switch the drum kit on or off.	16- DC 5V: Use the USB power adapter supplied or power from a computer USB port. NOTE: Also used for MIDI connection to host computer.
8- T-: Press to lower the tempo of the selected rhythm or demo song.	17- PEDAL: Pedals for Bass Drum and Hi-hat.
9- T+: Press to raise the tempo of the selected rhythm or demo song.	18- AUX OUT: Connect Headphones, Earphones or to amplified speakers.
10- REC: Press to start the record function. The Green light indicates recording in progress.	19- AUX IN: Auxiliary input for iPod, iPhone, Smartphone or MP3 player. Use the 3.5mm cable supplied to connect the external device.
11- PLAY: Press to play back the recorded beats. The green recording light will turn off during playback.	

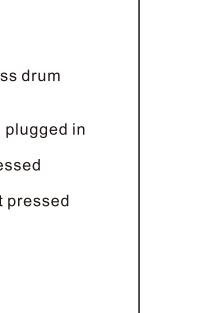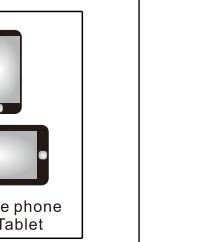

### 6. Function Operation

#### • Volume control

Press the VOL-/VOL+ buttons to adjust the volume of the drum sounds, demo songs and rhythms. There are 8 Volume settings available plus an off setting. The default setting at power up is level 5.

#### • Drum kit selection

Press the STYLE button to cycle through the 7 different drum kit sounds. Hit the drums to test out the sounds available until you find the one that you like. The default setting at power up is STYLE 1.

#### • Demo songs

Press the DEMO button repeatedly to select the demo song required. There are 12 different demo songs to choose from. The default setting at power up is Demo song 1.

#### • Tempo control

The T+ and T- buttons can be pressed to adjust the playback tempo of the rhythms and demo songs. There are 15 Tempo settings available and the default setting at power up is setting 8.

### 7. Product Specifications

DC Power: DC 5V @ 1A

 
Rechargeable Lithium Battery: 2000mAh

Charging time: 3 hours

Output power: 4 watts

Dimensions: 43.5 (L) x 35.5 (W) x 5.5 (H) cm

Weight: 750g



#### • Recording and Playback

Press the REC button to enter the recording mode; the REC LED will turn green. Play the drums normally and up to 300 beats will be recorded.

Press the PLAY button at any time to play back the recorded beats. The recorded beats cannot be deleted except by switching off the power but can be overwritten by pressing the REC button again.

The playback of the recorded beats is not affected by the tempo setting.

#### • Playing along to your iPhone, iPod, MP3 player etc.

After switching on the drum kit, you can connect your Bluetooth device. The blue light will flash when the drum kit is ready to pair. From your mobile device search for "Bachi Audio" and connect. When your device is successfully connected the flashing blue light will change to solid blue.

#### Aux Input:

You can also listen to the sound of a connected external audio device such as an iPhone, iPod or MP3 player through your drum kit. Connect one end of the 3.5mm cable supplied to the AUX input socket (labelled 19) located on the rear panel of the drum kit, and the other end to your audio equipment (iPhone, iPod, MP3, PC, CD player, etc.). This feature is great for practice and allows you to play along to a favorite music track.

**NOTE:** For Bluetooth and Aux Input, use the volume control of the connected device to adjust the playback volume of the music track. The music volume cannot be adjusted by the VOL- and VOL+ keys of the drum kit.

#### • Connecting headphones or external speakers

Headphone, Earphones or external amplified speakers can be connected to the Headphone socket on the rear of the drum kit; this is great for private practice.

#### • Connecting to a computer (MIDI Out)

The drum kit can be connected to a personal computer, either Windows or MAC using the USB cable supplied. The drum kit hardware is compatible with both Windows and MAC and can be used with software such as Sonar, Cubase, Nuendo and EZdrummer.

#### • Bluetooth MIDI

Bluetooth MIDI connection, first connect with a phone or tablet, connect to Bluetooth "Bachi Audio" and then download a MIDI enabled Bluetooth App software, open the software, enter MIDI connection device selection item, find the Bluetooth ID name "Bachi midi" to proceed with connect.

#### • Low voltage warning

When the battery level is too low, a prompt sound will be emitted and the indicator light will continue to flash.

### Tone, Demo, Rhythm list

N.	TOPE	DEMO	RHY
1	Standard	Rolling Tone 1	The Dancing Girl
2	Pop	Disco	Glory Days
3	Rock and Roll	Pop	Da Pendaau
4	Latin	Rolling Tone 2	Military March
5	Electron	Rap 1	Little Sirire
6	Electro	Rolling Tone 3	Cherry Mariko Opening Song
7	Percussion music	Hip hop 1	Spinach March
8	Rock and Roll	Hip hop 2	Little Doctor
9	Rap 2	The God of Wealth has arrived	
0	Aruba	Happy Clapping Song	
1		Rolling Tone 4	
2		Hip hop 2	

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.