


14+
age

Instructions For Use

V1.0

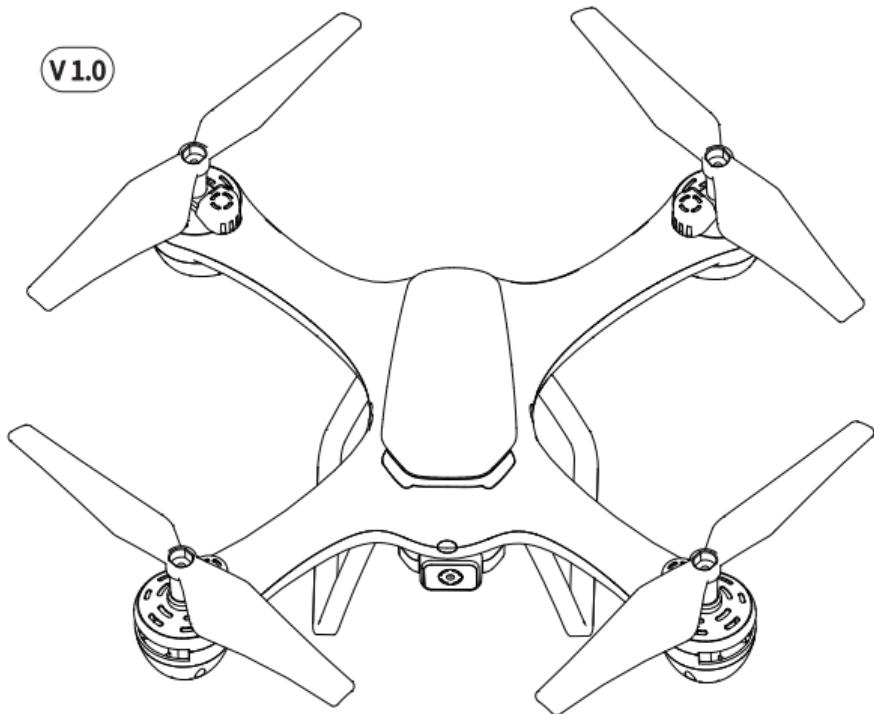

Contents

Disclaimer & Warning	1
Safety Guidelines	1
Maintenance	5
Package Contents	6
Diagram Of Drone	7
Joystick Mode	8
Preparation Before Flight	
Charging Drone Battery.....	9
Changing Transmitter Batteries.....	10
Drone Battery	11
TRIPOD INSTALLATION	11
Propellers	12
Flight	
Pairing	13
Calibrate The Gyro	14
Unlock The Motors	14
Takeoff	15
Landing	15
Functions Details	
Speed Switch	16
High-Speed Rotation	16
Circle Fly	17
360° Flip	17
Emergency Stop	18
Headless Mode	19
Attitude Adjustment	
Trimmer	20
PHOTOGRAPHY FUNCTION	20
Specification	21
General Information	22

DISCLAIMER & WARNING

1. Please read this Disclaimer & Warning and Safety Guidelines carefully before using our product. This product is not recommended for people under the age of 14. By using this product, you hereby agree to this disclaimer and signify that you have read it fully. You agree that you are responsible for your own conduct and any damage caused while using this product, and any consequence. You agree to only use this product for its designed purposes and in accordance with the local laws, regulations and all applicable policies and guidelines that Pinotu may provide.
2. When using this product, please be sure to strictly abide by the specification requirements and safety guidelines stated in this document. Any personal injury, property damage, legal disputes and all other adverse events caused by the violation of any of the safety instructions or due to any other factor

SAFETY GUIDELINES

CHECK BEFORE USE

- ① This product is a high precision drone that integrates various electronic stability and control mechanisms. Please be sure to configure this drone carefully and correctly to ensure safe, accident-free operation.
- ② Ensure that the batteries of the drone and transmitter are clean, undamaged, and fully charged before every use.
- ③ Ensure that all the propellers are undamaged and are installed in the correct orientation.

SAFETY GUIDELINES

④ Please perform a thorough check of the product before each use. Inspect the integrity of the parts, any signs of cracks and wear off on the propellers, battery power and effectiveness of the indicator, etc. If there is any problem found after checking the drone, please refrain from using it until the problem is resolved.

FLIGHT ENVIRONMENT



+



+



Fly in Open Areas

Maintain Line of Sight

Fly Below 131 ft (40 m)



Avoid flying over or near obstacles, crowds, high voltage power lines, trees, airports or bodies of water.

DO NOT fly near strong electromagnetic sources such as power lines and base stations as it may affect the onboard compass.



DO NOT use this drone in adverse weather conditions such as rain, snow, fog, and wind.

SAFETY GUIDELINES

OPERATION REQUIREMENTS

- ① DO NOT use this product to follow any moving vehicles.
- ② During the flight, turn off the motors only in case of an emergency.
- ③ When the battery runs low, return the drone back to your starting point.
- ④ DO NOT use this product if you feel tired, take medicine or feel unwell and drink alcohol.
- ⑤ Be aware of the volume of noise that the drone produces. Please ensure to keep your distance to avoid ear damage.



- ⑥ Stay away from the rotating propellers and motors.

- ⑦ DO NOT fly in any spaces where drones are prohibited. Please respect people's right to privacy by not flying your drone close to others.

USE OF BATTERY

- ① Please ensure batteries are fitted in the correct orientation as shown in the instruction manual.
- ② Avoid short circuits by fitting the batteries correctly, and do not crush or squeeze the batteries as this could cause the risk of a fire or explosion.
- ③ DO NOT mix new and old batteries as this can lead to a poor performance of the product.
- ④ Please dispose of used batteries carefully, do not litter and recycle where ever possible.
- ⑤ DO NOT expose dead batteries to heat or fire or they may explode.
- ⑥ If the device is not going to be used for an extended period of time, please remove batteries to prevent potential damage to the drone from battery leakage.

SAFETY GUIDELINES

- ⑦ Only use the USB charging cable that comes with the drone to charge the battery.
- ⑧ DO NOT connect the battery directly to wall outlets or car cigarette-lighter sockets as this will damage your battery since they have different voltages.
- ⑨ DO NOT attempt to disassemble or modify the battery in any way
- ⑩ DO NOT use the battery if it gives off an odor, generates heat, becomes discolored, deformed or appears abnormal in any way. If any of these situations occur while the battery is in use or being charged, remove it from the device or charger immediately and discontinue use.
- ⑪ Never pierce the battery casing with a nail or any other sharp object, break it open with a hammer, or step on it. Discard or recycle this battery as it may cause personal injury or damage to the drone.
- ⑫ Always charge the batteries on a fireproof surface and away from combustible materials. DO NOT charge on surfaces that can catch fire, which includes: wood, cloth, and carpet.
- ⑬ DO NOT immerse the battery in water or get it wet.
- ⑭ DO NOT solder the battery terminal in any way.
- ⑮ Keep batteries out of reach of children or pets.
- ⑯ DO NOT short-circuit the battery by connecting wires or any other metal object to the positive(+) and negative(-) terminals.

Li-Po Battery Disposal & Recycling



Waste Lithium-polymer batteries must not be placed with household trash. To dispose of waste batteries, please contact the local environmental or waste agencies, the supplier of your model, or your nearest Li-Po battery recycling center.



MAINTENANCE

- ① Clean the drone after each use with a clean, soft cloth.
- ② Avoid prolonged exposure to direct sunlight and avoid buildup of heat on the drone or batteries.
- ③ This device is not waterproof and must not be submerged or subjected to water under any circumstance. Failure to keep the device completely dry may likely damage the unit permanently. Be aware that although it might be dry where you are, droplets of rain or mist from a river or waterfall could damage your drone where it is flying.
- ④ Frequently check the charging plug and other accessories for signs of damage. If any part of the device or cables are damaged, avoid using or charging until the damaged parts are replaced.

WARRANTY AND AFTER-SALES SERVICE

We provide a 1-year warranty and lifelong professional technical support to our customers, aiming to resolve any issues you may encounter while using our product.

After-sales team email: support@drone2vip.com

Please feel free to contact us if you need any assistance, and we will do our best to provide you with the most satisfactory solutions.

PACKAGE CONTENTS



 
 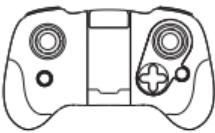
		
Drone	Transmitter	Drone Battery
		
USB Charging Cable	Propeller	Screwdriver
		
Tripod	Instructions For Use	


DIAGRAM OF DRONE

Drone

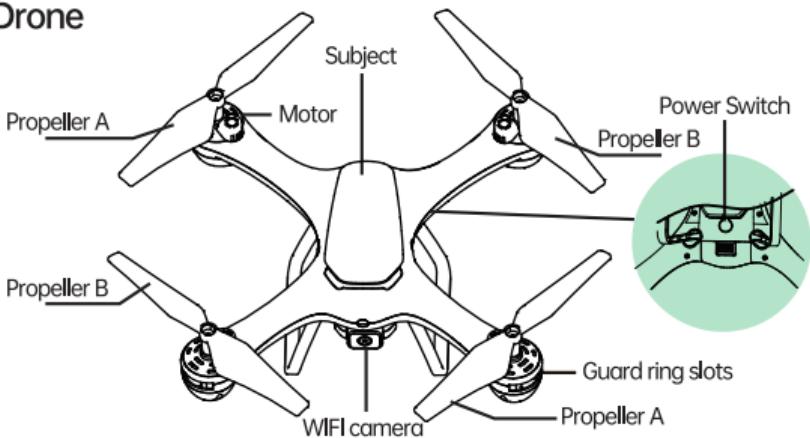

Transmitter


Simultaneously long press the left and right joystick, the motors will stop immediately.

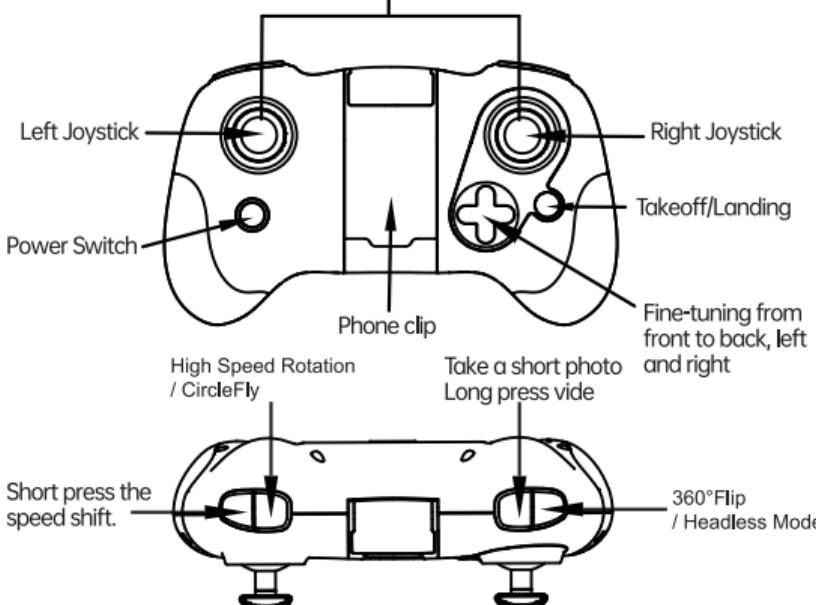

· The drone indicator displays the status of the flight control system.


JOYSTICK MODE

MODE 2 (Left hand throttle MODE 2 will be the default setting.)

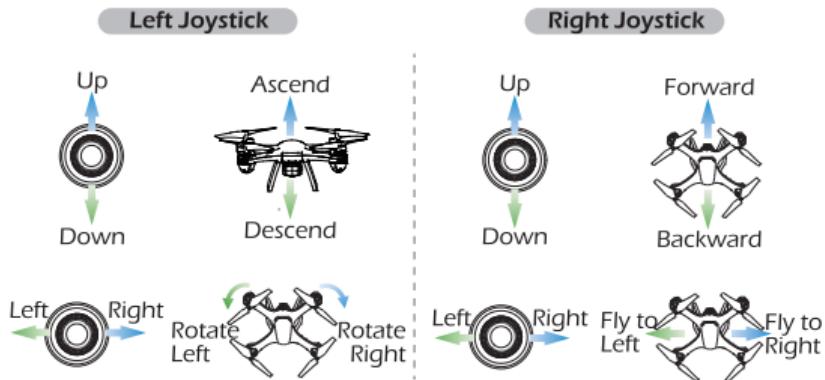


MODE 1

To enter MODE 1, turn on the transmitter while holding the () button. (Please do not release the () button until the transmitter is powered on.)

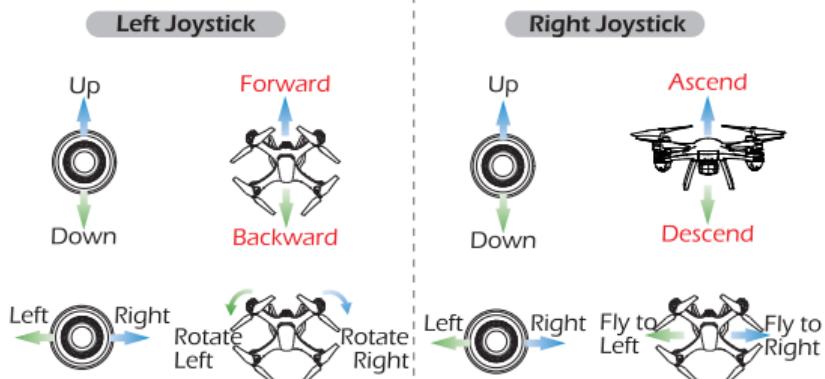

PREPARATION BEFORE FLIGHT

CHARGING DRONE BATTERY

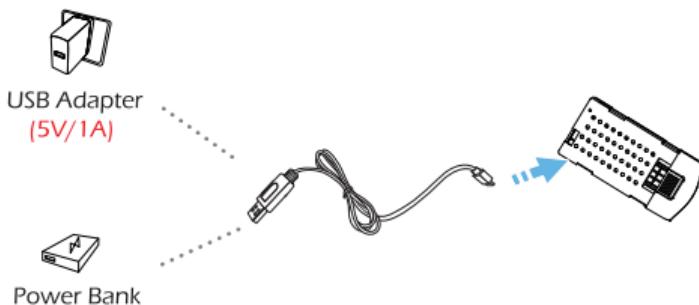

- ① Connect the the drone's battery with the USB Charging Cable.
- ② Plug the USB Charging Cable into a USB charging port on the power bank or USB adapter (5V/1A).
- ③ Charging time: about 90 minutes.
- ④ When the battery is charged, the battery indicator light is red, and when the battery is fully charged, the battery indicator light goes out.


* Low Battery Signal: The drone indicator will flash continuously and the transmitter will beep during the flight.




- Before charging, please read the instructions in the **“Use of Battery”** section of the **“Safety Guidelines”** carefully!
- Please use the original charging cable to charge the battery.
- DO NOT charge the drone battery immediately after a flight as the temperature of the battery may be too high. Please wait until it cools down to room temperature before charging again.

PREPARATION BEFORE FLIGHT

Push the phone holder upwards as shown in the figure. Insert one side of the phone into the bottom slot of the phone holder, and then pull the phone holder lever upwards until the phone is inserted. After taking out the mobile phone, the stretching part of the mobile phone clip will automatically retract the mobile phone clip and then put the mobile phone clip into the remote controller.

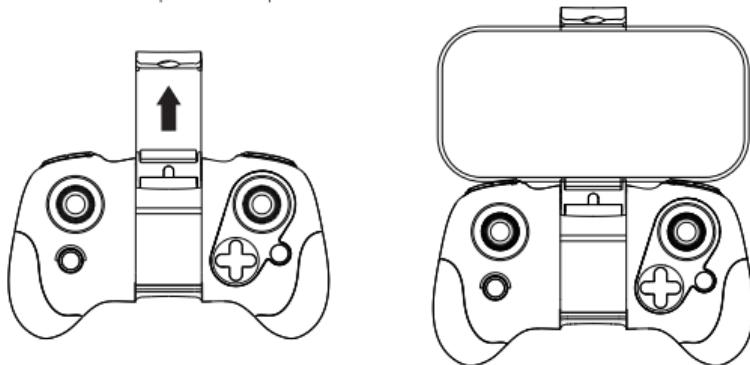

CHANGING TRANSMITTER BATTERIES

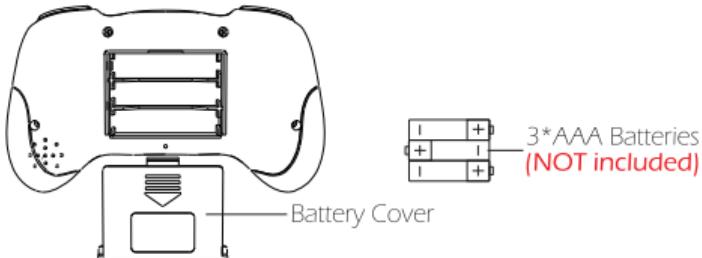


Open the battery cover on the back of the transmitter, insert the three AAA batteries **(Not included)** into the battery compartment, and close the battery cover to complete the installation.



- Please read the instructions in the **"Use of Battery"** section of the **"Safety Guidelines"** carefully!
- When installing the batteries, please pay attention to the positive and negative polarity of the battery to ensure the correct installation of the batteries.

PREPARATION BEFORE FLIGHT

DRONE BATTERY

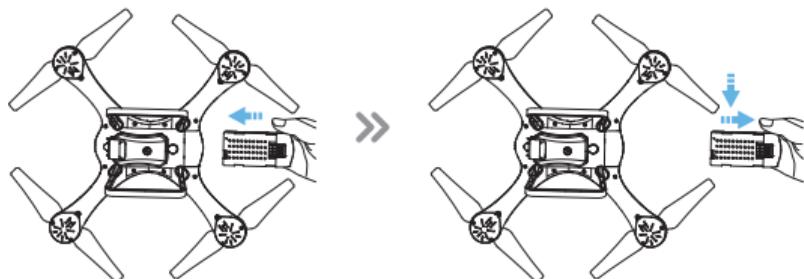


Installation: As shown in the figure above, align the battery and insert it into the bottom of the drone. Make sure the battery buckle is secure.

Removal: As shown in the figure above, press down the battery buckle, and then pull it backward to remove the battery.



TRIPOD INSTALLATION

As shown in the figure below, the tripod should be inserted into the hole on the bottom of the plane and tightly inserted in place.

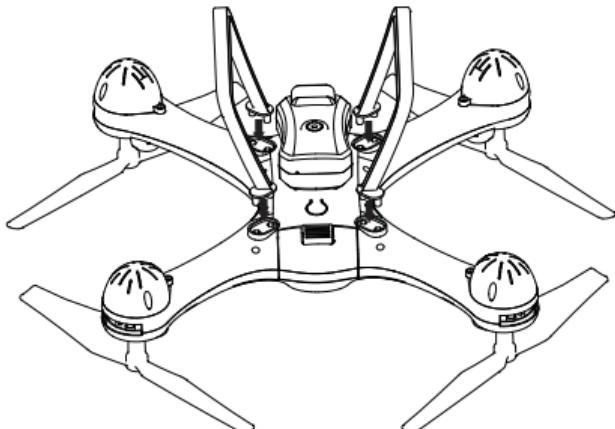

PREPARATION BEFORE FLIGHT



PROPELLERS

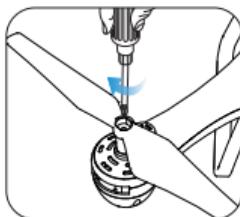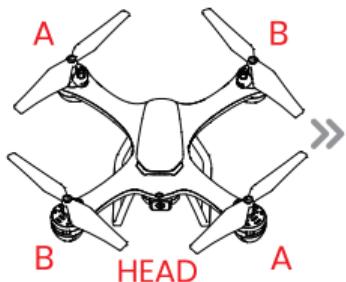

Installation: The drone will not fly unless the correct propeller is installed on the correct motor shaft. Each propeller is labeled with either an "A" or "B" on it. Secure the propeller onto the motor shaft using screws, turning each screw clockwise.



- The propeller is installed before the drone is packaged at the factory.
- The drone will not fly unless the correct propeller is installed on the correct motor shaft.

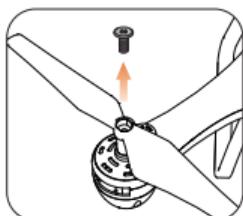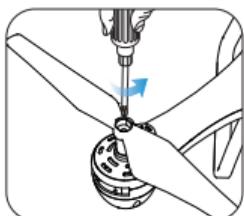


Removal: For propeller removal, use a screwdriver(provided) to rotate the screws counter-clockwise and remove the propellers

FLIGHT


All of the following operations in this manual use MODE 2.

PAIRING


① Long press the Power Switch Button to turn on the drone. The drone indicator start flashing.

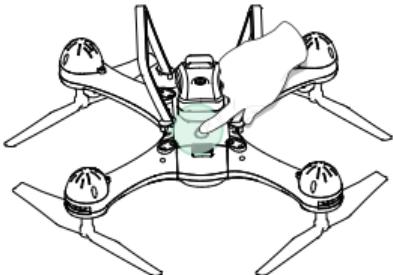

② Place the drone on a flat and level surface, with its head facing forward and its tail pointing towards the pilot.

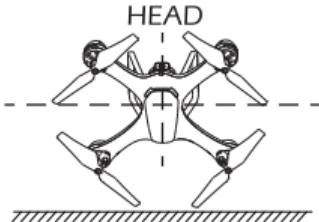


③ Long press the Power Switch to turn on the transmitter. Once the transmitter sends out a long beep and the indicator changes from blinking to solid, the drone will be paired with the transmitter.

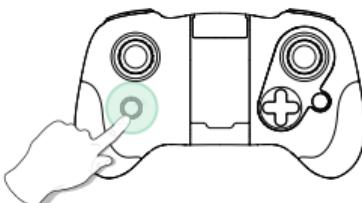

FLIGHT


CALIBRATE THE GYRO

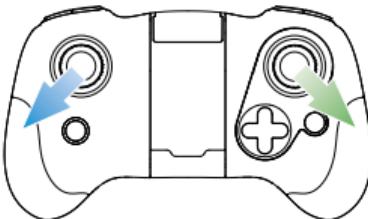

Push the left and right joysticks simultaneously to the outer, lower corners to calibrate the gyro. The drone indicator will blink and turn solid, the transmitter beeps one time, indicating that the calibration is completed.

 **To ensure a stable flight, we suggest that the pilot calibrates the gyro every time after pairing the drone and after a crash.**

UNLOCK THE MOTORS

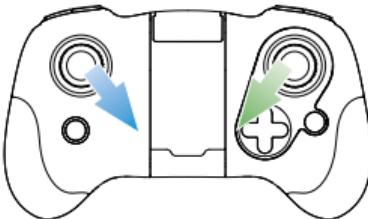

Simultaneously push the left joystick to the bottom right corner and the right joystick to the bottom left corner. The motors will rotate, and the drone is unlocked.

 **Pull the left joystick down to the bottom for 2 seconds, and the motors will stop spinning. The drone is thus locked.**