



Instagram:
Puremic Home Karaoke



Facebook:
Puremic Home Karaoke

Shanghai Loostone Information Technology Co., Ltd.
Songjiang Sij Park, Shanghai,China

www.loostone.com

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: 2A7ZR-PWM4Z-Q2 (Microphone)
FCC ID: 2A7ZR-S2B01 (Speaker)

Safety Information

Thank you so much for purchasing Puremic S2 karaoke speaker system. Before using Puremic S2, please read this manual carefully. Pay attention to the safety of use, correctly operated to avoid unnecessary losses.

Warning:

- 1.In case of smoke or other abnormal state of the machine, please pull out the power plug immediately and contact seller for repair to avoid fire and other hazards.
- 2.If there is water flow in the machine, please cut off the power supply of the machine and contact seller for repair to avoid electric shock and other dangers.
- 3.In case of foreign matter falling into the machine, please cut off the power supply of the machine and contact seller for repair. Never disassemble or reassemble the machine without authorization, otherwise the components of the machine will be damaged or there will be the danger of electric shock.

Matters Needing Attention

- 1.Do not place heavy objects on the top of the machine or on the power cord.
- 2.Do not use it at a high volume for a long time, because such a listening environment will irritate your ears, or even hurt your hearing.
- 3.Do not forcibly operate the switch, controller or connection line of the machine to avoid machine failure.
- 4.Read the operation manuel carefully to avoid misoperations.
- 5.Do not use pesticides, alcohol, paint thinner or similar chemical solvents to clean the machine, otherwise it may cause peeling or mixing on the surface of the chassis turbid corrosion, please wipe with a clean dry cloth.
- 6.If you do not use the machine for a long time, please remove the AC power plug.
- 7.This speaker should not be subjected to water droplets or splashes. Machine should not be placed on objects such as vases filled with liquid, otherwise water and other liquids careless spills may damage the machine.
- 8.Avoid place cosmetics, potions, insecticides, etc. on Speaker, otherwise water and other liquids may damage the cover or make inflammable and explosive articles cause damage to the machine when heated.
- 9.Avoid forcibly pulling the bending power cord and other components. To move the unit, unplug the power supply first.
- 10.The disconnecting device of this product is the power plug. Easy operation should be maintained.

Warranty Information

1-year Limited Warranty for Manufacturer' s Defects.

During the warranty period, parts necessary will be provided free of charge to make the product capable of being operated for its ordinary purpose. This warranty does not include transport, delivery or handing charges incurred in the transportation to and from the seller.

Limitations of the Warranty

This warranty is effective only for the ORIGINALLY PURCHASE and not for resale. Therefore under circumstances, rights under this warranty are not assignable.

This warranty will not apply to any failure due to any of the following:

- 1.Improper maintenance or repair, including the installation of parts of accessories that do not conform to the quality and specifications of the original parts.
- 2.Misuse, abuse, neglect and improper installation.
- 3.Usage of wrong electrical supply/voltage.
- 4.Usage not in accordance with the instruction manual.
- 5.Accidental or intentional damages.
- 6.Corrosion rust or stains.
- 7.Normal wear and tear.
- 8.Breakdowns caused by other appliances.
- 9.Damages due to unsuitable packaging and /or shipment method.
- 10.Damages due to natural disasters or acts of war or public disturbances.
- 11.Repairs or alterations by an unauthorized agency.

PUREMIC

 


PUREMIC KARAOKE SPEAKER SYSTEM


Please read this Manual carefully before use it.

V1.0.0

Packing List

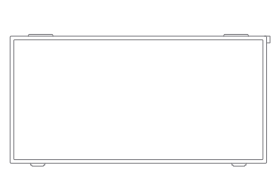


Speaker

 

Wireless Microphone



 
Manual



Power Adapter




 Microphone Slip Ring



HDMI

 Microphone Key Description

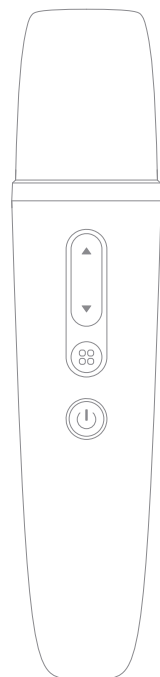

Volume
Press to adjust mic volume

Sound Effect


Power
Press and hold to power off,
press once to power on

Microphone Indicator Light

Indicator Light Description

Solid Blue	Connected
Solid Red	Low Power
Flashing Green in Dock	Microphone is charging
Solid Green in Dock	Microphone fully charged

 Speaker Functions

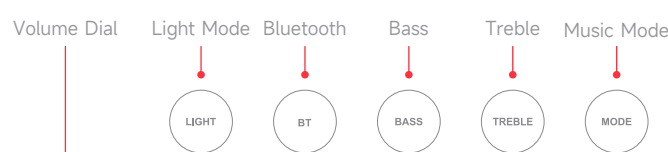


NFC Detection

Power Switch


Rear Interface

 Connection Ports

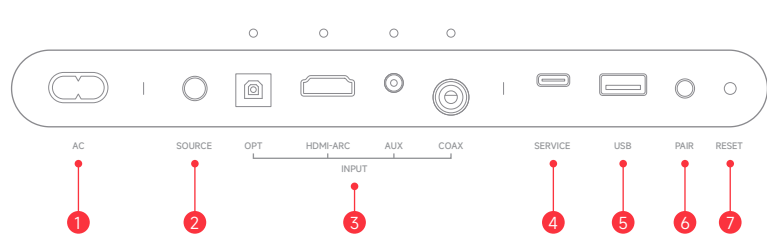

- 1 AC power (100-220V~ 50/60Hz)
- 2 Source selection button
- 3 Optical connection, HDMI (ARC), 3.5mm Aux connection, Coaxial connection
- 4 Service port. (for servicing only)
- 5 USB-A connection. (for firmware updates and servicing only)
- 6 Microphone pairing button
- 7 Speaker reset button

 How To Use

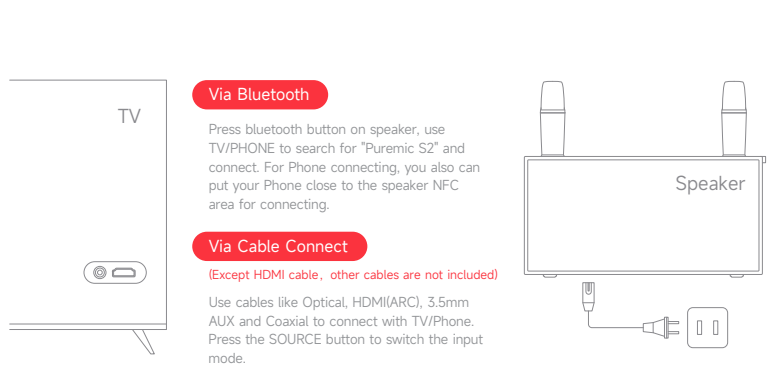

Via Bluetooth

Press bluetooth button on speaker, use TV/PHONE to search for "Puremic S2" and connect. For Phone connecting, you also can put your Phone close to the speaker NFC area for connecting.

Via Cable Connect

Use cables like Optical, HDMI(ARC), 3.5mm AUX and Coaxial to connect with TV/Phone. Press the SOURCE button to switch the input mode.

Microphone Charging

Power on the speaker Puremic S2, and place the microphone into the dock for charging. A flashing green light indicates the microphone is charging. A solid green light indicates the microphone is fully charged. After a while the indicator light will turn off.

S2 Speaker Parameters

Product model	S2B01
Working voltage	100 ~ 220V
Channel	2.1
Bluetooth	5.0
Bluetooth name	Puremic S2
Loudspeaker unit	6.5" bass unit x 1 3.0" treble unit x 2
The speaker power	120W
Frequency response range	45-20K Hz
The input parameters	100-220V~ 50/60Hz
The speaker impedance	100
The communication distance	10m (open and barrier free environment)
ProductsSize	450*220*220mm

S2 Microphone Parameters

Working voltage	3.5-4.2V
Battery capacity	1000mAh polymer lithium battery
Working current	68mA
The input pecifications	5V≡1A
Pick up way	Moving coil
Directivity	Heart shape
Sensitivity	-52dB±3dB
Output impedance	600Ω
Signal /Noise ratio	>75dB
Frequency response	50Hz~14KHz
Transmission power	12dBm
Communication distance	10m (open and barrier free environment)
Products size	173mm*438.8mm

Troubleshooting

The power indicator light of microphone is not on, ensure the microphone battery is charged.

Microphone does not emit sound

1. Check if the microphone or speaker volume is not at the lowest.
2. Check if the microphone is turned on (the indicator light should be solid blue).
3. If indicator light is not blue, try to pair the microphone with the speaker again.

Microphone can't be charged

1. Check if the speaker is powered on.
2. Check if there are any foreign objects in the dock.
3. Test the microphone charging in another dock to determine if it's a microphone or dock issue, then request assistance from the seller.

Speaker does not emit sounds

1. Check if the speaker is powered on.
 2. Check if the speaker volume is not at the lowest.
- For more information please visit our INS & Facebook account.