

plusOne / myplusOne.com

6731 Luxe Vibrating Plug Instruction Manual

221007

Print Production

5x3" Card

All colors are CMYK

- Uncoated Cardstock

- Bleed

- Double sided

- Accordion Fold

= Indicates fold

Back

plusOne®

luxe vibrating plug

**cleaning:**

Clean thoroughly with mild soap and warm water, before and after each use.

**storage:**

Store in a cool dry place separately from other sex toys; sex toys of different material can damage each other if left in contact.

**quality:**

This product is manufactured using body-safe silicone that is harmless to the human body; free from phthalates, BPA and latex.

**special instructions:**

Do not turn on while charging and/or cleaning. While charging the light will flash; the light will turn solid when fully charged. **Low battery alert:** Light will flash rapidly when battery is running low. Use only with 5-volt USB wall adapter (standard mobile phone charger). Allow 90 minutes for a full charge. Use water-based lubricant only.

**warnings:**

Discontinue use if there is any discomfort for you or your partner. Do not expose device to water while charging.

for complete user manual & more information on ways to use your new luxe vibrating plug:

visit [myplusOne.com](http://myplusOne.com)

or follow us:  @\_myplusOne

**FCC COMPLIANCE STATEMENT:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

**FCC Radiation Exposure Statement**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Front


plusOne®

luxe vibrating plug



Outside

**product overview**

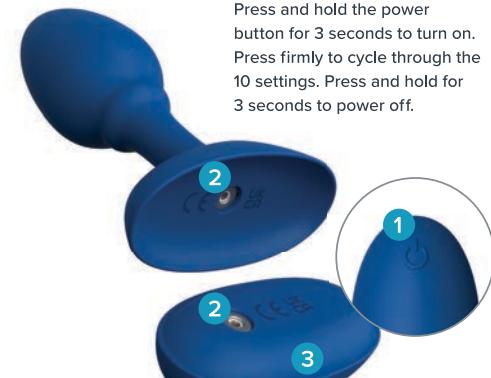

**1) power button**

Press and hold the power button for 3 seconds to turn on. Press firmly to cycle through the 10 settings. Press and hold for 3 seconds to power off.

**2) charging ports**

To charge both products simultaneously, attach the twin-headed magnetic charging cable to the charging contacts on the vibrating plug and remote.




**3) remote**

The remote magnetically attaches to the bottom of the vibrating plug. Use the plug with the remote attached or detach the remote to control vibrations from up to 8 feet away.

The battery shall be disposed in accordance with the local laws and regulations. If possible please recycle it. Users shall not take out or replace the battery by themselves; doing so may damage the product.

**INCLUDES:** luxe vibrating plug, remote control, charging cable, & instruction manual

**how to charge**

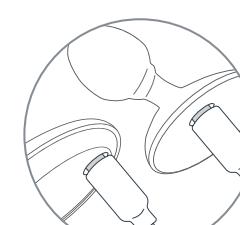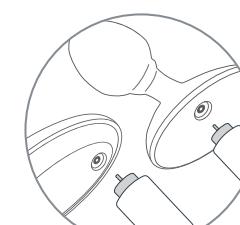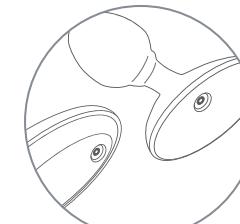


1. The charging contacts are the small metal circles located at the bottom of the vibrating plug and remote.


2. Line up the magnetic charging heads with the contacts on the vibrating plug and remote.

3. The cables will magnetically attach into place. The LED lights on the vibrating plug and remote will pulsate slowly to indicate charging.


**ways to use**

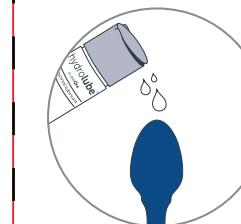

**get started**  
Apply plusOne hydrolube™ personal lubricant to the rounded part of the luxe vibrating plug. We recommend only using water-based lubes.

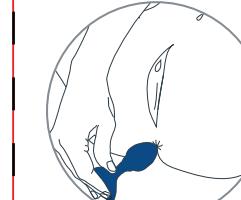

**find the right spot**  
Insert the luxe vibrating plug by relaxing your muscles and slowly sliding it into place.  
**REMEMBER:** the plug handle must stay outside the body for easy removal.

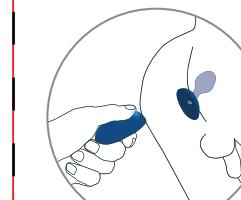

**control the experience**  
Turn on the luxe vibrating plug and explore the 10 high-performing vibration settings to reach the ultimate pleasure sensation. Have a partner use the remote to control the vibrations up to 8 feet away.

Inside