

Bendable wearable with remote

cleaning:

Clean thoroughly with mild soap, or or plusOne® foaming device cleaner, and warm water, before and after each use.

storage:

Store in a cool dry place separately from other sexual wellness devices; sexual wellness devices of different materials can damage each other if left in contact. Includes storage bag to hold the device, remote, and charging cord.

quality:

This product is manufactured using body-safe silicone that is harmless to the human body; free from phthalates, BPA and latex.

warnings:

Discontinue use if there is any discomfort for you or your partner. Do not expose device to water while charging. Do not use while charging. Use only with provided plusOne® charging cable.

special instructions:

Do not turn on while charging and/or cleaning. The light will flash while charging, then turn solid once fully charged. When the battery's low, the light will flash rapidly. Use only with 5-volt USB wall adapter (standard mobile phone charger). Allow 90 minutes for a full charge.

two year limited warranty:

Your new plusOne products carry a warranty against manufacturing defects for two years from the date of the original purchase. plusOne will, at our option and upon submission of a valid proof of purchase within the warranty period, repair or replace the product free of charge. For assistance or for issues related to performance, damages, warranty, regular maintenance or customer feedback please contact plusOne toll-free at (800) 514-2546, Monday – Friday from 8:30 am until 5:30 pm EST or email us at info@myplusOne.com

DON'T MISS YOUR EXCLUSIVE WELCOME OFFER



scan to
learn more

unlock on myplusOne.com
when you sign up via email to
receive news and promotions

love your purchase? let us know!



Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

Bendable wearable with remote



instruction manual

Outside

product overview



1) power buttons

To turn the device and remote ON/OFF, press and hold the power button for 3 seconds. The device and remote must be turned ON/OFF independently of one another. When both the device and remote are ON, they should automatically connect. Toggle through the 10 vibration settings by pressing the power button on either the remote or the device

2) charging port

Attach the magnetic charging head with the charging contact on the device or remote.




3) remote control

Control the device from up to 8 feet away.


The battery shall be disposed in accordance with the local laws and regulations. If possible, please recycle it. Users shall not take out or replace the battery by themselves; doing so may damage the product.

INCLUDES: flexible wearable vibe, remote control, storage bag, charging cable & instruction manual

how to charge

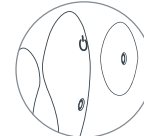

1. The charging contact is a small metal circle located on the front of the device and back of the remote.

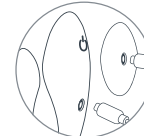

2. Line up the magnetic charging head with either charging contact. The device and remote charge independently of each other.



3. The cable will magnetically attach itself in place, and the LED light will pulsate. The light will turn solid when fully charged.

for complete user manual & more information on ways to use your new flexible wearable vibe with remote:

visit myplusOne.com

or follow us @_myplusOne

ways to use



customize the fit

Gently bend the wearable vibe in the shape of an 'L'. Insert the smaller end of the device into the vagina and adjust it against the G-spot. Bend and adjust the neck, placing the larger end on the clitoris. Gently adjust the product so it molds comfortably to the body. Use with or without remote for hands-free solo play.



release control

Invite your partner to take control. Ensure both device and remote are powered on and allow your partner to use the remote control. Cycle through different vibration patterns or use during penetrative sex for the ultimate sensation.



take it with you

Heading out on the town for a date night? Allow the flexible wearable vibe to be your ultimate plusOne®. Whether you are enjoying dinner, or a movie, empower your partner and have them use the remote control. This device will enhance date night and provide the most exciting foreplay.

Inside