

MINISO

PRODUCT MANUAL

Wireless Earbud X29


PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE
PRODUCT AND KEEP IT IN A SAFE PLACE.

CATALOGUE

| | |
|-------------------------------------|----|
| 01 How to wear headphones correctly | 5 |
| 02 Product Introduction | 9 |
| 03 Touch Operation | 12 |
| 04 Charging compartment operation | 21 |
| 05 Item list | 33 |
| 06 Warranty Statement | 36 |

Welcome to MINISO


Clip on wireless earphones

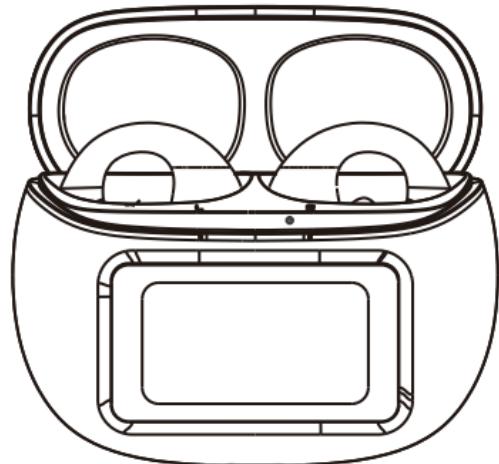


Take out and pair it

When using for the first time, take out the left and right earphones at the same time. When the white light and ice blue light of the earphones flash alternately, the earphones will enter the automatic pairing mode.


How to wear headphones correctly

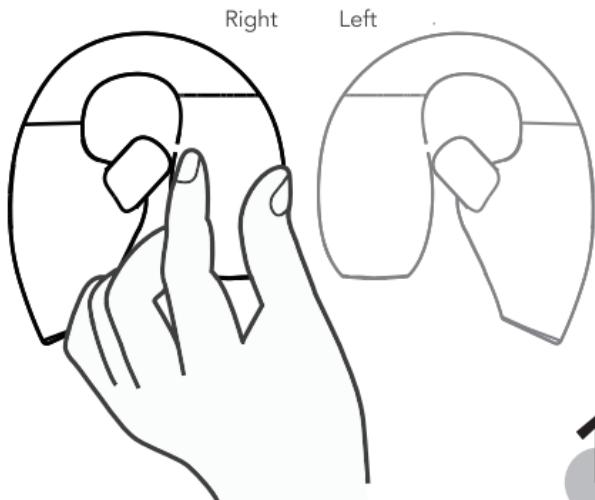

1

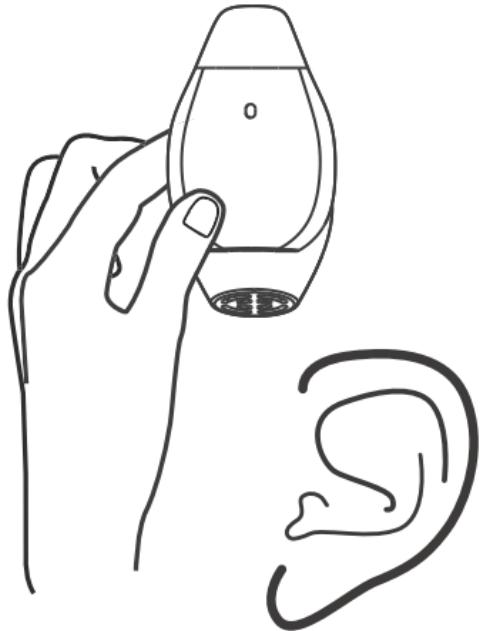

2

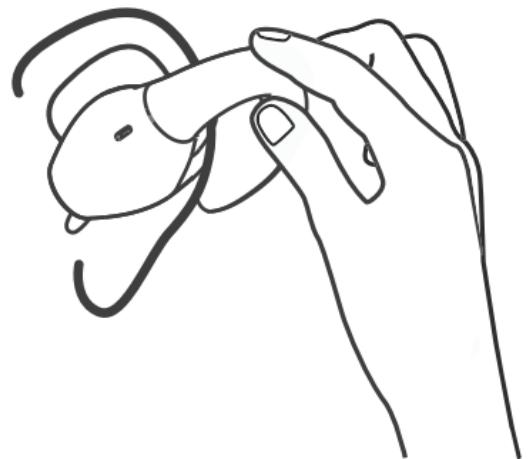


3




4

Product Description

Bluetooth LED
Display light

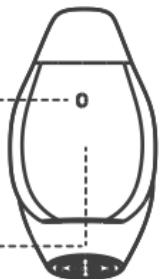


Multi function key
touch position

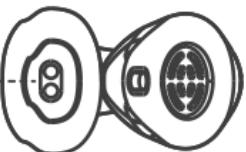

Charging Contacts

Specification of Product

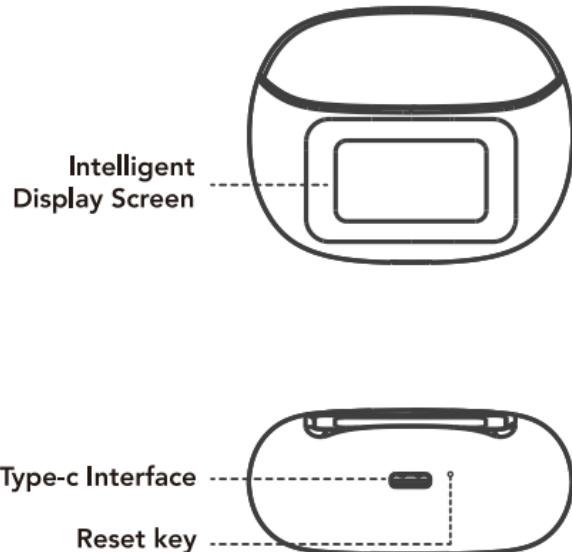

Model of Product: X29

Version: V5.4

Effective Distance: Approx. 10m

Speaker Diameter: ϕ 13.2mm

Impedance: 16Ω

Frequency Response: 20Hz-20KHz

Microphone Sensitivity: -42dB \pm 3dB

Earphone Input: 5V \sim 30mA

Charging Case Input: 5V \sim 350mA

Charging Case Output: 5V \sim 60mA

Earphone Battery Capacity: 30mAh

Charging Case Battery Capacity: 350mAh


Duration: Approx. 3.5 H (Earphone)

Earphone Charging Time: Approx. 1 H


Charging Time of the Charging Case: Approx. 1.5 H

Touch Operation

Connect with Bluetooth device

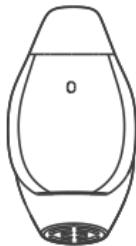

Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "MINISO-X29". Click the pairing name to pair.

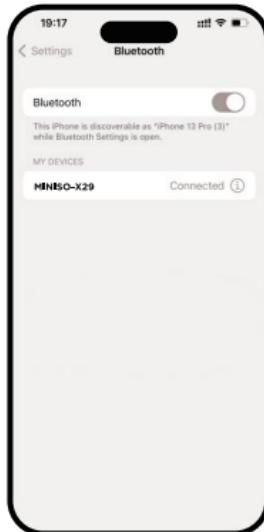

Indicator Light Description




- When the headset is turned on: the white light and the ice blue light flash alternately

- When the headset is turned off: the white light flashes 3 times quickly and then goes out

- Pairing status: white light and ice blue light flash alternately

- Connection successful: no light

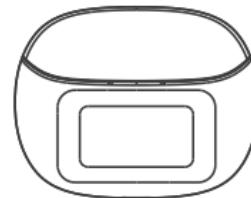

- Headphone Charging: The charging case display screen shows the battery level, and when fully charged, the charging case screen shows 100%

- Charging of the Charging case: The charging case display screen shows the battery level, and when fully charged, the charging case screen shows 100%
*Note: After the charging status is displayed on the display screen of the charging compartment, it will automatically turn off after about 15 seconds of inactivity. Sliding can enter the display screen.



Power On

Auto power on: The Earphone are taken out of the charging case, the Earphone will be powered on, with the prompt sound of "Du".
Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du".

Power Off

Auto power off: Put the Earphone in the charging case, the Earphone will be powered off, with the prompt sound of "Du".

Manual power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of "Du".

Note: After powering on, if it is not paired with a Bluetooth device for 3 minutes, it will automatically shut down; If it is not connected to a Bluetooth device after 3 minutes, it will automatically power off after 3 minutes, with the prompt sound of "Du".

Once Press



Music mode



Play/Pause

Phone mode



Call Answer/End

Double Press



Music mode




Double press the right ear:
Volume up



Double press the left ear:
Volume decreases

Long Press

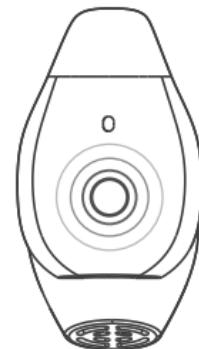

Wake up voice assistant




When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

Phone mode



Press and hold the left (or right) ear multi-function button for two seconds: call rejection

Triple Press

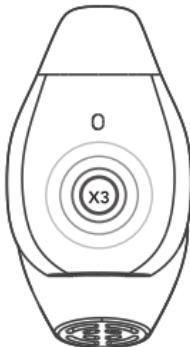

Music mode



Triple press on the left ear:
Previous song



Triple press on the right ear:
next song

*Note: When using one ear, when you click the left (or right) earphone triple-clicking, it will be the next song.

Clear Bluetooth pairing history


When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.



Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep"

Switch between game mode and music mode (Mono/Binaural operation)

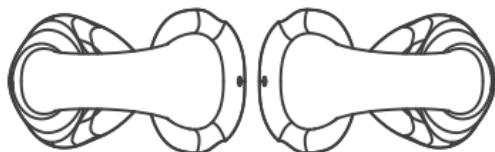

Game mode



Press and hold the multi-function button on the right ear for 2 seconds

Music mode



Press and hold again for 2 seconds

Note 1: When using one earphone, you cannot switch between game mode and music mode.

Note 2: The factory setting defaults to music mode

Charging compartment operation



Lighting up the display screen

Method 1: Open the charging compartment cover and the display screen will automatically light up.

Method 2: When the screen is off, click on the display screen to turn it on. Turn off display screen.

Automatic shutdown: After turning on the screen for 30 seconds without operation, the display screen will automatically turn off.

Manual closing: Close the charging compartment cover and the display screen will turn off.

Lock screen function: Swipe the screen from top to bottom, pop up the lock screen interface, click the lock screen flag to lock the screen and close it.

Note 1: First time use, please activate power on

Operation method: Charge and activate the charging compartment through the TYPE-C interface.

Tip: This product defaults to shutdown mode when it leaves the factory, and it needs to be activated and turned on by charging for the first time.

Note 2: In the case of a stuck charging compartment, in non charging mode, press and hold the Reset button at the bottom for 1 second to forcibly restart the charging compartment.


Icon Introduction




Bluetooth status

White status: The charging compartment is not connected to the headphones
Green status: The charging compartment is connected to the earphones, but the earphones are not connected to the phone
Blue status: The charging compartment is connected to the headphones, and the headphones are connected to the phone.

Connection prompt

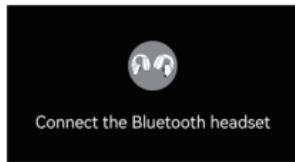

①

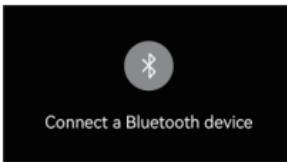

②

No.①: This interface represents the use of this function, which requires the charging compartment to be connected to the headphones.

No.②: This interface represents the use of this feature, which requires headphones to be connected to Bluetooth devices on the phone or computer.

Battery status



Charging status indicator icon for the charging compartment

Green: Charging in progress
Blue: fully charged
Red: Low battery
White: Normal battery level, not charging



Headphone charging status indicator icon


Green: The earphones are charging in the charging compartment
Blue: fully charged
White: The headphones are not charging

Lock screen interface




Unlock: Slide to the right to unlock the screen

Music interface

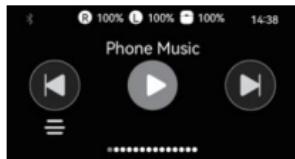


◀ Previous Song ▶/⏸ Play/Pause ▶ Next Song ⌂ lyrics interface

Volume adjustment interface

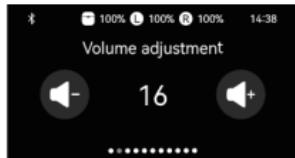


◀- Reduce volume,
minimum music is 0 ▶+ Increase volume,
maximum volume is 16

Equalizer interface

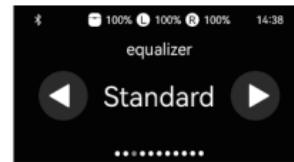

◀ ▶
Switch between different EQ sound effects:
Standard, Rock, Pop, Classic, Jazz

Space sound interface

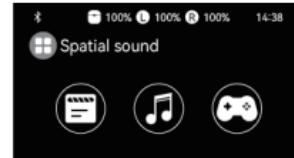

◀ Movie Mode ▶ Music mode ▶ Game Mode

Alarm setting interface




Switching requires setting the alarm time:
5 minutes, 10 minutes, 30 minutes, 60 minutes

Language switching interface




Click to switch languages from different countries

Brightness setting interface

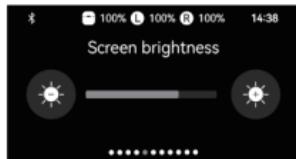


Click the left button to decrease the screen brightness;
Click the button on the right to increase screen brightness

Wallpaper switching interface

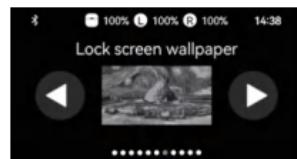


Click to switch between different lock screen wallpapers,
the current screen is the selected lock screen wallpaper


Find the headphone interface

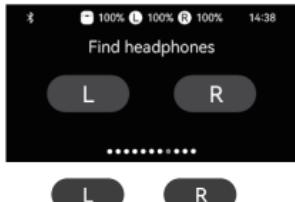

Click the L/R button, and the number ③ screen will appear

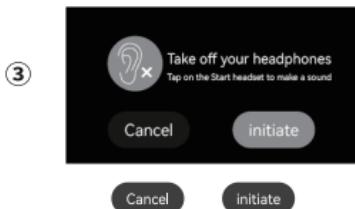


Click to cancel and exit this function,
Click to start, the number ④ screen will appear,
and the headphone speaker will start emitting sound

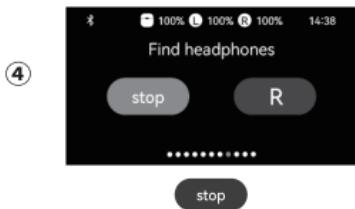


Click the stop button to stop speaking

Flashlight interface

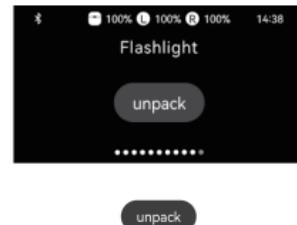

Click the button to turn on the flashlight,
the entire screen turns white and the brightness of the screen increases

Time setting interface

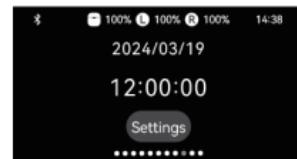


Settings

Automatic update: When the charging compartment, headphones, and phone are connected, the time on the phone will be automatically updated to the charging compartment

Manual update: Click the button to enter manual settings

Reset interface

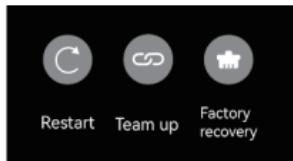

Restart the charging compartment



Two earphones are in the charging compartment.
Open the cover and click this icon to form
a team connection between the earphones.
Then, the charging compartment will automatically
form a team connection with the earphones



Disconnect the earphones from the phone
and clear the connection record

Incoming call interface




Hang up the phone



Answer phone calls

Lock Screen

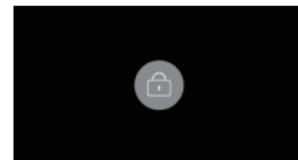


In the unlocked state, slide down on the main interface to pull
out this interface,
Click this icon, the screen will turn off, and if you do not
click the icon, swipe upwards to exit this interface.

Tiktok Page flipping and like function

This function is only available for use with TIKTOK software, and other software may not be able to use it.

This feature may have compatibility issues with some phones, and some phones may not be able to use it.

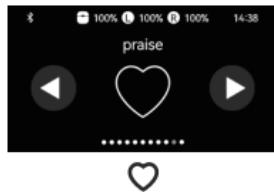

Click this icon, the current short video will be liked



Clicking on this icon will switch to the previous short video




Clicking on this icon will switch to the next short video

Photography function


This function is only available for taking photos with the built-in camera of the phone. Other shooting software may not be able to use it.

This feature may have compatibility issues with some phones, and some phones may not be able to use it.

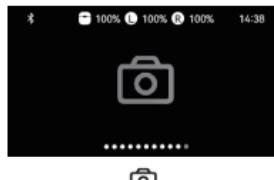


Open the phone camera, click the button, and the phone will start taking photos


Item list

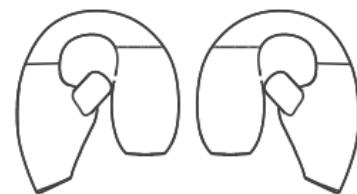


Headphones *1

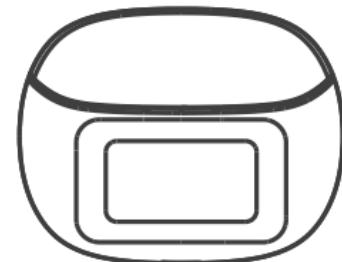

Charging case *1

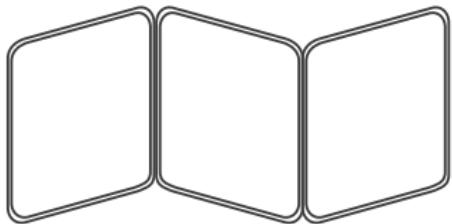

Instruction *1

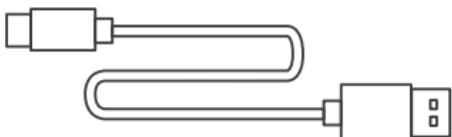

Charging cable *1

FCC ID: 2A83K-X29

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP

Company name: UUX GROUP INC
Address: 36 South 18th Avenue, Suite A Brighton,
CO USA 80601
Contact Person: Jack Fu
Email: uuxforever@outlook.com
ContactPhone: (213) 375-3998

Warranty statement

MINISO

product warranty card

| | | | | |
|---------------------------|----------------|---------|---------------|--|
| Product number | | | SN number | |
| User info | name | | Purchase date | |
| | telephone | | | |
| | address | | | |
| | Invoice number | | | |
| Sales unit information | name | (stamp) | | |
| | address | | | |
| | telephone | | | |

The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;
2. Altering of the warranty cards and product code do not match the product itself;
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
5. Zippers and tower buckles are damaged due to excessive force;
6. Off-line or tear caused by overloading;
7. Any damage caused by sharp objects;
8. Products with signs of burn damage or water logging;
9. Damage caused by unauthorized dismantling and modification;
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

Service supervision hotline: 400-812-0102

MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.

After-sales email: 7@hifi-earphone.com



Warranty Policy

Disclaimer:

This manual does not come with any form of warranty, position expression or other implication. The products, specifications and information mentioned in this manual are for reference only, and the content will be updated on the website at any time without prior notice.

Warranty statement:

The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve(12) months from the date of your purchase (the "Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period (a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen(13) months from the product production date.

If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

Guidelines for safe and effective use

Note: Please read this information first before using your Bluetooth headset. If the user makes modifications or modifications to this Bluetooth headset without permission, the user will lose the right to continue to enjoy the services included in the device

① Electromagnetic interference:

Electronic devices: To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.

Civil Aviation: After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.

② Safety matters:


Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.

Children: Do not let children play with Bluetooth headsets. Some of the small parts are detachable and may be swallowed and cause danger.

Important safety tips

- Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.
- This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type. battery usage.
- After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.
- During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.
- When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery is damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.

Enjoy the company of
MINISO

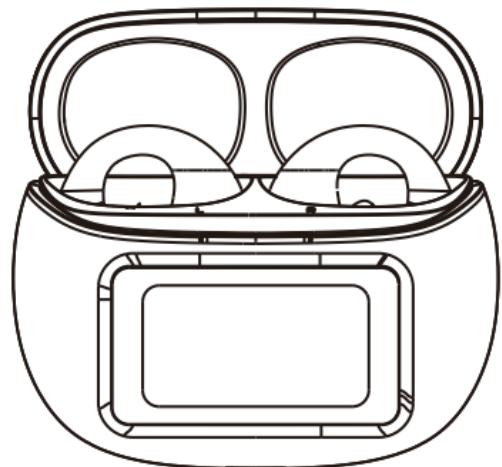

Creating sound
to live with

Copyright@2024 MINISO Group affiliated
companies and its licensors. All rights reserved