


 **User Manual**

Hardware connection schematic diagram

2.4G Bridge

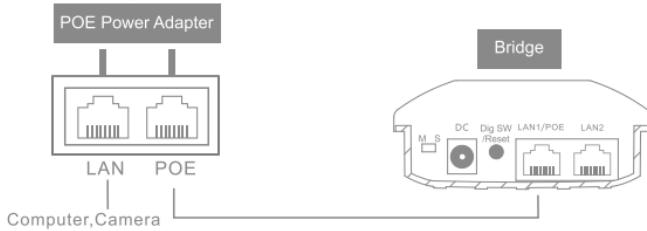

Interface Descriptions

DIP Switch: To adjust the transformation between the main AP mode and the secondary AP mode of the bridge.

DC: Power interface, 12V 1A DC power interface.

Digital Switch/Reset: Both digital switch and reset button, short press the button when electrifying, the numeric value of the digital tube will be added one and press 15 seconds, the device will be restored to the factory setting.

2.4G Bridge

LAN1/POE: This is a data transmission port, and it is also a power port. When the device works in the bridge mode, the interface acts as a LAN port function. When the device works in the route mode, the interface acts as a WAN port function. This interface is used to connect the POE interface to the POE power.

LAN2: This is a LAN data transmission port which can connect computers, cameras, switches and other devices.

Indicator light state description

2.4G Bridge

SIG1,SIG2 SIG3,SIG4	Signal indicator: Master AP: Output power indicator lamp. When the output power is less than 17dbm, the SIG1 light lit, the output power is between 17~19dbm, the SIG1-SIG2 lights lit, the output power is between 20~22dbm, the SIG1-SIG3 lights lit, the output power is at 23dbm and above, the SIG1 to SIG4 lights lit. Subordinate AP: Signal connection intensity indicator Running flowing water light when connection fails. When the connection is successful and the signal intensity in the range of 0~65dbm, the SIG1 to SIG4 lights lit, the signal intensity in the -66~-75dbm, the SIG1 to SIG3 lights lit, the signal intensity in -76~-85dbm, the SIG1 to SIG2 lights lit, the signal intensity in the -85dnm and below, the SIG1 light lit.
LAN1/LAN2	Port state indicator lamp: When the wire is connected, it is always bright and goes out when it is broken
	The lights flicker when the bridge is running normally.
	Power indicator lamp□When the power is electrified, the lamp is always bright and goes out when it is broken.
	Digital tube indicator lamp□Short press "digital switch / reset" button, each digital tube value will add one (0-9-A-F cycle).

Fast pairing of digital switch

One to one pairing method

1. Dial a bridge to "M" and another bridge to "S".
2. Short press "Dig SW/ Reset" button, each digital tube value will add one (0-9-A-F cycle).
3. The paired bridge is set to the same value and can be paired successfully.

One to multiple pairing method

1. Dial a bridge to "M" and the other bridge to "S".
2. Short press "Dig SW/ Reset" button, each digital tube value will add one (0-9-A-F cycle).
3. The paired bridge is set to the same value and can be paired successfully.

Digital tube and wireless channel comparison table

2.4G Bridge

Value	0	1	2	3	4	5	6	7	8	9	A	b	C
Channel	1	2	3	4	5	6	7	8	9	10	11	28	32


Note:

1. The default channel bandwidth of the wireless bridge is 40MHz;
2. The number of channels supported by some wireless bridges will vary. Please refer to the actual product.

Setting up a bridge in a browser

Computer settings

1. Open the computer--Right click [Internet] – [Attribute] – [Change adapter settings].
2. Right click of the mouse click [Local connection], Select [Attribute]
3. Double-click the [Internet protocol version 4 (TCP/IPv4)] in the connection properties dialog box project(as show in the left below).
4. In the [Internet protocol version 4] dialog box, choose [use the following IP address] and set the IP address to 169.254.254.X (X is any number between 1-253), and the subnet mask is set to 255.0.0.0 (as show in the right below). Finally, click [OK] and quit.

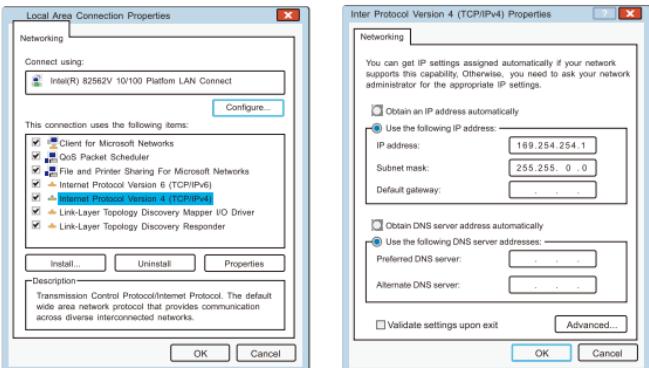

Login management interface

The default mode of the device is the bridge mode, open the computer browsers, after entering its address 169.254.254.254, the bridge device list will be displayed, and clicks on the [login] button to log in to the device.

Note: Some wireless bridges do not have “Bridge Device list” function. Please refer to the actual product for details.

Bridge Device List						[Global/中文]
ID	MAC	IP address	Wireless mode	Status	Operate	
1	18:40:44:00:00:02	169.254.254.111	Server Mode	Online	Login	

The username and password of the web management platform are all **admin**, click the [login] button to log in to the device.

Web Management Platform [Global/中文]

Username: admin

Password:

Remember password [Login](#)

Network settings

Configuring the mode and bridge interface according to the network usage of the site. [Bridge mod] refers to the wireless transmission of data by the device. [Route mode] refers to the device's NAT conversion and wireless transmission of the data.

Web Management Platform

Network [Global/English]

Mode: Bridge Mode Route Mode

Bridge Interface

Obtain IP address: DHCP Client Static Address

IP address: 172.16.0.10

Netmask: 255.255.0.0

Gateway: 172.16.0.1

DNS1: 114.114.114.114

DNS2:


Description: The device supports bridge mode and route mode in the “M” AP mode, but only support the bridge mode in the “S” AP mode.

Wifi settings

Note: Some wireless bridges do not have this function. Please refer to the actual product for details.

The default WiFi name of the 2.4G Bridge is Brap-2G-XXXX, the password is 88888888.

Computers, mobile phones, and other terminals can be wirelessly connected to the device through this signal. Remarks XXXX is the last four bits of the bridge's MAC address x

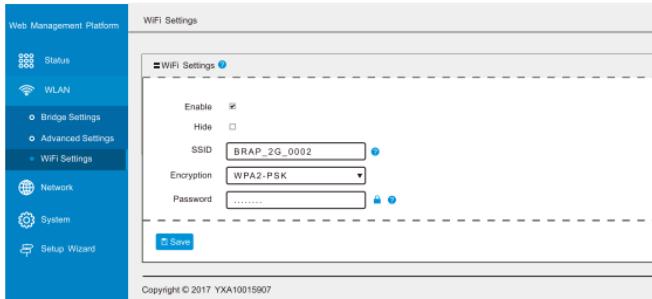

Description: The device launches the WiFi signal in the main AP mode. In the secondary AP mode, the WiFi signal is transmitted only after the bridge pairing is successfully connected.

Bound cloud end

Note: Some wireless bridges do not have this function. Please refer to the actual product for details.

If the device is connected to the Internet, you can configure the 【bridge interface】 information. After the device is connected to the Internet, it can be remotely managed by the cloud.

1. Login “www.tianwifi.net” to apply for a cloud account.
2. Fill in your cloud account in the "username" column.
3. The server address bar is filled in “www.tianwifi.net”
4. The device description bar suggests filling up the installation location for later management.

Click the 【Save】 button, prompting the 'connection state: Connected to www.tianwifi.net', which indicates that the device has successfully bound the cloud

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.