

MAXTASY



P-SPOT MASTER+

USER MANUAL

 
**ANATOMICAL AND
PLEASURE FOCUSED REMOTE
CONTROL PROSTATE MASSAGER
WITH ADJUSTABLE SHAFT**

#Cum Harder


Congratulations on your purchase of P-Spot Master PLUS – unique anatomically precise prostate massager using two intelligent motors, in perfect sync, stimulating the prostate and the perineum at the same time.

Please take a moment to read through this user manual before using the P-Spot Master PLUS.

YOUR P-SPOT MASTER+

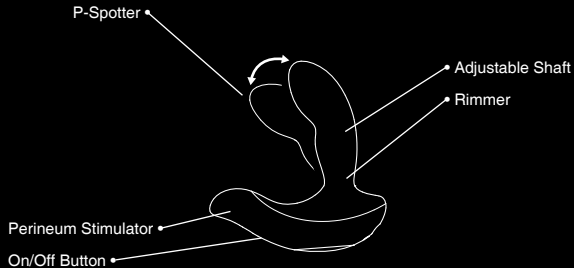

REMOTE CONTROL

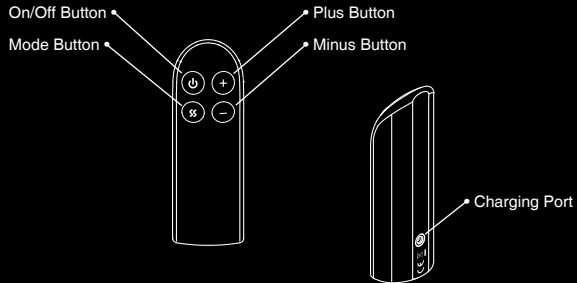 

CHARGING

 
Make sure to charge your P-SPOT MASTER+ together with the remote before the first use.

Charging time
P-SPOT Master+:
90min

Running time
P-SPOT Master+:
80min

Charging time
Remote:
60min


Running time
Remote:
12hrs

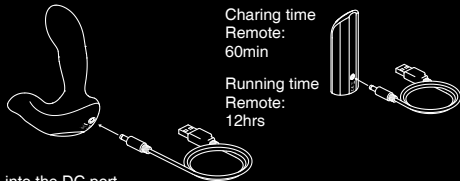

Insert the DC plug into the DC port.
LED will start flashing slowly indicating charging.
Once fully charged LED stops flashing.
Charge at least once every 6 months to protect and extend battery lifetime.

IMPORTANT: Use only original USB charging cable provided with your MAXTASY product. USB adapter must not have higher charging current than 1A (one ampere).

 
HOW TO USE

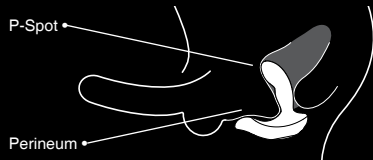


1. Wash your massager with soapy water before and after every use.
2. Apply enough water based lubricant on the tip of the massager and also on your anus
3. Lie on your side with lower leg straight and top leg on your stomach
4. Slowly insert the massager, breathe deeply and push the massager gently until the Perineum Simulator touches your perineum.
5. Bendable shaft allows to hit your P-spot with sniper's precision, no matter your body type or level of experience.

IMPORTANT: Being relaxed is very important for a pleasurable anal play, stop anytime you feel a tension or discomfort.

 POSITION GUIDE

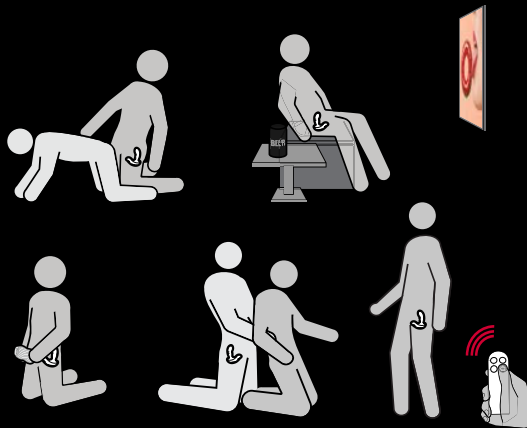

BUTTONS' CONTROL WITHOUT THE REMOTE

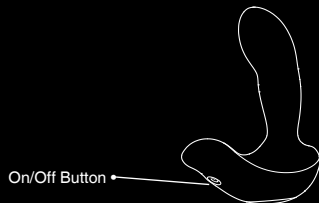 

- Press On/Off Button = vibration starts
- Press On/Off Button again = move between vibration modes (total of 10 vibration modes)
- Press and hold On/Off Button = vibration stops

 
BUTTONS' CONTROL WITH THE REMOTE




- Press and hold On/Off Button on the main unit until it lights up = product is stand-by mode
- Press and hold On/Off Button on the remote until it lights up = remote control is activated
- Press On/Off Button on the remote = vibration mode 1 turns on
- Press Mode Button on the remote = move between vibration modes (total of 10 vibration modes)
- Press Plus Button on the remote shortly once = vibration intensity increases (total of 10 vibration intensity levels)
- Press Minus Button on the remote shortly once = vibration intensity decreases
- Press On/Off Button on the remote shortly = vibration stops
- Press and hold On/Off Button on the remote = remote control is de-activated and light turns off

TIP: The remote-control range is 5meters

VIBRATION MODE DIAGRAMS

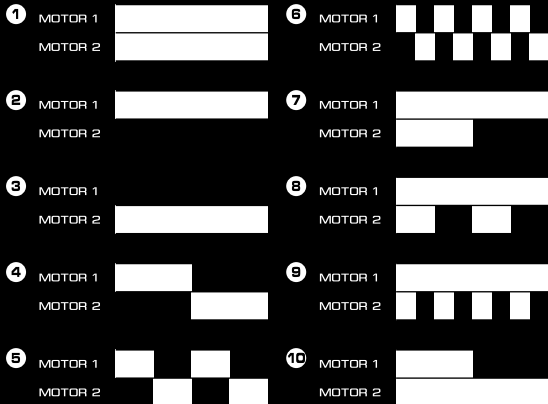

CLEANING

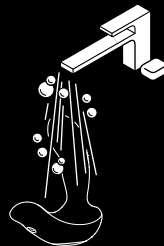 

The material is non-porous so it can be cleaned easily. Wash the massager in soapy water before and after every use, including the first. The product is completely water proof. You may use also a good quality toy cleaner. Do not use abrasive soap and easy to clean. Wash with a non-abrasive soap and hot water and allow to air dry.

IMPORTANT: Never try to sanitize the massager in boiling water.

TIP: For more details visit www.maxtasy.com/howtouse

THE WORLD OF MAXTASY

**SUCTION
MASTER**



**STROKE
MASTER**



**VIBRATION
MASTER**



**SUCTION
MOUNT**



 
**STRAP
ON**



**WARMING &
DRYING DOCK**



**P-SPOT
MASTER**



**SHOW
MASTER**



**GRIP
MASTER**



**PERFORMANCE
RINGS**

WWW.MAXTASY.COM

TROUBLESHOOTING

Product does not turn on	Charge the product fully
	Disconnect the charging cable
	Turn on the product with On/Off Button
Product is not charging/light is not flashing	Plug the DC cable in the DC port on your toy
	Plug the USB cable in the USB adaptor
Remote does not work	Make sure the main unit as well as the remote are in stand-by mode, both On/Off buttons are light up
	Read BUTTON'S CONTROL WITH THE REMOTE

SPECIFICATION

Material:	prostate massager silicone, remote control ABS
Dimensions:	Height 4 ½ " (115mm) Width 4 ¼" (107mm)
Weight:	108 g (Realistic version)
Battery:	Li-Ion 400 mAh 3.7V
Noise Level:	< 45dB
Charging Time P-Spot Master+:	90min
Running Time P-Spot Master+:	80min
Charging Time Remote:	60min
Running Time Remote:	12hrs
Remote Range:	5meters
Remote Frequency:	433MHz

WARRANTY

Your product is covered by one year warranty valid from the date of purchase.

Please note the warranty is rendered void if:

- 1) Quality Checked Seal was removed
- 2) There is no valid proof of purchase
- 3) The damage was caused by dropping, stepping on or any other accidental damage after purchase
- 4) The product was modified or dismantled
- 5) The outer housing case was submerged in liquid

For detailed warranty policy and/or to make a claim

visit www.maxtasy.com/warranty

SAFETY & WARNINGS

Keep away from direct sunlight and humidity.

Those who use a pacemaker and/or have diabetes, phlebitis, thrombosis or any other health conditions, should consult with a medical professional regarding the risk of blood clots before using the product.

If you notice any visible damage, turn the product off and stop using it immediately.

Do not share the product with others.

This is an adult novelty product and children should not play with it.

This product is for novelty use only. The manufacturer holds no liability.

Do not use alcohol-, acid- or alkali-based cleaners. Always clean the inner sleeve with warm soapy water and the outer housing case with a damp cloth or tissue.

Ensure that the inner sleeve is fully dry before installing it back in the outer housing case. Do not allow water inside the outer housing case.

IMPORTANT: If you feel any discomfort when using the product, turn the product off and stop using it immediately. Contact a medical professional.

Designed and developed in California U.S.A.

Manufactured for Maxtasy in China

FCC ID 2A84DMAXPSPMASPLUS

WEBSITE: www.maxtasy.com

SUPPORT: support@maxtasy.com



FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.