 




Candy TV

User Manual



YouTube SEARCH:
XFa-DT201AF



CONTENTS

1. Important Notes -----	01
2. General Specification-----	02
3. Product Appearance-----	03
4. Product Description -----	04
5. Start Up -----	07
6. Main Menu -----	08
7. DTV Interface-----	09
8. Bluetooth Interface -----	12
9. MEDIA Interface -----	14
10. Setting Interface-----	20

Important Notes: READ BEFORE USE

- Before using this Candy TV,It is important that you read and follow all instructions carefully in this manual to ensure you own safety and get the best experience of our product.
- Highly recommended to use a fast charging charger of 18W or above to ensure the best charging experience. It supports a variety of fast charging protocols.
- Do not place heavy objects on top of the device.Do not place the device in a place exposed directly to sunlight or anywhere with high humidity.Do not subject the device on a strong vibration environment to avoid being dropped accidentally.Do not open the case at all time to prevent electric shock.Do not use this equipment in thunderstorms to avoid lightning strike.
- Before updating the system,please ensure that the remaining battery is more than half.Do not power off the machine or perform other operations during the system upgrade period.(If there is an abnormal power failure during upgrade process,the machine will turn on abnormally or/and will not able to turn on again)

General Specification

 
- Frequency:57MHz~803MHz
- Antenna:Sensitivity ≤-83dBm
- Antenna Impedance:50Ohm
- Video Decoder:MPEG-1/2/4 H.264 , VC-1;
- Audio Decoder:MPEG-1/2 , MP3 , AC-3 , AAC-LC 5.1 , WMA , HE-AAC V1/V2 2.0 , RA8-LBR
- Battery Capacity:18650×3 (11.1V 2000mAh)
- Battery :Watch The Video,The Use Time Can Be Up To 2Hours
- USB Power Delivery Supported:
USB Type-C PD3.0(PPS included)
Multiple USB Type C Fast Charge Protocol
- Operating Temperature: 0°C~+45°C
- Power Indicator:
During charging: LED light is on
Charge completed: LED light is off

Product Appearance


①



②




③

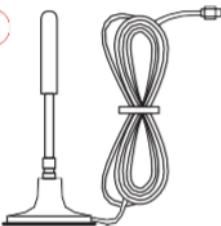

④




⑤

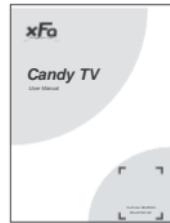

Accessories

- | | |
|----------------------|-------|
| 1. Candy TV | 1 PCS |
| 2. Type-C USB cable | 1 PCS |
| 3. TV Antenna | 1 PCS |
| 4. Remote controller | 1 PCS |
| 5. User Manual | 1 PCS |

Product Description

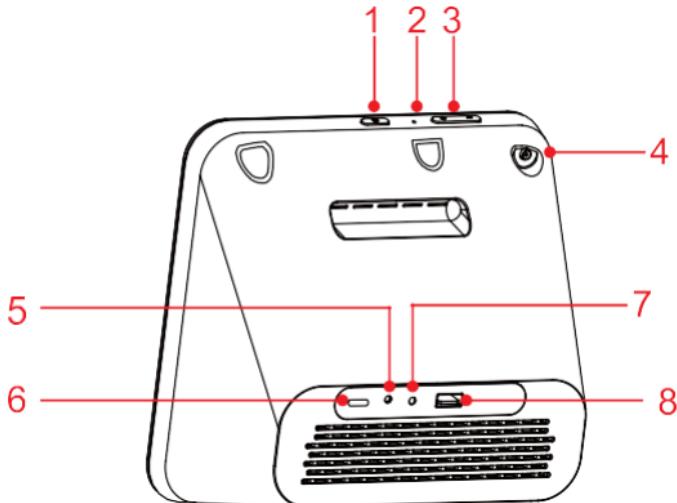

1. Power Button

- Short press the power button to turn on, wait for approximately 5 seconds for the blankscreen to display the LOGO and subsequently enter to the main menu.
- During the power-on state, short press the power button once to enter the screen saving state. Press the power button again to resume display.
- Press and hold the power button for 3 seconds to shut down the device.

Product Description

2. RESET Button

- Use a pin to press the reset button to reset the device.

3. Volume Button

- Adjust the volume use the volume +/- buttons.

4. TV Antenna Socket

5. LED


- LED light is always on indicates charging after power adapter is connected.
- LED light is off when charging completed.

6. TYPE C Power Interface

7. 3.5mm Earphone Jack

8. USB Interface


Product Description

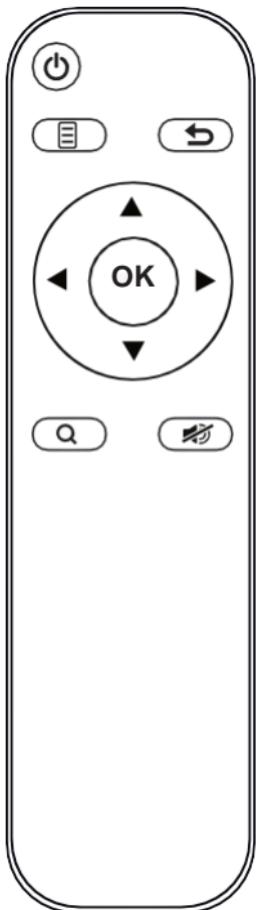

- Turn on/off Screen
- Function Menu Button
- Return to the previous menu
- Move up/down to select
- Volume up/down function when playing DTV/Video/Music; Under the function menu, move left and right to select
- OK confirmation Button
- DTV Search Button
- Mute

First Start Up

1. It shows Installation Guide Settings when turns on.

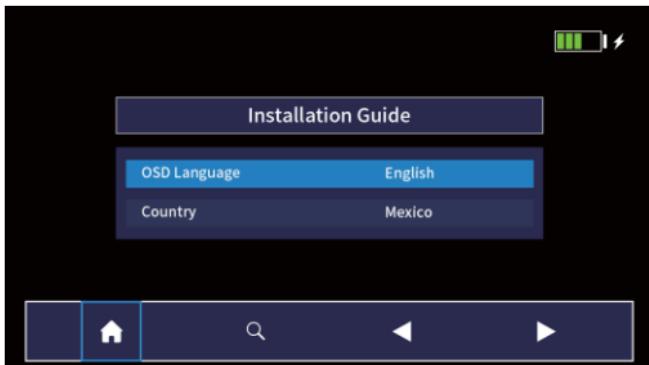

Return to home page




Search DTV




Parameters switching

2. Press  can return to homepage when it's on the DTV playback interface.

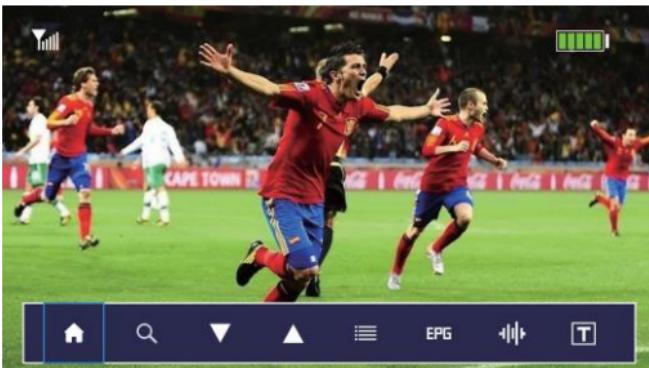

Main Menu

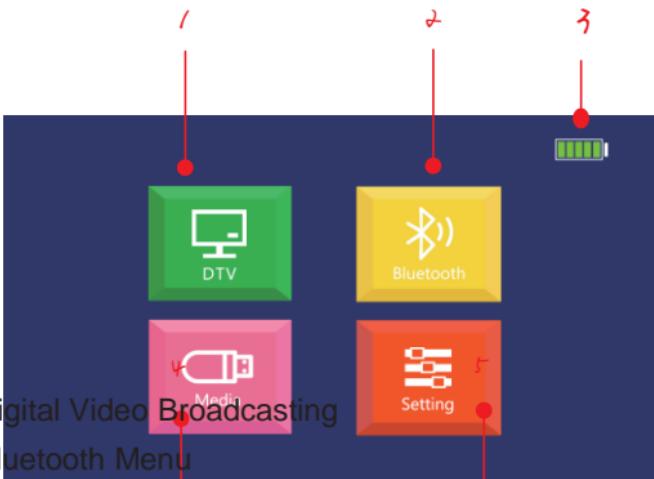

1. Digital Video Broadcasting

2. Bluetooth Menu

3. Battery indicator:

Indicating fully charged.

Indicating charging in progress.


Please charge it in time when the
battery level indicating low.

4. Multimedia Menu (Need to be used with a USB drive)

5. System Setting Menu

DTV Interface

1. On DTV playback interface, click the screen and menu will pop up automatically at the bottom of the machine.

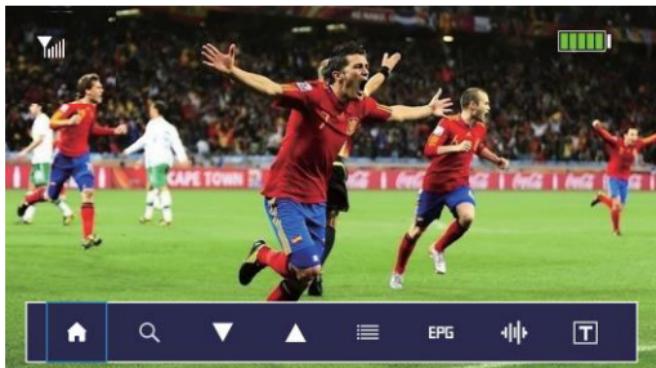

 Return to home page

 Search

 Forward/Backward channel switching

 TV List/Radio List

 EPG(Electrical Program Guide)

 Audio Language

 Subtitle Language

DTV Interface

2. Click  to enter into DTV manual research. Change frequency stations by   and click  to play the current stations. Click  it can search DTV stations automatically.



3. Click  to enter TV List interface.



  TV List and Radio List function switching

  List page up/down  Exit TV List

DTV Interface

4. Click **EPG** to enter the EPG interface.



Switch TV channels forward/backward

List page up/down


Exit TV List

Bluetooth Interface

1. On the main menu interface, click Bluetooth to enter the Bluetooth interface. The interface for the first use is as follows:



2. Use your mobile phone to search for Bluetooth XFA-DT201A and connect it. After the connection is successful, it will automatically enter the playback interface.

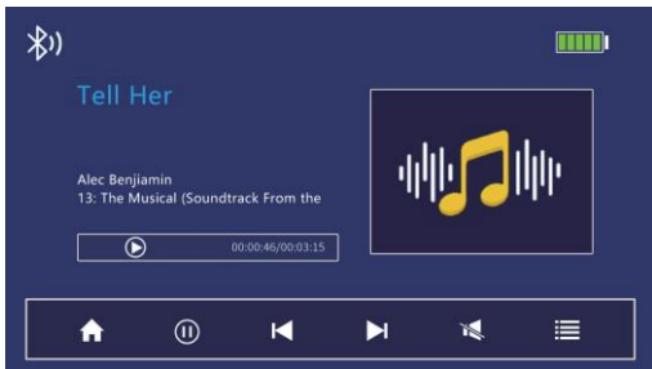

Bluetooth Interface

 Return to home page


 Play / Pause

 Previous / next

 Mute

 Bluetooth paired devices list

3. In the playlist interface, click  to enter the paired devices list.

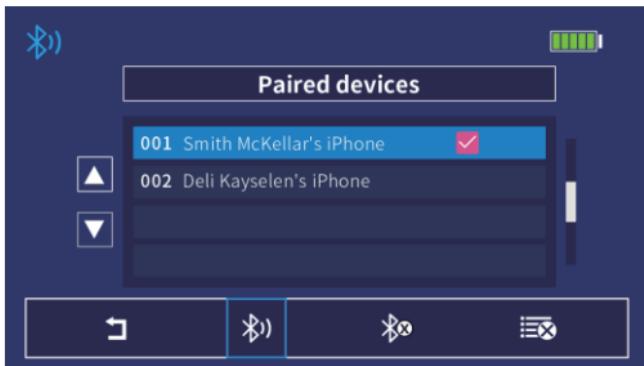

 Return to the previous menu


 Connect the selected device

 Disconnect the device

 Clear paired device list

MEDIA Interface

1. Click MEDIA to enter the MEDIA interface. It indicates "NO USB Device" when USB isn't detected and cannot enter into the next interface.

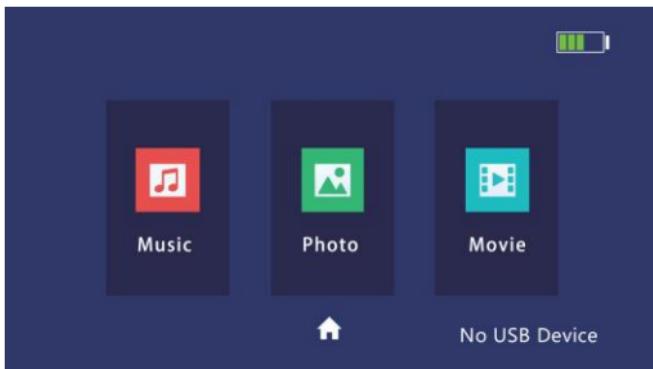

2. When enter the Music, Photo or Movie interface, the menu options show as below:

- ▲ ▼ List page up/down
- ⌂ Return to MEDIA menu interface
- ⟲ Return to the previous menu
- ▶ Play
- ⏸ Pause
- 🔇 Mute

MEDIA Interface

3. On the music playing interface, click  to enter the music playlist menu.



 Return to the previous menu

 Fast Backward

 Fast Forward

 Play

 Pause

 Previous

 Next

 Mute


MEDIA Interface

MEDIA music format support:

Audio Codec	File Extension	BitRate/ SamplingRate
MPEG1 Layer2	MP3	32Kbps ~ 448Kbps(Bit rate) 32KHz ~ 48KHz(Sampling rate)
MPEG1 Layer3	MP3	32Kbps ~ 320Kbps(Bit rate) 32KHz ~ 48KHz(Sampling rate)
AC3	AC3	32Kbps ~ 640Kbps(Bit rate) 32/44.1/48KHz(Sampling rate)
AAC, HEAACv1, HEAACv2	M4A/AAC	24Kbps ~ 384Kbps(Bit rate) 8KHz ~ 48KHz(Sampling rate)

MEDIA Interface

4. When preview photos on the preview interface, click  to auto slide show all photos. Click the screen, function menus will pop up.

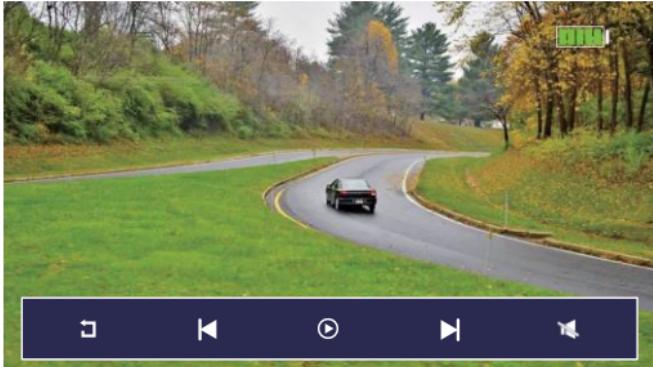

 Return to the previous menu  Mute


 Previous  Next  Play  Pause

MEDIA Picture format support:

Photo Codec	File Extension	Max Resolution
JPG	JPG, JPEG, JPE	Base line: 15360x8640 Progressive: 1024x768
BMP	BMP	9600x6400
PNG	PNG	9600x6400

MEDIA Interface

5. When preview videos on the video playing interface. Click  to enter full screen display. Click the Screen, function menus will pop up automatically.

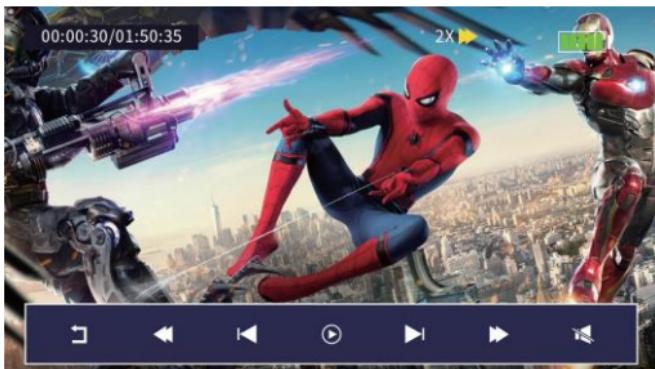

 Return to the previous menu

 Fast Backward

 Fast Forward

 Play

 Pause

 Previous

 Next

 Mute

MEDIA Interface


MEDIA video format support:

File Extension	Container	Video Codec	Audio Codec
mpg, mpeg, dat	MPG, MPEG	MPEG1, 2	MP2, MP3, AC3, LPCM
ts, trp, tp, m2ts, m2t1	MPEG2-TS, H264-TS	MPEG-2, H.264	MP2, MP3, AC3, AAC, HEAAC
mp4, mov	MPEG2-TS, H264-TS	MPEG4	AAC, HEAAC, MP3
mkv	Matroska	H.264, MPEG-1, 2, 4	MP2, MP3, AC3, AAC, HEAAC
avi	AVI(1.0, 2.0)	MPEG2, MPEG4	MP2, MP3, AC3, AAC, HEAAC
flv	flv	Sorenson H.263, H264	MP3, AAC

SETTING Interface

1. DTV Program setting

Click Sort choose the station playlist sort order. Click LCN to confirm this mode on or off.

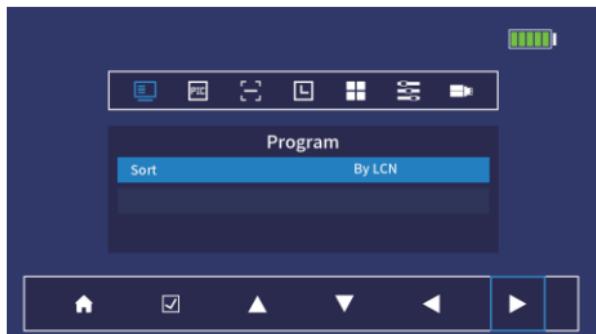


 Return to home page  Confirm

  Up/down selection sub-menu


  Parameters switching

2. Picture Settings

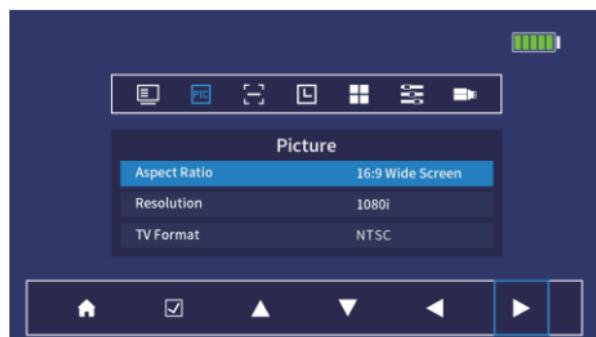


SETTING Interface

3. DTV Channel Search setting

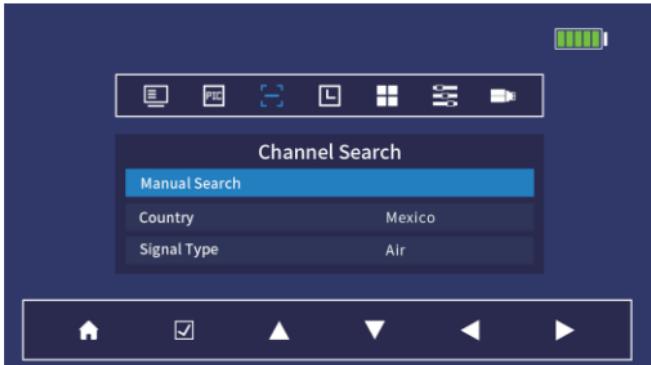


4.  DTV Time setting: When Time Offset is set to Auto, the device will automatically use the time and region information from the local radio program. When Time Offset is set to Manual, you may select manually via Time Zone.
(Time Zone adjustment range: GMT-12-GMT+12)

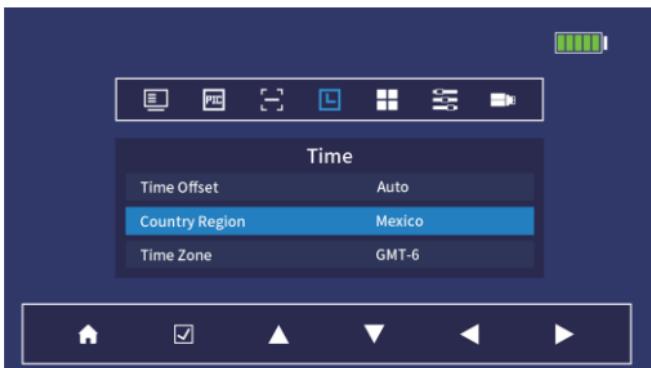


SETTING Interface

5. Option for languages setting

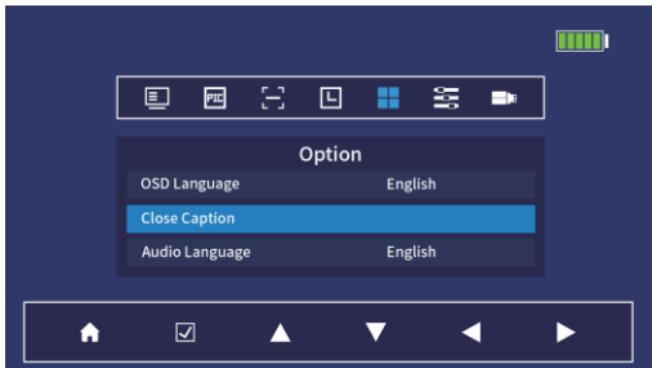


6. System setting menu

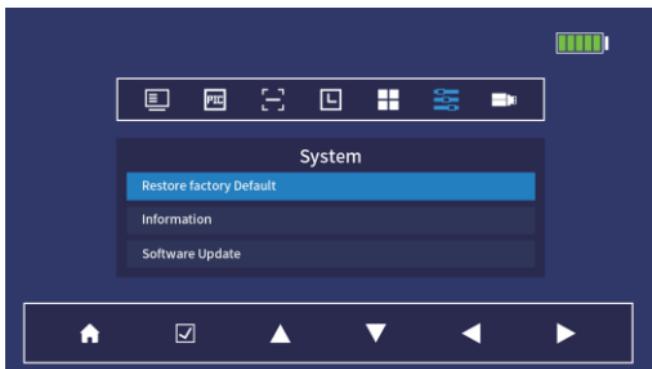


SETTING Interface

7. USB setting

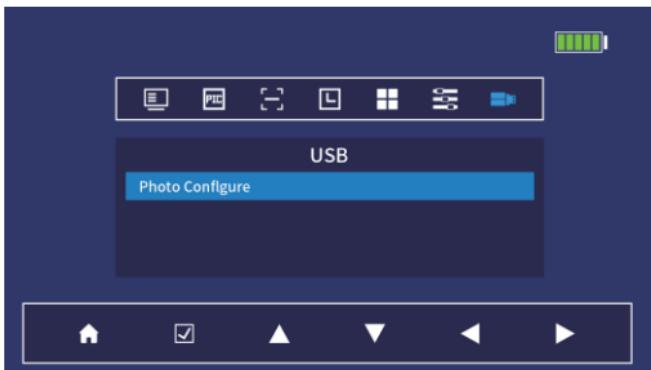

8. Photo Configure sub-menu:(NOTE: This menu list does not support touch mode to switch selection,Please use the cursor keys on the bottom menu bar.)

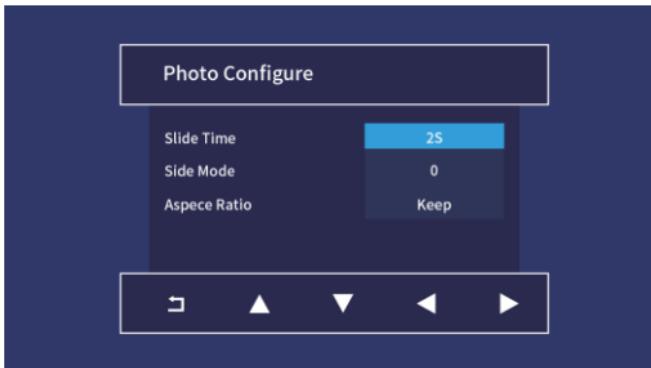

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.