

upgrade

Electronic fireworks machine



an instruction manual

Welcome to use our electronic fireworks machine, our company stated that this product requirements from the company to provide supplies. If users violate the company's requirements, to buy supplies elsewhere, with our electronic fireworks machine caused by the machine machine damage card machine and other issues. The company is not responsible.

PLEASE USERS FAMILIAR WITH!

Table of contents:

Foreword	one
Safety precautions	two
Part description	three
Instructions	four
Packing material	five
Maintenance instructions	six

Foreword

Dear user: Thank you for using our electronic fireworks machine. In order for you to use and maintain this machine correctly, please read the manual carefully before using it, and save it properly for future reference.

Caution for safe use: the machine in the process of electrification, electric shock injury, high temperature scald risk. Please do not attempt to open the machine or disassemble or debug any parts installed in the machine.

Only a professional repairman can open the equipment. In case you get electrocuted. Protect your eyes during the operation of the machine. Does

Not imply a continuous duration effect. The maximum operating time is 30 minutes and can be reused, but should not overheat the machine. It is forbidden to move and carry the machine in use. When feeding, please ensure that the machine is shut down. When feeding, please cover the lid to avoid the waste falling into the feeding port and causing the machine to jam. Please prevent anything from entering the outlet of the NOZZLE.

Please remove obstacles before continuing operation. Please prevent the machine from falling or damage during installation. Please check the nozzle of the nozzle of the nozzle before use. If you have it, please clean it through the reverse engine. Use with care lest any liquid wets the machine. Keep the machine and circuit dry on rainy or snowy days.

Dear user: Thank you for using our electronic fireworks machine. In order for you to use and maintain this machine correctly, please read the manual carefully before using it, and save it properly for future reference.

Caution for safe use: the machine in the process of electrification, electric shock injury, high temperature scald risk. Please do not attempt to open the machine or disassemble or debug any parts installed in the machine. Only a professional repairman can open the equipment. In case you get electrocuted. Protect your eyes during the operation of the machine. Does Not imply a continuous duration effect. The maximum operating time is 30 minutes and can be reused, but should not overheat the machine. It is forbidden to move and carry the machine in use. When feeding, please ensure that the machine is shut down. When feeding, please cover the lid to avoid the waste falling into the feeding port and causing the machine to jam. Please prevent anything from entering the outlet of the NOZZLE. Please remove obstacles before continuing operation. Please prevent the machine from falling or damage during installation. Please check the nozzle of the nozzle of the nozzle before use. If you have it, please clean it through the reverse engine. Use with care lest any liquid wets the machine. Keep the machine and circuit dry on rainy or snowy days.

Operational Instructions:

1, plug in the power cord.

2, Remote Code Matching: BOOT page **BBBB**, Press the MENU key on the display screen to turn to the fourth page of the code **BBBB**, in the press and hold the remote control a key 3 seconds page display for Pair **BBBB** Code check,(Repeatable pair code **BBBB** Page long press remote control a key),

3. Pour the drink into the feeding port.(Please don't add too much or the wrong entry)

4. warm up the temperature, such as the temperature reached 550 degrees can start to use, the remote control according to any of the BCD shift key start injection.

5. Remote Control and DMX console operation, support remote control to connect more than one sprayer operation only need to set up a host, press the DOWN key page on the display screen for **BBBB** Set it to host.(In the remote control of multiple machines when this machine to cancel the host, on the screen by pressing the DOWN key to heavy machine **BBBB**)

Remote Control Instructions:

A	Press A to turn on/off	
B	Click to start the spark, click to stop the jet, 1 meter to 1.5 meters high in gear	
C	Click to start the spark, click to stop the jet, 2 Gears 2 meters to 3 meters high	
D	Click to start the spark, click to stop the jet, 3 Gears 3 meters to 5 meters high	

Parameters:

Spray Direction	Top spray
Operating temperature	-10°C-50°C
Heating temperature	
Working Height	When the temperature reaches 550 degrees you can press the shift key BCD three keys
Power supply	110v/10a, 220v/6a
Dimensions	80.7 inch, 82.6 inch 98.4inch
Net weight	9.92 Lb
Maximum connection	Channel 6
Warranty	A year

Consumables

Net weight	0.44Lb
Time	8 to 10 minutes
Packing	Vacuum packing

Packing

Materia	unit	quantity
Power	Strip	1
Signal Line	Strip	1
Fuse	one	1
Instruction Manual	one	1
Instruction	Book	1
Carton	Pack	2 in1

MAINTENANCE INSTRUCTIONS:

dust cleaning (important tips)

- 1, each use, please clean up and spray the remaining material in the electronic spray machine, for the next use. (Note: The remaining material must not be left in the machine, or the next use may cause a card machine.)
- 2, remove the dustproof net to clean up the dust.
3. If there is an open fire, put it out with sand, not water.
4. Stay away from children.

If you want to specify a single spray need to be connected to the console

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.