

# Colorful lighting speaker

DF-720A



The instruction manual includes the product usage method and important precautions. When the charging light shows off, please unplug the charging cable. And it may not be able to charge. Please check and keep it properly.

Catalogue	
● Guidelines for Safe Use	01
● How to use your speaker	02
● How to Charge Your speaker	03
● Usage of Bluetooth/TF and other audio systems	04
● Usage of USB flash drive	05
● How to use the radio	05
● Reminder	05
● Specification parameters	06

Thank you very much for your purchase this time. Please read this manual carefully and be sure to read the "Safety Usage Guidelines" before using it correctly. After completion of reading, please also keep this manual properly.

Guidelines for Safe Use
● Guidelines for Safe Use
● How to use your speaker
● How to Charge Your speaker
● Usage of Bluetooth/TF and other audio systems
● Usage of USB flash drive
● How to use the radio
● Reminder
● Specification parameters

● Please do not use in unstable places or conditions.

● Please do not use, install or store in places close to fire such as stoves.

● Please do not tie up the charging cable for use or place objects on it.

● Please do not operate or use with wet hands.

● Please do not subject the machine to strong impacts such as drops or collisions.

● Avoid placing the device in a place facing the sun or sunlight for a long time.

● It cannot be disassembled or modified.

● Please do not insert foreign objects into the ports or connectors of the product.

● Please do not let it fall into water, soak it in water, or leave it in the rain for a long time.

● Please do not use diluents, gasoline, or alcohol to wipe the body.

● Please add a small amount of neutral cleaning solution to the water and use a hard cloth to wipe off stains.

● Do not use if there is any abnormal odor, heat, discoloration, deformation, etc. during use or storage.

● Only for use by children and above, please do not place it in a place accessible to young children.

● Please unplug the USB charging cable when not in use for a long time.

● Please do not use or store the machine while it is in contact with oil or other substances.

● When disposing of waste, please follow the waste disposal instructions in various places.

We do not assume any responsibility for anything caused by incorrect usage methods. Please be informed\* The LED inside the product cannot be replaced. Please be informed.

-01-

## Guidelines for Safe Use

In order to prevent harm or damage to users and their surroundings, this manual contains instructions that you are expected to follow. For safe use of the product, please fully understand the relevant content.

**Attention**  
This symbol indicates that if the content is ignored, it is expected to cause damage to people or objects

● Please do not use in unstable places or conditions.

● Please do not use, install or store in places close to fire such as stoves.

● Please do not tie up the charging cable for use or place objects on it.

● Please do not operate or use with wet hands.

● Please do not subject the machine to strong impacts such as drops or collisions.

● Avoid placing the device in a place facing the sun or sunlight for a long time.

● It cannot be disassembled or modified.

● Please do not insert foreign objects into the ports or connectors of the product.

● Please do not let it fall into water, soak it in water, or leave it in the rain for a long time.

● Please do not use diluents, gasoline, or alcohol to wipe the body.

● Please add a small amount of neutral cleaning solution to the water and use a hard cloth to wipe off stains.

● Do not use if there is any abnormal odor, heat, discoloration, deformation, etc. during use or storage.

● Only for use by children and above, please do not place it in a place accessible to young children.

● Please unplug the USB charging cable when not in use for a long time.


● Please do not use or store the machine while it is in contact with oil or other substances.

● When disposing of waste, please follow the waste disposal instructions in various places.

We do not assume any responsibility for anything caused by incorrect usage methods. Please be informed\* The LED inside the product cannot be replaced. Please be informed.

-02-

## How to use your speaker

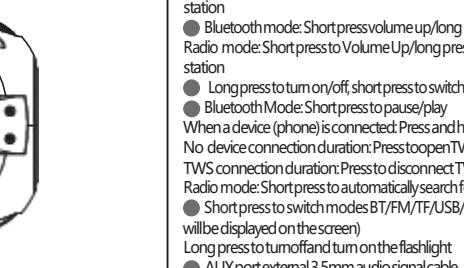

## How to Charge Your Speaker

1. Use a 5V charging adapter  
2. Insert the included Type-C charging cable into the input port of the device and connect the other end of the charger to the charging port. During the charging process, the charging indicator light on the charging port will turn red. After charging is completed, the charging indicator light will turn off.

3. After fully charged, unplug the charging cable.



**Attention**  
● Do not use non-included chargers for charging.  
● When using this device for the first time, please fully charge it.  
● When using a USB hub for charging, it may not charge properly. Please make sure to use the provided charger for charging, and do not use inferior chargers to charge the device. Charge in an environment with stable power supply.

It takes 4 hours to fully charge when the battery is depleted. When the charging light shows off, please unplug the charging cable.

Try not to use this device while charging. This will accelerate battery degradation and lead to battery damage.

-03-

● Bluetooth mode: Short press to decrease volume/long press to move to previous track  
Radio mode: Short press to decrease volume, long press to switch to previous radio station  
● Bluetooth mode: Short press volume up/long press for next track  
Radio mode: Short press to volume up/long press to switch to the next radio station  
● Long press to turn on/off, short press to switch color lighting effects  
● Bluetooth Mode: Short press to pause/play  
When a device (phone) is connected: Press and hold to disconnect it  
No device connection duration: Press to open TWS  
TWS connection duration: Press to disconnect TWS connection  
Radio mode: Short press to automatically search for radio stations  
● Short press to switch modes BT/FM/TF/USB/AUX (the corresponding mode will be displayed on the screen)  
Long press to turn off and turn on the flashlight  
● AUX port: External 3.5mm audio signalable  
● Type-C charging port  
● USB charging output/USB disk playback  
● TF card slot  
● Microphone interface  
①. Display Screen

**Attention**

● Please do not use in unstable places or conditions.

● Please do not use, install or store in places close to fire such as stoves.

● Please do not tie up the charging cable for use or place objects on it.

● Please do not operate or use with wet hands.

● Please do not subject the machine to strong impacts such as drops or collisions.

● Avoid placing the device in a place facing the sun or sunlight for a long time.

● It cannot be disassembled or modified.

● Please do not insert foreign objects into the ports or connectors of the product.

● Please do not let it fall into water, soak it in water, or leave it in the rain for a long time.

● Please do not use diluents, gasoline, or alcohol to wipe the body.

● Please add a small amount of neutral cleaning solution to the water and use a hard cloth to wipe off stains.

● Do not use if there is any abnormal odor, heat, discoloration, deformation, etc. during use or storage.

● Only for use by children and above, please do not place it in a place accessible to young children.

● Please unplug the USB charging cable when not in use for a long time.

● Please do not use or store the machine while it is in contact with oil or other substances.

● When disposing of waste, please follow the waste disposal instructions in various places.

**Attention**

● Do not use non-included chargers for charging.

● When using this device for the first time, please fully charge it.

● When using a USB hub for charging, it may not charge properly. Please make sure to use the provided charger for charging, and do not use inferior chargers to charge the device. Charge in an environment with stable power supply.

It takes 4 hours to fully charge when the battery is depleted. When the charging light shows off, please unplug the charging cable.

Try not to use this device while charging. This will accelerate battery degradation and lead to battery damage.

-04-

**Volume adjustment method**

● Short press to decrease the volume.  
● Short press to increase the volume. The volume can be adjusted between 0-100 and U-30. In the case of U-0, it is silent.  
● The volume can be adjusted in any mode.

**How to use Bluetooth speaker**

● Long press to power on, press "M" key to switch to "BT" mode.  
When the display screen "BLU" is flashing, turn on your phone's Bluetooth, find "DF-720A", click and connect. When the device is in a connected state, "BLUE" will not flash.

**Pause/Play**

Short press to pause or play

**Switch to the previous track**

Long press "-" to play the previous song

**Switch to the next track**

Long press "+" to play the next song

Long press "-" to disconnect the device from other devices via Bluetooth and put it in a waiting state. At this time, "BLUE" will continuously flash

**TWS usage method**

When two machines are not connected to any device, long press the "M" key on either machine to open the TWS pair (a prompt sound will be heard when opening TWS, and a prompt sound will also be heard after successful connection). (When TWS needs to be connected, both devices switch to Bluetooth mode, and either one opens TWS pairing to wait for the other Bluetooth connection. Note that this operation requires disconnecting any Bluetooth device)

**TF card usage method**

● Switch to Bluetooth mode when turned on, insert the TF card into the TF port, and the device will automatically switch to "TF" mode and start playing audio files  
● Attention  
Supports up to 32GB TF card and supports MP3/WAV audio file formats

**Attention**

● Do not use non-included chargers for charging.

● When using this device for the first time, please fully charge it.

● When using a USB hub for charging, it may not charge properly. Please make sure to use the provided charger for charging, and do not use inferior chargers to charge the device. Charge in an environment with stable power supply.

It takes 4 hours to fully charge when the battery is depleted. When the charging light shows off, please unplug the charging cable.

Try not to use this device while charging. This will accelerate battery degradation and lead to battery damage.

-05-

**Usage of USB flash drive**

● Switch to Bluetooth mode when turned on, insert the USB flash drive into the USB port, and the device will automatically switch to "USB flash drive" mode and start playing audio files

**Attention**

Short press to pause or play

**Switch to the previous track**

Long press "-" to play the previous song

**Switch to the next track**

Long press "+" to play the next song

**Pause/Play**

Short press to pause or play

**Switch to the previous track**

Long press "-" to play the previous song

**Switch to the next track**

Long press "+" to play the next song

**How to use radio FM**

● Short press the "M" key to switch FM radio mode

Long press the "M" key to automatically start frequency search from low values, select and save the available channels

**Attention**

When the first receivable channel is retrieved, the numerical value will stop once and display "P001"

When the second channel is retrieved, the numerical value stops again and displays "P002".

It automatically continues to receive until all channels are reached.

Long press the "M" key to switch to the previous radio station with a signal.

Long press the "M" key to switch to the next radio station with a signal.

**Attention**

\* The number of channels that can be received may vary depending on the radio wave conditions in the usage location

**Reminder**

● When this product is damp, please wipe the moisture with a soft cloth

● When this product is contaminated, please put a small amount of neutral detergent in water and wipe it off with a soft cloth.

● After wiping with water, please air dry it in the shade.

● Please do not use diluents, gasoline, or alcohol to wipe the speaker.

**Long term use**

● Please charge once every 2-3 months.

\* Due to the characteristics of batteries, an empty battery may significantly shorten its lifespan and may not be able to charge.

● Please cut off the power supply for safekeeping.

\* Charging the battery for too long may significantly shorten its lifespan.

● Please do not store in a humid environment.

\* The metal parts may rust.

-06-

**Specification parameters**

Bluetooth Name: DF-720A  
Specifications: Size: 43\*75\*17mm Weight: 1.5KG

Battery: 4000mAh

Usage time: Bluetooth mode: 6h  
(\* The play time is measured at 50% volume and will vary based on the type of music, level of bass and environmental factors)

Sound source: BT/AUX/F/BSFM/MIC

Charging input: 5V/2A

Charging time: approximately 5 hours

Power: 40W

Speaker unit: 4-inch low frequency speaker

FM frequency: FM: 87.5-108MHz

Accessory: Charging cable, instruction manual, AUX cable

Please assist in the recycling of batteries when disposing of products. The body of this product is made of aluminum polymer batteries. In order to effectively utilize resources, please follow the waste disposal instructions of local authorities when disposing of waste.

**FCC Warning Statement**  
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
- Reorient or relocate the receiving antenna.  
- Increase the separation between the equipment and receiver.  
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated for general RF exposure requirements. The device can be used in portable exposure condition without restriction.