

# User Manual



VOC-V-SDTS-A4G-I511TH16G128

**For Windows**

# Foreword

## **An important letter to customers**

1. Personal safety is very important when the equipment is operated and maintained.

The manual includes necessary warning and considerations for safe operation. Before operating and maintaining the equipment, ensure to read these completely and understand all safety warning and relevant items.

2. Don't repair or adjust the equipment by yourself. If the failure that cannot be solved by following flow described in the instructions, switch off the power supply and remove the power plug. Contact us or qualified repairmen for help.

## **About the manual**

3. The manual serves as instruction for use of the series products. There is no further notice for update of manual content and version, etc.

## **Declaration of security**

4. The contained guide and description is only applicable to the product when the manual is issued. No further notice will be given for change of product content and manual content, specification and instructions. No responsibility will be undertaken for damage caused by direct or indirect mistake, omission or difference. The product implements GB4943.1 and GB 9254-2008 standard.

## **Warranty declaration**

5. When repair for failure is made for the product, please return it to the original factory for repair. Don't remove, change, install inner components or repair the product. If damage and failure are caused due to dismantling or installing the product, inner components and improper use, the warranty becomes invalid immediately.

# TABLE OF CONTENTS

<b>1. Product Overview .....</b>	<b>4</b>
<b>1.1 Product Features .....</b>	<b>4</b>
<b>1.2 Specification.....</b>	<b>4</b>
<b>1.3 External Dimension.....</b>	<b>5</b>
<b>1.4 Product Views.....</b>	<b>6</b>
<b>1.5 Introduction of I/O port.....</b>	<b>6</b>
<b>1.5.1 I/O port of i3-1115A .....</b>	<b>6</b>
<b>1.5.2 physical interface of i3-1115A .....</b>	<b>7</b>
<b>1.6 Installation Style.....</b>	<b>7</b>
<b>2. Powering ON/OFF the APUS .....</b>	<b>8</b>
<b>2.1 Power on .....</b>	<b>8</b>
<b>2.2 Power off .....</b>	<b>8</b>

# 1. Product Overview

## 1.1 Product Features


- 15.6-inch full HD display with virtually borderless widescreen.
- Windows and Android OS support.
- Ultra-slim bezel design (8mm), with elegant and stylish appearance.
- Aluminum alloy body delivers beauty and utility with effective heat dissipation.
- Slim thickness, can create a more sophisticated space.
- 10.1" customer display.
- Plenty of I/O ports support Easy system expansion.

## 1.2 Specification

Model No.	VOC-V-SDTS-A4G-I511TH16G128	
SYSTEM		
Processor	Intel Celeron J6412 Quad-Core, Up to 2.60 GHz Intel Alder Lake-N97 Quad-Core, Up to 3.60GHz Intel Core i3/i5 10th High Performance CPU	Intel Tiger Lake i3-1115G4 Fanless CPU Intel Tiger Lake i5-1135G7 Fanless CPU
RAM	DDR41 x SO-DIMM DDR4 slot, 4GB RAM Standard, Up to 16 GB	
ROM	128GB SSD Standard, 256GB, 512GB Option	
OS	Windows 10/11	
DISPLAY		
Main Display	15.6 Inch LED Backlight Display	
Resolution	1920*1080	
Brightness	250 nits, 300 nits Option	
Aspect Ratio	16:9	
Second Display	10.1 inch (Touch on 2nd Display Option)	
Touchscreen	Projective Capacitive Touch Screen	
INTERFACE		
USB	4*USB 2.0, 2*USB 3.0	4*USB 2.0, 2*USB 3.0
LAN	1*RJ45 10/1000m Ethernet	1*RJ45 10/1000m Ethernet
Cash Drawer	-	1*RJ11
Serial	1*DB9 RS232 COM	2*RJ50 RS232 COM
Display	1*HDMI	1*HDMI
Audio	1*3.5mm Audio Jack	-
Power Supply	Adapter 12V, 5A/7A(DC Plug)	Adapter 24V, 3.75A(3-Pin Plug)
PHYSICAL & ENVIRONMENTAL		
Operating Temperature	Operating 0°C~45°C at 5% to 90% humidity	
Storage Temperature	Storage -12°C~60°C at 10% to 90% humidity	
Dimensions	( W×D×H) 210x363x375 mm	

Packing Dimensions	( W×D×H) 460x290x460 mm
Net Weight	3.60 kg
Packing Weight	7.20 kg
Material	Anodised aluminum, plastic
Color	Space black
<b>OPTIONS &amp; PERIPHERALS</b>	
Wifi	2.4 g dual-band Wi-Fi Option
Bluetooth	Bluetooth 4.2/5.0 Option
Speaker	1*2w Speaker Option

### 1.3 External Dimension

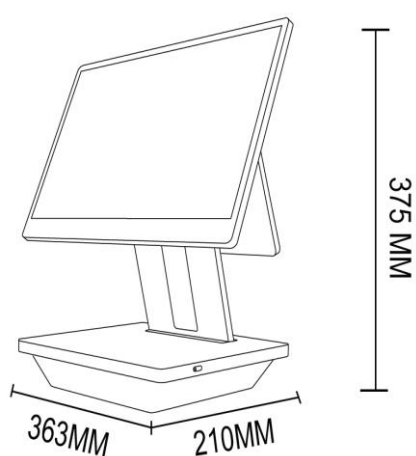

Front view



Back view




side view

## 1.4 Product Views



## 1.5 Introduction of I/O port

### 1.5.1 I/O port of i3-1115A

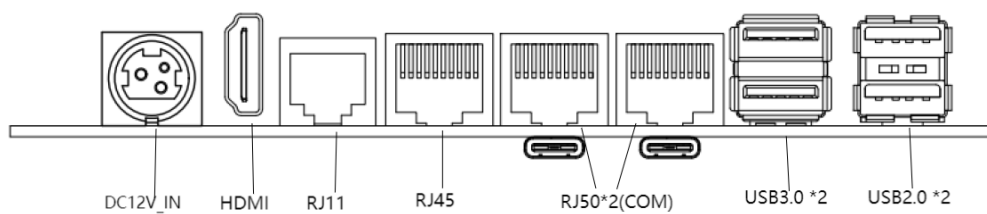

### 1.5.2 physical interface of i3-1115A



### 1.6 Installation Style




Desktop

## 2. Powering ON/OFF the APUS

### 2.1 Power on

Connect the power supply and press the power button

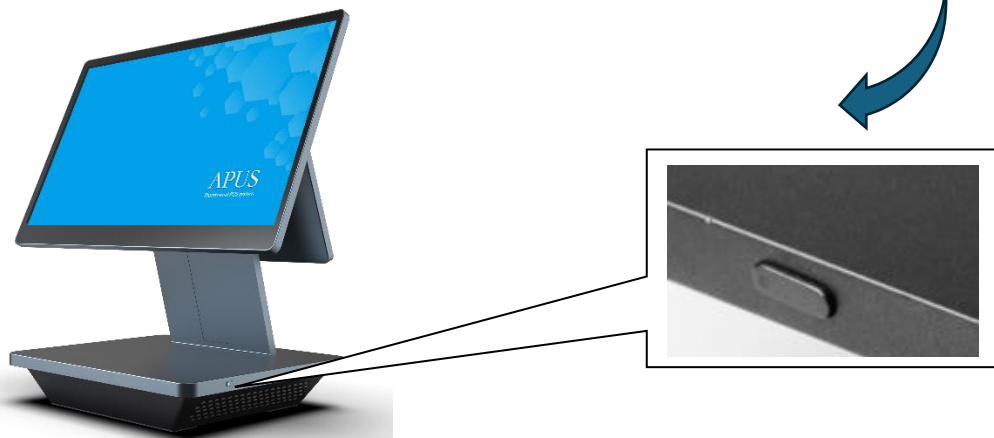

### 2.2 Power off

Press the shutdown button for two seconds, and then click the screen shutdown button.





# Warranty notice

Respected users:

Thank you for purchasing our company's products! The warranty regulation is formulated hereby in order to protect your legal rights and interest and remove your future worries and improve after-sale service for customers. You are asked to read carefully and propose valuable opinion and suggestion.

I. Our company's products enjoy free warranty of 18 months since the Shipment date. If it exceeds the warranty period, reasonable service expense and material cost will be charged.

II. The product for repair should be packed and transported properly. If there is any damage or loss during the process of transportation, our company will not take responsibility.

III. Our company has the right to refuse to provide service or charge material and service cost where appropriate with occurrence of the following items within the free warranty period.

Product failure or damage caused by improper use of users;

The accident of burning caused of electric shock or improper installation;

Damage caused by dismantling of non repairmen.

The label indicating fragile product is damaged.

IV. Please read the user manual carefully before the company's product is installed and used.

V. The warranty card must be stamped with seal and indicate the date by the selling unit to ensure your rights and interest.

## Contact Information

**Shenzhen Jassway Infotech Co., Ltd**

Nanfeng Building, Yungu Innovation Industrial Park, Liuxian Avenue, Nanshan District,

Shenzhen, Guangdong, China Phone: +86-755-8606 5500

Info@jassway.com <http://www.jassway.com/>