

<div data-bbox="305 460 438 580"></div> <div data-bbox="262 607 476 700"><p>TG-468 USER MANUAL</p></div> <div data-bbox="288 746 447 1122"></div>	<p>Product Specifications:</p> <ul style="list-style-type: none">-Wireless: V6.0Support: L2CAP/A2DP/AVRCP, can receive AUDIO signal and control the AUDIO device.Support HSP/HFP(Handsfree profile), with HANDS-FREE functions.-Working distance:10M-SNR: ≥90db-Battery: 3.7V about 1200mAh-Normal volume playing time: about 3 hours-Speaker driver: ϕ52mm*2-Speaker Power: 5W*2-Frequency response:120Hz-20KHz-Unit size: 81x77x181mm-Unit weight: about 402g (not includ accessories)-Charging:5V/0.5A-Charging time:about 3H <p>Product Feature:</p> <ol style="list-style-type: none">1.International advanced wireless chip and circuit design techniques, support wireless devices.2.With FM function, can search radio station broadcast automatically.3.With Hi-Fi speaker, to make sure	<p>the clear and bright sound.</p> <ol style="list-style-type: none">4.Support Micro SD card and USB card, play MP3 format audio.5.The wireless working distance is 10 meters.6.It will close automatically after 30 mins if disconnect Wireless .7.Support TWS. <p>Key And Slot Function:</p> <div data-bbox="960 721 1278 954"></div> <ol style="list-style-type: none">1.DC 5V slot: Use the standard USB TYPE-C charging cable for power charging.2.TF slot: It can decode and play MP3 format audio when put TF card into the slot.3.USB slot: It can decode and play	<p>MP3 format audio when put the USB card into the slot.</p> <ol style="list-style-type: none">4.Power switch: Press long for power on /power off.5.When play music,(USB card/TF card/Wireless), short press for “play/pause”. <p>In FM mode, press short to search station automatically, press again to stop searching.</p> <p>Under wireless mode with mobile paired, when call coming, press short to answer a call hands-free, press again to hand up, press twice to ring up a call.</p> <ol style="list-style-type: none">6.When play music, Press short for last song, long press to turn down the volume.7.When play music, press short for next song, long press to turn up the volume.8.When play music, short press to switch model (USB card/TF card/ Wireless /FM). <p>When connected to the phone, double-click the M key to disconnect the phone;</p> <p>TWS:Keep the two speaker under</p>	<p>Wireless mode without pairing, press the “M” key for 2-3 seconds either of the speaker until hear a hint a, now it is TWS mode ,then can paire the mobile. Disconnect the wireless connection and then long press the M button to cancel the TWS function.</p> <p>NOTE:</p> <ul style="list-style-type: none">-In the FM mode, put in micro charging cable to increase the FM radio signal ;-If this speaker crash during use, you can press and hold the power button for 8 seconds to reset and shut down.-USB (32Gmax) /TF card (32Gmax) pls use FAT32 format.-TF card / U disk used separately.
<p>Warning Statement</p> <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none">-Reorient or relocate the receiving antenna.-Increase the separation between the equipment and receiver.-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.-Consult the dealer or an experienced radio/TV technician for help. <p>This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.</p>				