

JX5 instructions

Basic parameters

Bluetooth version	Bluetooth V5.2
Bluetooth protocol	a2dp/avctp/avdtp/avrcp
Bluetooth operating frequency	2402MHZ-2480MHZ
frequency response	20HZ-20KHZ
Battery capacity	Headset battery: 50mA Charging chamber battery : 500mA
Headset playback/talk time	5-6 hours
Bluetooth connection distance	≥10m
Charging time	About 1.5 hours

Operating Instructions for Headset Keys

Serial No	function	headset operation	indicator light	voice
1	Start up	L/R earphone is automatically turned on and paired/long press the P/P key for 3 seconds	Green light flashes 1 time	Power on
2	Shutdown	Put the L/R headset in the compartment, turn it off and charge it/long press the P/P key for 4 seconds	White light flashes 3 times	Power off
3	Pairing succeeded	Ear pairing succeeded	The white and green lights of the main engine flicker alternately, and no lights of the auxiliary engine flicker	Clew tone
4	Connection succeeded	The phone is successfully connected to the headset	/	Connected
5	Disconnect	The mobile phone actively disconnects Bluetooth	The white and green lights of the main engine flicker alternately, and no lights of the auxiliary engine flicker	Disconnected
6	Play/Pause	Short press the P/P key for 1 time for L/R headset	No light flashing	/
7	Previous song	Long press the - key for 1 second	No light flashing	/
8	Next	Long press the +key for 1 second	No light flashing	/
9	Volume up	Short press the +key	No light flashing	Maximum volume prompt tone
10	Vol	Short press the - key	No light flashing	/
11	Voice Assistant	Long press the P/P key for 1.5 seconds on the L/R headset	No light flashing	/
12	Last redial	L/R headset P/P key: double click	No light flashing	/
13	Answer/end	Short press the P/P key of L/R headset for 1 time	No light flashing	/
14	Reject incoming calls	Press the P/P key of L/R headset for 2 seconds	No light flashing	/

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.