



Wireless earbuds

X4

User's Manual


Please read this manual
before using the product

Thank you for choosing the TREBLAB X4!

Our earbuds provide superior sound quality and exceptional mobility thanks to their light-weight construction and convenient hands-free wireless operation. Before using this product, please read this manual.

WHAT'S IN THE BOX

1.

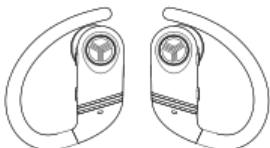

2.




3.


3.



4.

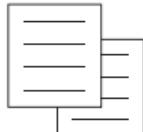

 5.



6.



7.





✓

- 1. TREBLAB X4 earphones
- 2. Charging case
- 3. TREBLAB logo sticker
- 4. User's manual & quick start guide

✗

- 5. Silicone ear-tips
- 6. Charging cable
- 7. Cleaning set

BUTTONS AND PARTS

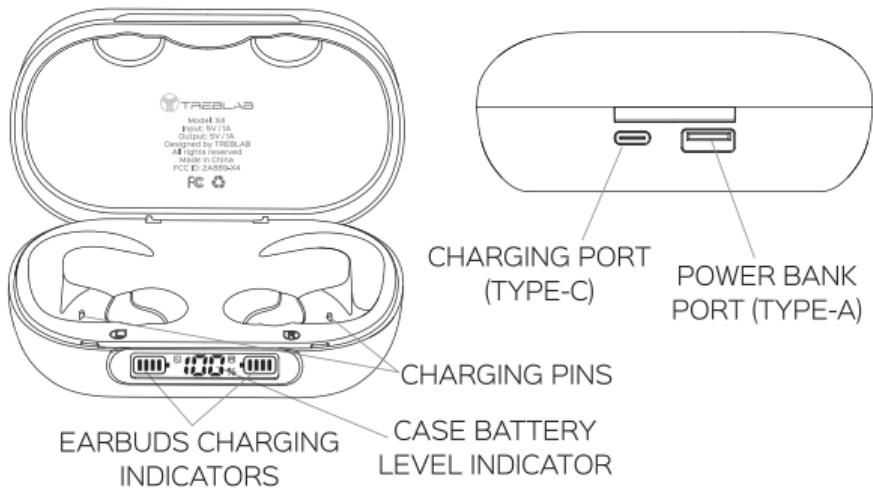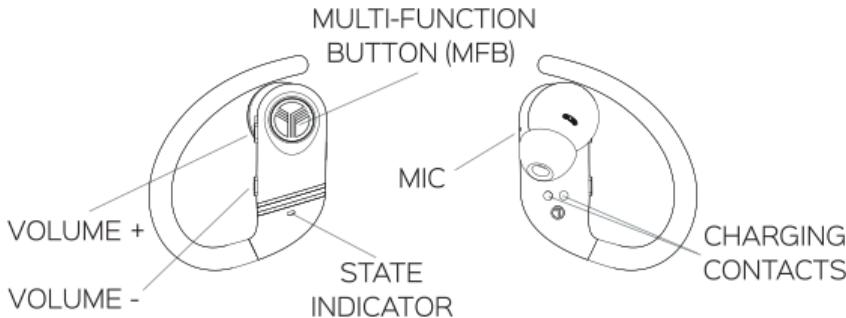

Function	Operation
Power on	Take the earbuds out of the case or press and hold the MFB of both earbuds for 3 seconds.
Power off	Put the earbuds back into the case and close it or press and hold the MFB of both earbuds for 3 seconds.
Pause / Play	Click the MFB on either earbud.
Volume +	Click the VOLUME + button on either earbud.
Volume -	Click the VOLUME - button on either earbud.
Next track	Press and hold the VOLUME + button on either earbud for 2 seconds.
Previous track	Press and hold the VOLUME - button on either earbud for 2 seconds.
Voice assistant activation	Double-press the MFB on either earbud.

Answer a phone call	Click the MFB button on either earbud during the incoming call.
Reject a phone call	Press and hold the MFB on either earbud for 2 seconds during the incoming call.
Hang up	Click the MFB on either earbud when on a call.
Gaming mode	Triple-press the MFB of either earbud.
Disconnect	Press and hold the VOLUME + and VOLUME - buttons simultaneously on either earbud for 3 seconds when the earbuds are connected to the source device.
Factory reset	Press and hold the VOLUME + and VOLUME - buttons simultaneously on either earbud for 3 seconds when the earbuds are not connected to the source device.

HOW TO ENSURE A PROPER FIT

Ear-tips in different sizes



XXS



XS



S



M



L




XL



Using the appropriate-sized ear-tips is critical to isolate external noise and achieve a snug and secure fit. It is common for a user to have different-sized ear canals, so try on one ear-tip at a time to find the best fit for each ear.

To achieve the best possible fitment of your **TREBLAB X4** earbuds, gently push the earbuds into your ears and adjust the headset until it fits comfortably. You should notice a drop in ambient noise when the ear-tip has been placed correctly. With a proper fit, you'll notice more range when listening to music.

To change the silicone ear-tips:

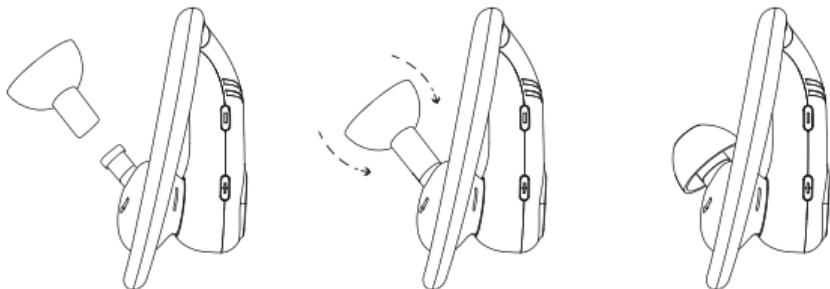


1. Turn out the flange of the ear-tip.
2. Twist and firmly push the ear-tip's stem onto the earbud nozzle.
3. Turn out the flange of the ear-tip back.

CHARGING

There are three things to keep in mind:

1. The X4's case is not compatible with 90W+ chargers.
2. The X4 model comes with protective stickers on the charging contacts of both earbuds. Remove these stickers prior to charging the earbuds.
3. After use and before charging, wipe the earbuds carefully to remove any moisture from the charging contacts.

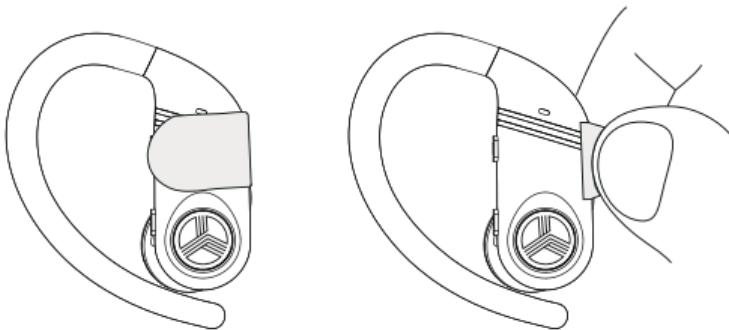

To charge the case

You can check the current charging case battery level by looking at the charging case battery level indicator on the front of the charging case when opening or closing the case lid. We recommend charging the case when the battery level reaches 10%.

To charge the case, connect one side of the supplied charging cable into the Type-C charging port on the back of the case and the other side into the power source. While charging, one digit on the charging case battery level indicator will be flashing slowly showing the current battery level of the case. Once fully charged, you will see the “100” digit on the charging case battery level indicator and all of the digits will be steady. It takes about 3 hours to fully charge the case.

Be sure to use a 5V DC, 0.5 - 1A adapter or charger. Using a power source with lower power will increase the overall charge time.

To charge the earbuds with the charging case

When the earbuds' battery is running low, you will hear the sound prompt resembling a busy tone.

Put the left and right earbuds into the slots inside the charging case and close the lid. The earbuds will turn off

automatically and will start charging. You will see the earbuds charging indicators on the case start the movement. When the earbuds are fully charged, the earbuds charging indicators will go off. It takes about 2 hours to charge the earbuds.

POWER BANK MODE

TREBLAB X4's charging case can be used as a power bank to charge your smartphone or tablet.

To use this feature, connect your device to the charging case by plugging your device's charging cable into the USB Type-A power bank port on the back of the case. The case battery level indicator will light up showing the current battery percentage.

NOTE: There is no indication signal when the smart device is fully charged. Please pay attention to your device's battery indicator during the charging.

SETTING UP YOUR TREBLAB X4

To turn on the earbuds

1. Open the case lid and take the earbuds out of the case, the earbuds will turn on automatically.
2. Another option to turn them on is to press the **MFB** of both earbuds and hold for 3 seconds. You will hear

several sound prompts indicating that the earbuds are turned on and ready for pairing. The blue state indicators will light up on both earbuds and, a few seconds later, the state indicator will start flashing blue/red on one of the earbuds.

3. You will hear another sound prompt after connecting to a device.

To turn off the earbuds

1. Put both earbuds into the slots inside the charging case.
2. Alternatively, press the **MBF** of both earbuds and hold for 3 seconds. You will hear the sound prompt indicating that the earbuds are being turned off. The red state indicators will blink 3 times on both earbuds and will go off.

PAIRING

You can pair the **X4** earbuds with your device either together or separately. Using only one earbud at a time will help you to extend the overall playtime.

To pair both earbuds

1. Open the case lid and take the earbuds out of the case. The blue state indicators will light up on both earbuds and, a few seconds later, the state indicator will start flashing blue/red on one of the earbuds.

2. Activate the wireless communication function on your smart device, scan/search for **TREBLAB X4**, and click CONNECT.
3. If prompted by your device to connect, select Yes.
4. You will hear the sound prompt indicating that the earbuds are connected. The state indicators will go off on both earbuds.

When you turn the earbuds on, they will try to reconnect with the recently connected device. If the reconnection does not happen automatically, the earbuds will try to find the next device in the pairing list. You can only connect and play audio from one device at a time. But you can save up to 6 connected devices in the pairing list.

To pair one earbud

1. Open the case lid and take one earbud out of the case. The blue state indicator will light up and, a few seconds later, the state indicator will start flashing blue/red.
2. Activate the wireless communication function on your smart device, scan/search for **TREBLAB X4**, and click CONNECT.
3. If prompted by your device to connect, select Yes.
4. You will hear the sound prompt indicating that the earbud is connected. The state indicator will go off.

AUDIO PLAYBACK

To pause and resume the playback, click the MFB on either earbud.

To change tracks on **X4**, on either earbud, press and hold the **VOLUME +** button to play the next track and the **VOLUME -** button to play the previous track.

To adjust the volume, on either earbud, click the **VOLUME +** button to increase the volume and the **VOLUME -** button to decrease the volume.

PHONE CALLS MANAGEMENT

The **TREBLAB X4** can be used to make and receive calls when connected wireless. Audio playback will be paused during the calls.

To answer a call: Click the **MFB** on either earbud during the incoming call.

To reject a call: Press and hold the **MFB** on either earbud for 2 seconds during the incoming call.

To end a call: Click the **MFB** on either earbud when on a call.

GAMING MODE

TREBLAB X4 earbuds support the gaming mode to reduce the audio latency up to 60ms. This allows to achieve better video / audio synchronization and improve your gaming and video-watching experience.

1. To enable the gaming mode, triple-press the **MFB** of either earbud. You will hear the ascending sound prompt and feel the lower latency while gaming / watching videos.
2. To disable the gaming mode, triple press the **MFB** of either earbud again. You will hear the descending sound prompt and the latency will go back to the standard 200ms.

NOTE In the gaming mode, the connection range is much shorter than in standard one, so, if you are experiencing some connection issues or drops, please make sure to disable the gaming mode.

VOICE ASSISTANTS SUPPORT

TREBLAB X4 earphones are compatible with the most of the voice assistants. To use a voice assistant, double-press the **MFB** of either earbud.

RESET TO THE FACTORY SETTINGS

You can reset the **X4** earbuds to the factory default settings by cleaning up the pairing list with the last 6 connected to **X4** devices.

Make sure that the earbuds are disconnected from the source device. Press and hold the **VOLUME +** and **VOLUME -** buttons simultaneously on either earbud. You will hear the sound prompt and the earbuds will go to the pairing mode.


CLEANING

It is recommended to clean the earbuds once every two weeks as earwax can accumulate and clog the protective screen located on the earbud nozzle or even the ear-tip opening.


To clean the earbuds, you will need three things:

- Cotton swab;
- Eyelash brush or alike;
- Alcohol.

1. Take off the silicone ear-tip from the earbud.
2. Soak the cotton swab in alcohol and clean the ear-tip opening using it.

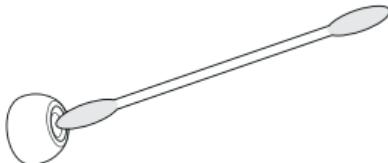

3. Repeat the steps for another ear-tip.
4. Soak the eyelash brush (or alike) into the alcohol.
5. Clean the protective screen on the nozzle with a forward and backward movement.

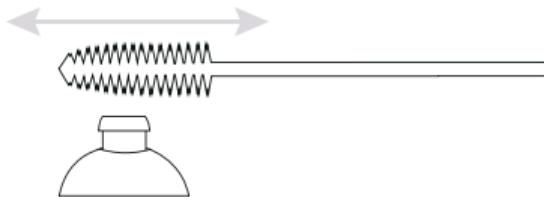

6. Repeat the procedure for another earbud's nozzle.
7. Let the ear-tips and nozzles dry before putting the ear-tips back on.

TROUBLESHOOTING

Problem	Solution
Can't turn the earbuds on	<p>Please make sure the earbuds are charged, if not – charge them and try again.</p>
Earbuds do not charge	<p>Please check if there are protective stickers on the earbuds. If yes, please remove them and try to charge the earbuds once again.</p> <p>Clean the charging contacts on the earbuds with a slightly damp cotton swab when they are turned off (we recommend using alcohol or a specially designed cleaning fluid sold for electronics).</p> <p>Check if the earbud slots in the charging case are free of debris.</p> <p>Try charging the case with another Type-C cable, power source, adaptor (if available).</p>

Device doesn't find TREBLAB **X4**

Make sure the **X4** earbuds are not paired with any other device, as they can pair only with one device at a time.

If **X4** are in pairing mode and one of the earbuds flashes blue/red, but still are not found by your device, please restart your device and the earbuds.

Reset your earbuds to the factory settings by following the steps from the section “RESET TO THE FACTORY SETTINGS”. Try to pair again.

Frequent disconnection and noise

Make sure that the distance between your device and the earbuds is less than 33 feet / 10 meters.

Make sure that nothing is blocking the signal between your device and your **X4** earbuds.

If the earbuds are on, but disconnected from the device for longer than 15 minutes, they will turn off automatically to save power.

Can't connect the earbuds to the device

Make sure the **X4** earbuds are not paired with any other device, as they can pair only with one device at a time.

Make sure that the distance between your device and the headphones is less than 30 feet/10 meters.

Disconnect the device from your earbuds and remove **X4** from your device's pairing list.

Reset your earbuds to the factory settings by following the steps from the section "RESET TO THE FACTORY SETTINGS". Try to pair again.

Earbuds do not pair in TWS (only one earbud works at a time)

Reset your earbuds to the factory settings by following the steps from the section "RESET TO THE FACTORY SETTINGS". Try to pair again.

SAFETY RULES

- Never disassemble or modify your **X4** for any reason. Doing this may cause the device to malfunction or even become combustible. The damage to your device can void your manufacturer's warranty.
- Do not charge the earbuds when they are wet. Make sure to dry off the earbuds before charging.
- Avoid exposing the **TREBLAB X4** to extreme temperatures (below 37°F / 3°C or above 112°F / 45°C). Extreme temperatures can deform the components inside the **X4**, reducing the battery life and the lifespan of your new earbuds.
- Avoid putting the device's LED lights close to the eyes of children or animals.
- Do not use your **X4** during a thunderstorm. Thunderstorms could cause them to seriously malfunction and increase the risk of electric shock.

FCC STATEMENTS

FCC Compliance Statement - Part 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement - Part 15

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

BATTERY INFORMATION

- Your device is powered by rechargeable batteries.
- Unplug the charging case from the electrical plug when not in use.
- If left unused, a fully charged battery will lose its charge over time.
- We recommend that you fully charge your earbuds twice a month to ensure the battery's integrity.
- Please do not leave the device (and the charging case) in hot or cold places, such as inside a closed car in the summer or winter as this will reduce the capacity and life of the batteries.
- Do not expose the batteries to fire as they may explode.
- Batteries may also explode if damaged.

RECYCLING

Your damaged or broken earphones can be recycled and we encourage you to do so to keep our planet clean. Where can you go to do this?

In the **US**, there are a couple of options:

<https://www.call2recycle.org>

<https://search.earth911.com>

<https://recyclenation.com/find>

<https://www.cta.tech/Consumer-Resources/Greener-Gadgets>

In **Canada**, please visit the links below:

<https://thinkreuse.net>

<https://www.call2recycle.ca>

In the **UK**, please visit the links below:

<https://www.recycle-more.co.uk/>

<https://www.recyclenow.com/local-recycling>

SPECIFICATIONS

Speaker unit:	Ø10mm, 32Ω
Charging port:	USB Type-C
Power bank port	USB Type-A
Dimensions:	Earbuds: 48 x 41 x 27.5mm / 1.88 x 1.61 x 1.08 in Charging Case: 98.5 x 61.8 x 40.2mm / 3.87 x 2.43 x 1.58in
Weight:	Earbuds: 8.3g / 0.29 oz / 0.02 lbs Case: 108.1g / 3.81 oz / 0.24 lbs

THANK YOU

We truly appreciate that you chose **TREBLAB** as your trusted brand of wireless earphones. Our team sincerely hopes that you enjoy the great sound and seamless usability the **TREBLAB X4** provides.

We love making our customers happy by providing true value with our products. If for any reason you are not completely satisfied with your purchase or have any questions, please let us know by contacting us at http://treblab.com/contact_us.

We care about our customers above all and are always here to serve you.



TREBLAB

1 YEAR FULL WARRANTY

Parts and Labor Warranty

Please visit www.treblab.com to register
YOUR product.

Designed by Productech in the U.S.

Wireless earbuds

X4



Made in China



WARNING: This product can expose you to Bisphenol A, which is known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov