


Speaker manual

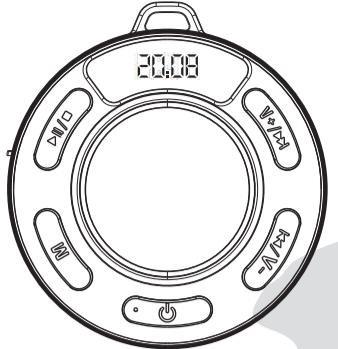

K8

Kindly Reminder:

- Before use, please make sure that the plug cover is tightly covered to prevent falling into the water and damaging the loudspeaker.
- Put the product out of reach of children.
- Please use a soft cloth to clean the product instead of chemicals with strong irritation. Be sure to disconnect the power supply before cleaning.
- Do not puncture or disassemble the outer surface of the product in any way.
- Do not insert any metal objects into the equipment to prevent electric shock to the equipment.

Operation of Key Functions

• : On/off key

1. Hold down the power button for 3 seconds to turn on and off the speaker.
2. Short press the LED lamp in turn in multiple modes.
- A. Breathing lamp: Gradually change from one color to another.
- B. Fast flash: Colorful flash.
- C. Turn off the lights.

• : Next key

1. Long press to play the next song.
2. Short press to turn up the volume.
3. In FM mode, short press to switch to the next channel.

• : Previous key

1. Long press to play the previous song.
2. Short press to turn down the volume.
3. In FM mode, short press to switch to the previous channel.

• : Play button

1. Short press to play or pause music, and short press to answer or end the call.
2. Press and hold to reject the call.
3. Double click to redial the previous call.
4. Press and hold to disconnect the current wireless connection.
5. In FM broadcast mode, long press the button to automatically search and save the broadcast channel. Short press to play or pause FM.

• : M Key

1. Short press to switch between bluetooth mode, FM broadcasting mode and Clock mode.
2. If you have two speakers, you can connect the two speakers to each other. Please long press M key to pair or cut off the connection between the two speakers.
3. In the clock mode, long press to enter the setting time mode, setting time by "V+" or "V-" key.

Display Screen

1. Display clock
2. Display FM frequency band
3. Display the power, the normal state of the power mark is always on, when the power is low the power mark begins to flash, prompting the speaker needs to be charged.
4. Display charging status, the lightning mark is always on when charging, and goes off when full.

Wireless pairing

Charge the speaker for 2 hours before initial use.
 1. In Bluetooth mode, hold down the power button for 3 seconds to enter pairing mode. If the has not been connected for about 5 minutes, blue will automatically close.
 2. Activate wireless capabilities on media player devices and search for "K8" to pair from the list. If the media device prompts for a password, enter "0000".
 3. If pairing fails, refer to the user manual of the media player device for wireless settings. Remove all redundant unused models from the pairing device list and start again from step 1.

Charging equipment

Wireless speakers are powered by built-in rechargeable lithium batteries.
 1. Open the DC 5V charging port cover.
 2. Connect the charging cable from the USB socket on K8 to the standard USB charging port, such as computer or USB charger.

Activation & Warranty

Permanent replacement of damaged, defective, upgraded or missing items (no need to return the original). Please activate via email below within 15 days.
 "ptyr123456@gmail.com"

Technical indicators

Model: K8
 Working distance: 10M
 Microphone: built-in
 Rated power: 5W
 SNR: 85+dB
 Charging voltage: DC 5V
 Battery capacity: 900mAh
 Charging time: about 1.5 hours
 Playback time: about 10 hours (about 50% sound level)
 Shell material: ABS + silica gel
 Speaker size: 92*92*50mm

FCC Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has evaluated to meet general RF exposure requirement. The device can be used in portable exposure without restriction.