



USER MANUAL

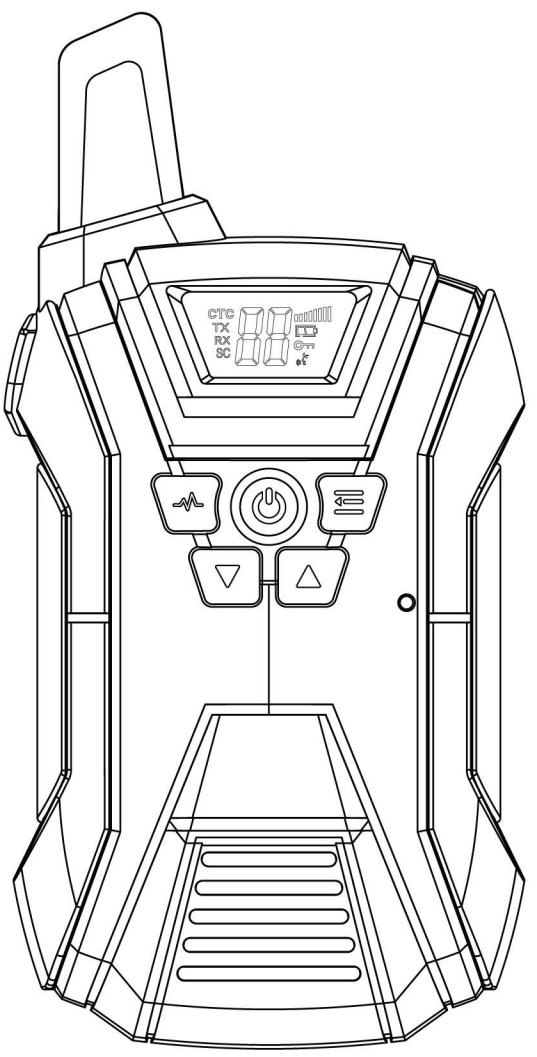

ULTRA LONG DISTANCE WALKIE TALKIE

NOTE: Please read these user instructions carefully before using the equipment and retain for future consultation.

 1




Press the up and down buttons to change the channel.
Press the TALK button to confirm and return to Standby Mode.


NOTE: If no button is pressed, the device will return to Standby Mode after 6 seconds.

RECEIVE/TRANSMIT COMMUNICATION

To transmit, press and hold the TALK button while talking into the walkie-talkie at a close range (within 5cm of your face). The TX icon will be showed on LCD screen (See pic.1). Release the button to finish talking, when the button is released, your walkie-talkie can receive transmissions.

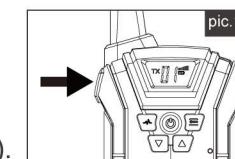

To receive, if someone in the same channel transmit a voice signal, your walkie talkie will receive and play the voice through the speaker. The RX icon will be displayed on the LCD screen (See pic.2).

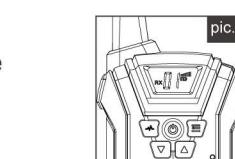


NOTE

- > Walkie-talkies must be set to the same channel and CTCSS code.
- > Release the Talk button when you finished talking to receive a response.
- > When walkie talkie is receiving a signal, the TALK function will not work.

CTCSS (CONTINUOUS TONE-CODED SQUELCH SYSTEM)

These walkie-talkies have an their own channel system. It means you can always find a free channel if someone nearby is using one and you don't want interference-or you want to share a channel.

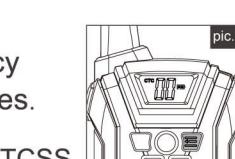


Your devices also have subchannels called the CTC. Using the CTC transmits one of 122 different low-frequency tones along with your voice signal for identification-purposes.

Press the menu button twice to enter the sub-channel mode of CTCSS, the current CTCSS code will flash. CTC icon will display on the LCD screen (See pic.3).


6

01

WALKIE TALKIE OVERVIEW

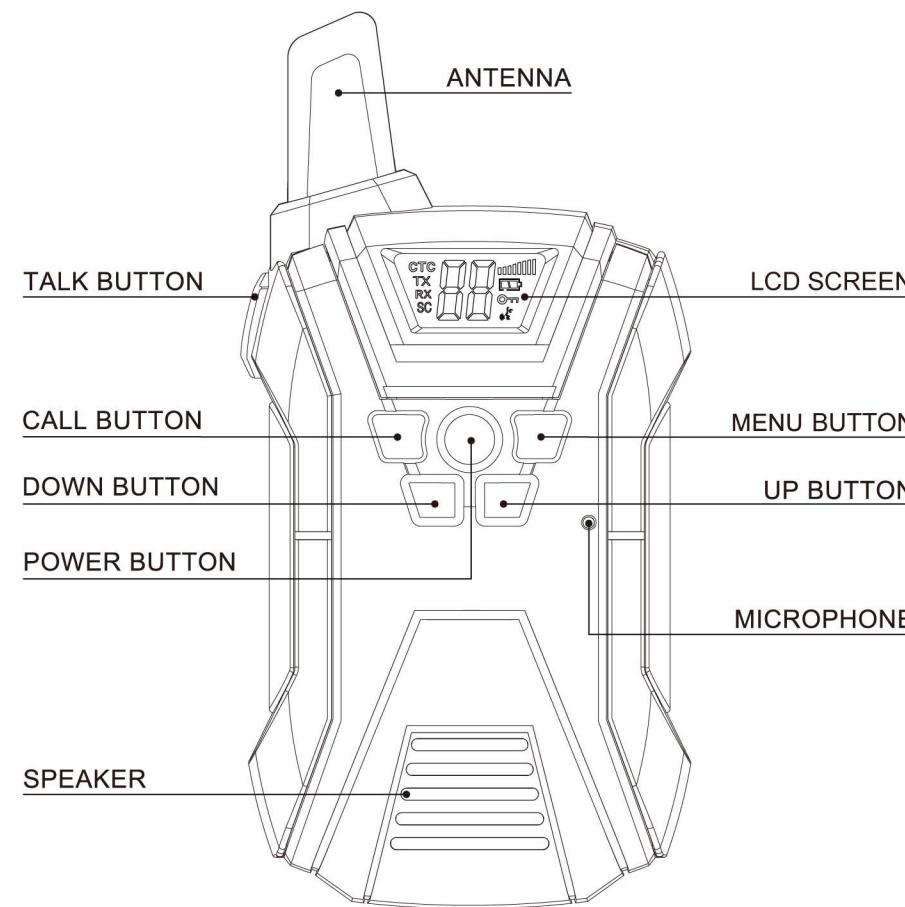

LCD SCREEN OVERVIEW

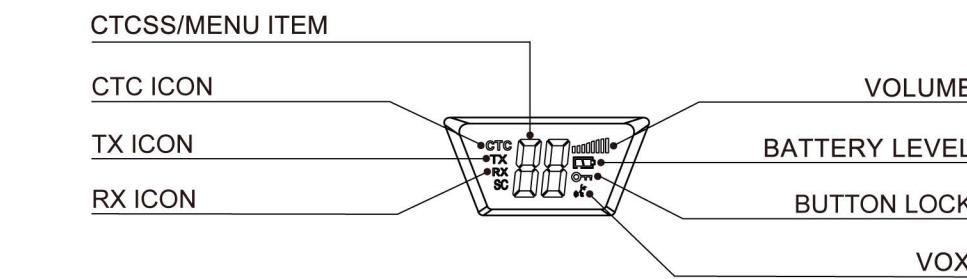

ULTRA LONG DISTANCE WALKIE TALKIE

NOTE: Please read these user instructions carefully before using the equipment and retain for future consultation.

1


SAR WARNING

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/KG averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body and front of face with minimum distance 25mm.

02

BELT CLIP REMOVAL/ATTACHMENT

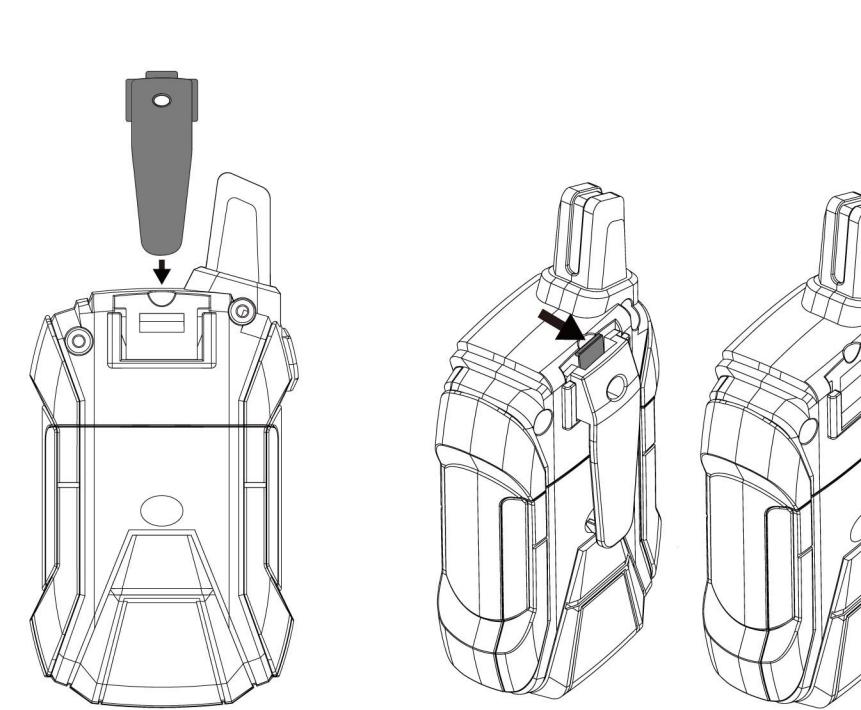


To reattach, slide clip piece down with the clip facing inward until you hear a click.
Push the tab out and push up the clip.

3

4

BATTERY INSTALLATION

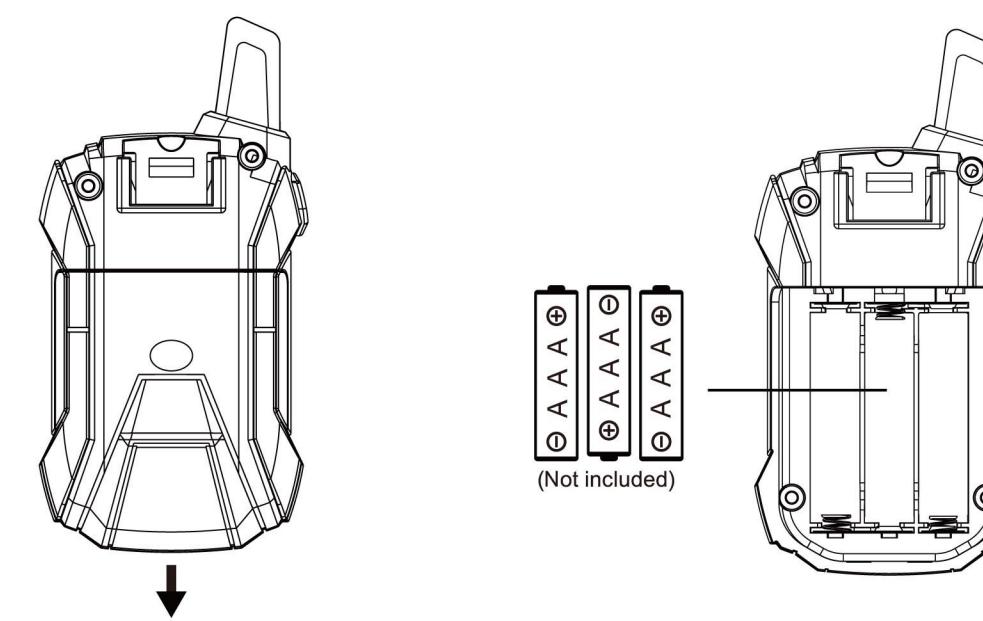

Press down on the back of panel of the unit and slide the battery cover off. (you may need to remove the belt clip for easier access).
Insert 3×1.5VAAA batteries(not included) as indicated. Then replace the cover.

03


SAFETY PRECAUTIONS

- > Do not use these walkie-talkies if they are damaged in any way
- > Do not use near gas pumps or fuel storage areas
- > Do not turn on or use on aircraft or in hospitals
- > Operating these devices near a radio may cause interference
- > Remove the batteries if devices will not be used for a long period of time

4

CALL FUNCTION

A call function alerts others that you want to start talking.

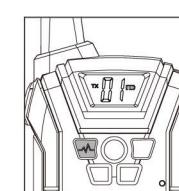

Press the call button to call the walkie-talkie of the same channel.

BUTTON LOCK

Press and hold the MENU button for 2 seconds to activate and deactivate Button Lock Mode. This locks all buttons except for the CALL button and TALK button, and the Button Lock icon "LOCK" will show on the LCD screen.

Cancel Lock Mode, press and hold the MENU button for 2 seconds.

NOTE

In Lock Mode, all buttons will have no function except for CALL button and TALK button.

DISPLAY BACK-LIGHT

Pressing any button will activate the LCD back-light.

05

FREQUENCY GUIDE

CH No.	RX Frequency (MHz)	TX Frequency (MHz)
1	462.5625	462.5625
2	462.5875	462.5875
3	462.6125	462.6125
4	462.6375	462.6375
5	462.6625	462.6625
6	462.6875	462.6875
7	462.7125	462.7125

06

FCC COMPLIANCE STATEMENT

All controls, adjustments and switches that's instructed in the manual or follow-up instruction provided by the manufacturer that may be operated or adjusted without resulting in a violation of FCC rules.

Warning: Any adjustment that could result in a violation of FCC rules and it's recommended that could be performed only by or under the immediate supervision and responsibility of a person certified as technically qualified to perform transmitter maintenance and repair duties in this radio service by an organization or committee representative of users of that service.

> Never mix new and used batteries

> For best results, direct the antenna upward when in use

> Clean with a damp cloth; do not use solvents or cleaning agents

> Do not modify these devices in any way

> Do not rely on these devices to contact emergency services

04

WALKIE-TALKIE OPERATING INSTRUCTION

POWER (ON/OFF) BUTTON

Turn on the device : press the power button once, LCD screen will light. LCD will show channel, volume and and battery level. Turn off the device : press and hold the power button (below the LCD screen) for 3 seconds.

VOLUME ADJUSTMENT

Press the up and down arrows (below LCD screen) to adjust volume up or down. Volume level is displayed on the screen. There are 1 - 8 volume levels.

BATTERY LEVEL

Look for the battery icon on the LCD screen to check your battery level.



The icon will flash and the device will beep when the batteries need to be replaced or recharged.

HOW TO CHANGE CHANNELS

Press the MENU button once (See the attached picture), the current channel number will flash on the LCD screen. There are 22 channels in total.

Changes or modifications i.e. replacing any transmitter component (crystal, semiconductor, etc.) not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Name of manufacturer: shantoushichuanggaowanjiuyouxiangongsi

Address: fengxiangjiedao fengxinerluxiehechangfang E2qu shantou guangdong



Question about your product?

Thank you for your recent purchase of Winyea Tag. For any question or issues with the product, please email us at

support@winyea.com

Winyea Tag™