


50W Megaphone User Manual

OVERVIEW


Battery Compartment Closed Clasp

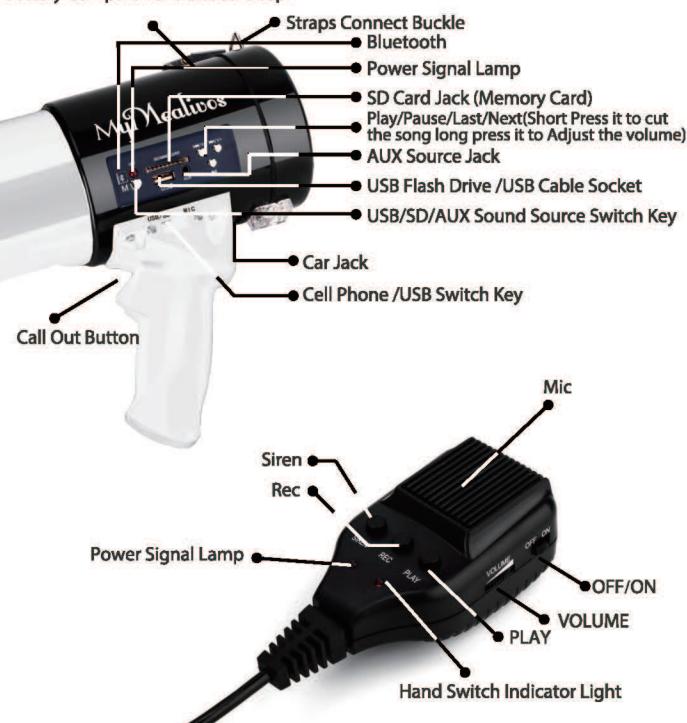

Megaphone User Manual

Setting Up

Cell Battery

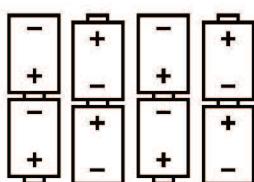

Insert 8 x "C" cell batteries to the clear sleeve as + - mark, then load the whole sleeve to megaphone

Lithium Battery



make sure indicator light is upward

DC 12V Car Charger(NOT INCLUDED)

The megaphone can be powered by an external 12Vdc source (such as car battery) connected via a 2.1mm DC jack located between the pistol grip and rear cover hinge (a lead is used for connection to a car cigar lighter socket).

Voice Amplification

The microphone can be used as a handheld device ,or attached to the mic holder for one-handed operation .

1. Make sure the selector is in the MIC position
2. For intermittent use : press the TRIGGER CONTROL to active the microphone .
3. For constant voice amplification :Switch the ON button on the microphone .
4. Gradually adjust the volume control roller to the desired output volume.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Using the Siren function

1. Make sure the selector is in the MIC position
2. Press the Siren button on the microphone.

Using the Record function

1. Make sure the selector is in the MIC position.
2. Press the REC button on the microphone and speak towards to the microphone.
3. To end the Record ,press back the REC button.

Using the Play function

1. Press the play button on the microphone and play the record.

Using the MP3 Player

1. Playing music or audio.
- ①. Make sure the selector is in the SD/USB position.
- ②. SD/MMC CARD & USB: Insert a memory card into the SD/MMC card slot ,or insert a flash drive into the USB port. The audio will automatically begin playing.
- ③. AUX INPUT: If using a mobile device ,connect it to the Aux input jack with a mini-plug connector. Play and control the audio from the device.
- ④. Bluetooth: Press M button to switch Bluetooth function, voice prompt "Bluetooth mode".

2. MP3 player operation

▶/■ Play/Pause	Pauses and resumes playing the MP3
◀/▶-	Short press: skip to previous track Long press : decrease volume
▶/▶+	Short press: skip to next track Long press: increase volume
M (Recall MARK)	Short press: selects between SD card ,USB, Aux inputs and Bluetooth function

Technical Parameters

- Function: Speak Siren Record USB/SD/MMC/AUX Bluetooth
- Powered By: 8 X C Batteries, Not Included
- Rechargeable Battery: 11V Lithium, 1500mAh
- Max Power: 50 Watt MAX
- Transmission distance: 500 meters
- Frequency: 500HZ-20KHZ
- Max Record second: 240 S
- Product size: 13.8x9inch
- Weight (without batteries): 2lb (1kg)

Warning

1. Remove the battery when the megaphone is not in use for a long time.
2. Replace cells or charge the battery when sound volume is not loud enough.
3. Reduce the volume to min when testing and do not toward directly to a person's ear.