

伸缩肛塞 使用说明书



产品操作说明

 
一、主机接收部分

- 1.电源开关【Ⓢ】键，（开关/伸缩/震动三合一）长按1.5秒开/关机，开机进入待机状态指示灯长亮。点按进入伸缩/震动模式，每点按一次更换一次伸缩/震动模式，共3种伸缩速度和12种震动模式，点按依次循环！
- 2.长按【Ⓢ】1.5秒关机后，指示灯熄灭，再点按可以使伸出部分缩回到原位！
3. 产品供电：采用DC3.7V锂电。
4. 充电方式：【DC 5V】USB DC(直径2.5MM,外露15MM) 充电线充电，充电时DC充电线对准产品上的DC充电孔插入，对产品进行充电。产品充电时按键无作用，不能开/关机，指示灯呼吸亮，充满电白灯长亮！


二、遥控部分

- 1.电源开关【Ⓢ】键，主机在工作时长按此键1.5秒可关机，点按一次可暂停工作，点按时指示灯闪亮一次！
- 2.主机待机状态下，点按【Ⓢ】键进入伸缩/震动模式，每点按一次更换一次伸缩/震动模式，共3种伸缩速度和12种震动模式，点按依次循环！
- 3.接收机工作状态，点按【Ⓢ】键一次，进入十秒钟爆发高潮！
- 4.产品供电：采用一节（AAA） 1.5V干电池供电。

操作按键（如图示）

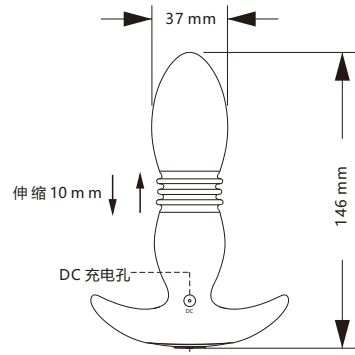

Ⓢ 长按开机关/点按切换伸缩震动频率，点按缩回原位

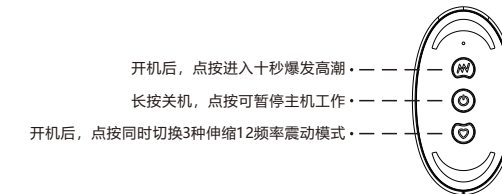 

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

INSTRUCTION

一： For the anal vibrator

1.Power button (Ⓢ) - This button is for turn on/off- telescopic-vibrate. Hold 1.5 seconds to turn it on/off, and the vibrator will be standby. Then press this button to start telescopic/vibrate. In this situation press the button to switch the telescopic and vibration frequency. There is 12 frequencies totally.

2.Hold (Ⓢ) button 1.5 seconds to turn off. The indicator light goes out. Then press it again the telescopic will move to the initial position.

3.Powered by: DC 3.7 lithium battery.

4.Charging: [DC 5V] Connect the computer USB to 2.5MM diameter (exposed 15MM) charging cable for charging, or use a mobile phone charger to charge.While charging model, the button does not work, and the product cannot be turned on. The indicator light flashes when charging, and turns on after full recharged!

二： For the remote controller

 
1. Power button (Ⓢ) -Hold this button 1.5 sends to turn on/off the vibrator.And then press it to pause. the indicator light will flesh when it works!

2. When the controller standby, press (Ⓢ) to start telescopic/vibrate. Press this button to switch 12 vibration frequencies & 3 telescopic speed. (The indicator light will light up and off each time you press the button!)


3.Press (Ⓢ) into explore model for 10 seconds, and then turn into normal model.

4.Powered By: 1* (AAA) 1.5V battery,the indicator light flashes with charging, and the indicator light is on when fully charged.

Operation buttons (as shown)

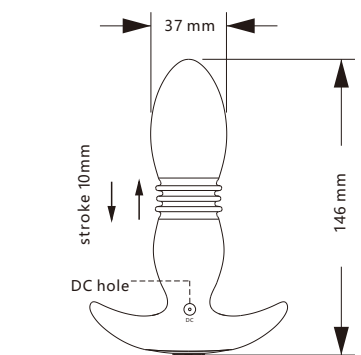

 Ⓢ Hold 1.5 s to switch / click to switch 3 kinds of telescopic vibration frequency.When it's off,press it again to retract original position

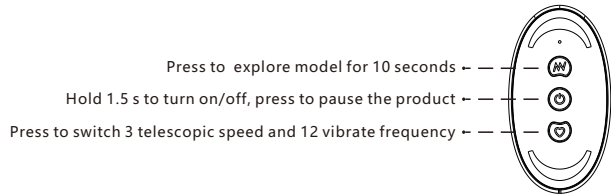

製品操作方法

一、製品（本体）部分

1. 電源ボタン【Ⓢ】（スイッチ/振動/伸缩の3-in-1）を1.5s長押しすると、製品はオン/オフにします。製品はオンにすると、スタンバイモードに入り、指示ランプは点灯します。短押しして、伸缩/振動モードに入れます。毎回の短押しは伸缩/振動モードを切り替えます。3種類の伸缩速度と12種類の振動モードあり、順に循環します。

2. 【Ⓢ】を1.5s長押しして、本体はオフにします。そして、指示ランプは消灯します。再度短押しすると、伸ばした部分は元の位置に戻ります

3. 製品はDC3.7Vのリチウム電池で送電します。

4. 充電方式：【DC 5V】USB DCケーブル（直径2.5mm、露出15mm）で製品を充電します。充電時、DCケーブルは製品のDC充電口にぴったり合わせてください。充電中、製品のボタンは無効になり、製品はオン/オフにすることができなく、指示ランプは点灯します。充電完了なら、ホワイトライトは点灯します。

 
二、リモコン部分

1. 本体は動作している場合、リモコンの電源ボタン【Ⓢ】は1.5s長押しして、製品はオフにします。短押しするなら、動作は中止します。短押し時、指示ランプは一回点灯します。

2. 本体がスタンバイモードである場合、【Ⓢ】ボタンを短押しして、伸缩/振動モードに入ります。毎回の短押しは伸缩/振動モードを切り替えます。3種類の伸缩速度と12種類の振動モードあり、順に循環します。

3. 受信機は動作している場合、【Ⓢ】ボタンを短押しして、10s後、潮吹きに達します。

操作ボタン（図の通り）

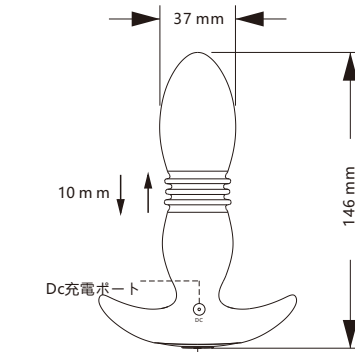

Ⓢ 長押し、オン・オフにする/短押し、伸缩・振動モードを切り替える/短押し、戻の位置に戻る

