


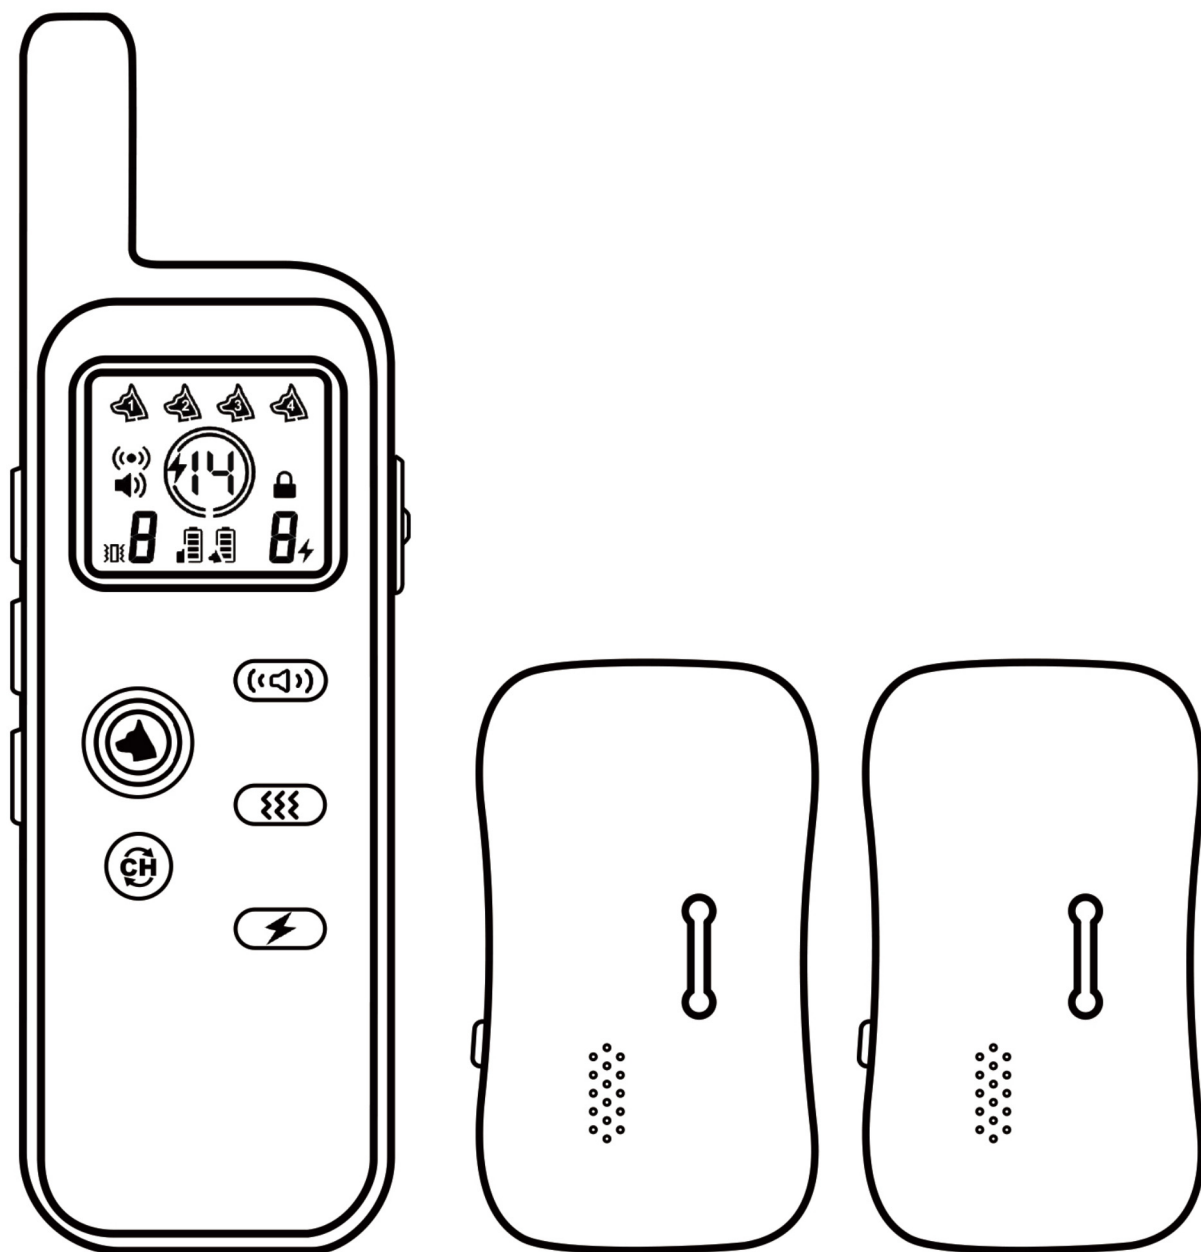

User Manual

Model:GT1



Contents

Description of Buttons	1
Function Introduction	2
-Charging	
-Remote control/collar on/off	
Dog Training Commands	3-4
-Beep&Ultrasonic command	
-Vibration intensity adjustment	
-Shock intensity adjustment	
-Shock Intensity Test	
Electronic Fence Function	5-10
-14 levels of fence range	
-Out of range warning:no shock	
-Out of range warning:with shock	
-Things to be note before entering the fence	
-Factors affecting fence signals	
-Important notes before entering fence mode	
Pairing Introduction	11-12
-Pairing	
-Cancel pairing	
-Pairing with multiple collars	
Wearing Method & Precautions	13-14
Frequently Asked Questions	14-15
Other Information	16-19
-Important safety information	
-Operating environment and maintenance	
-FCC warning	
-Specification	
What You Get	20-21

Button Function

Remote

Screen

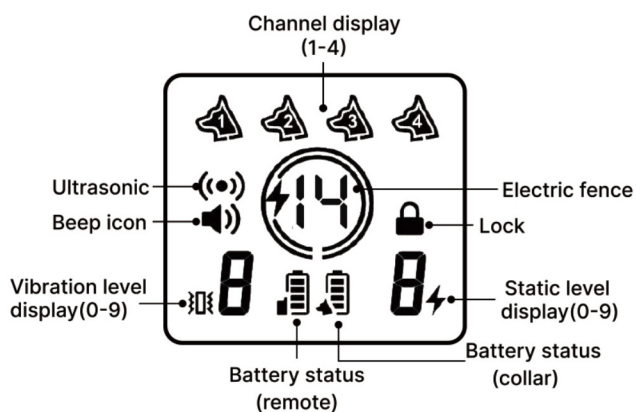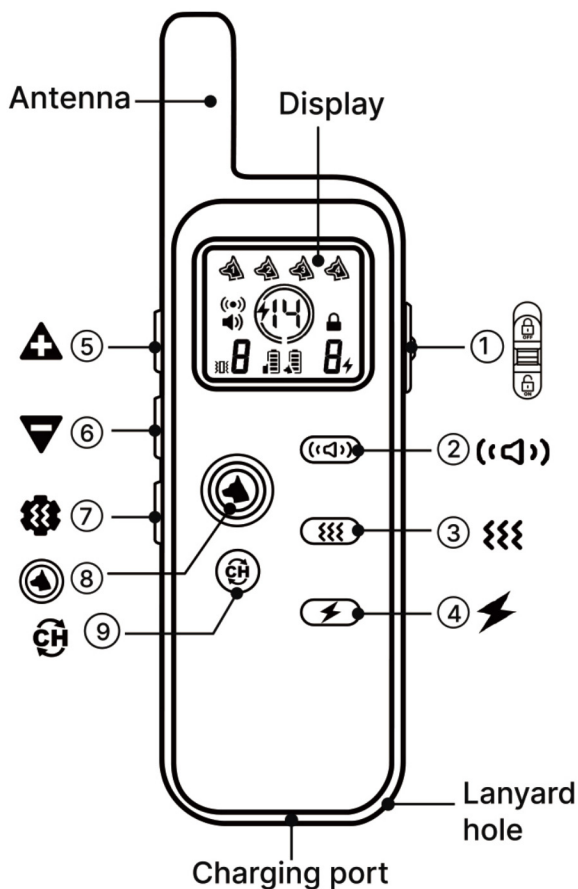

①



Power button

Power on/safety lock to prevent accidental operation

②



Beep button

Beep command/Ultrasonic command/confirm pairing

③



Vibration button

Vibration command/exit pairing

④



Shock button

Shock command/Delete pairing

⑤ ⑥



Up/down button

For adjusting the shock level and the fence level

⑦



Vibration button

Vibration level adjustment/exit pairing

⑧



Wireless fence button

Short press to enter fence mode with no shock, long press to enter fence mode with shock/short press again to exit



⑨




Channel button

For channel switching (dog switch) and enter pairing

Collar

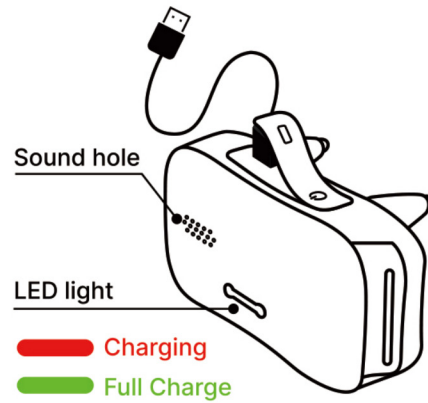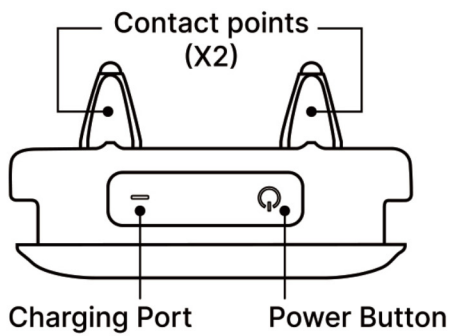

Turn On/Off

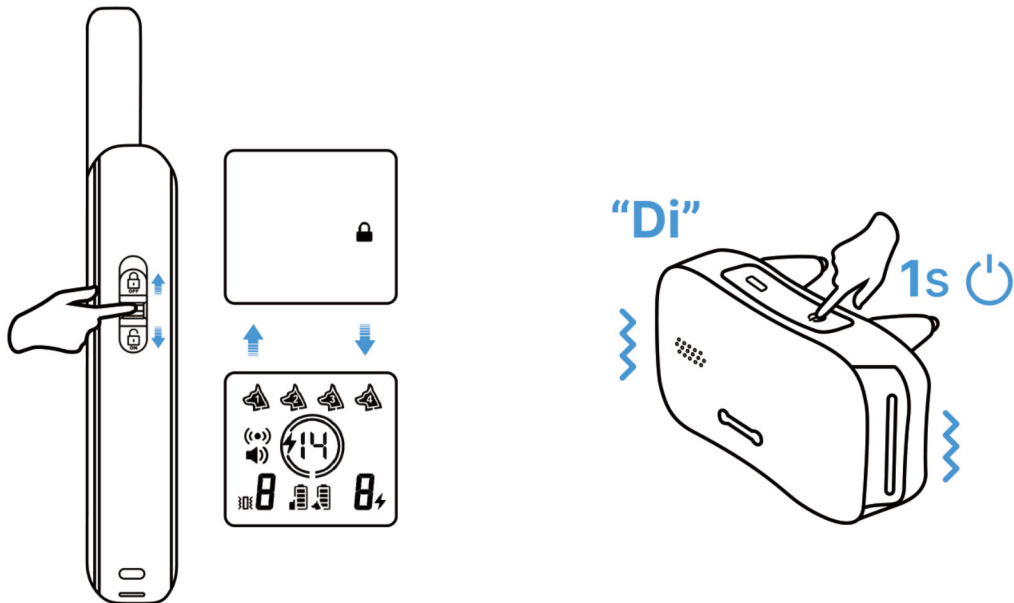

Remote:

Push to ON position to unlock, push to OFF position to lock.
If the display does not light up, charge it.


Collar:

Short press the power button for 1 second to turn it on.
(Goes to sleep mode after 6 minutes of inactivity)


Beep&Ultrasonic Command

Short press beep button on the remote, and the receiver will emit a beep.

Long press will make a ultrasonic sound.

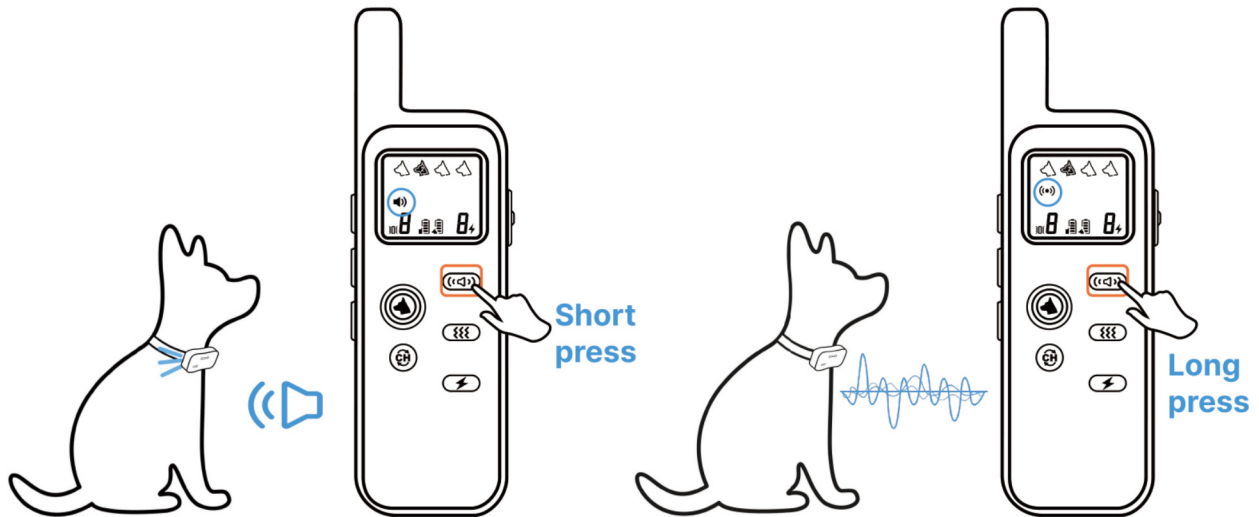


Vibration Intensity Adjustment

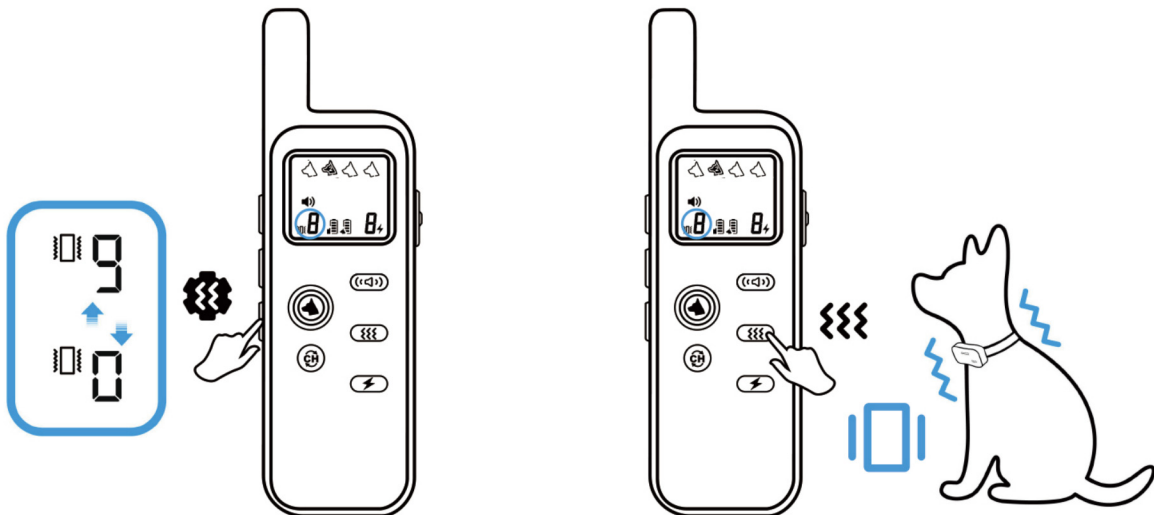

1. Press (⚙️) to adjust the vibration levels from 0 to 9. Level 0 means no vibration, and level 9 is the strongest vibration.
2. Short press (〰️) for one vibration, long press for continuous vibration of 8 seconds.

Shock Intensity Adjustment

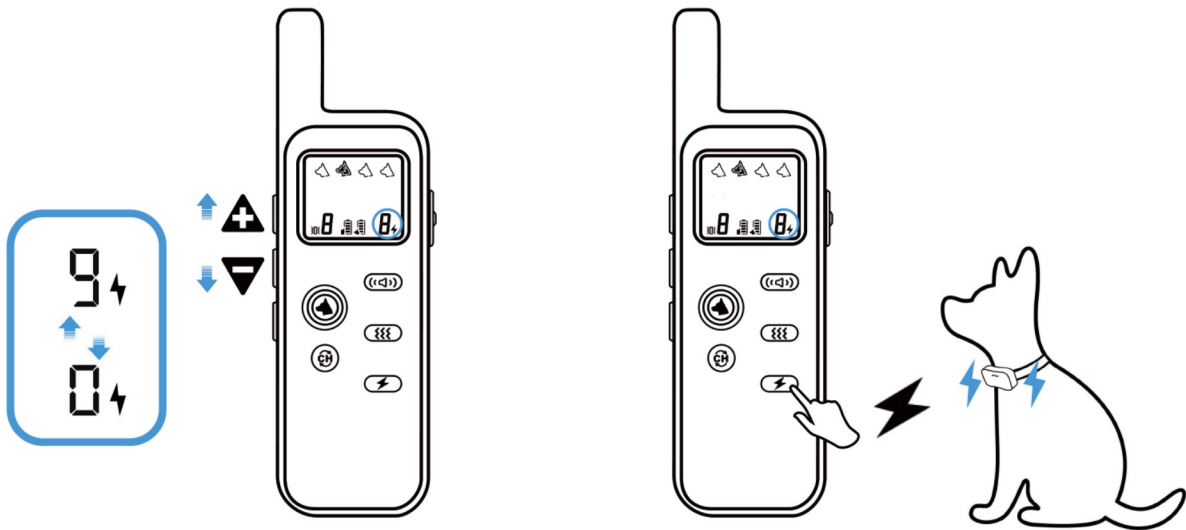


(+) Shock increase button

(-) Shock decrease button

1. Level 0 means no shock, and level 9 is the strongest shock.
2. Short press (⚡) for one shock, long press for continuous shock of 8 seconds.

Shock Intensity Test

1. Screw the contact points onto the collar and tighten it by using the test light hole.

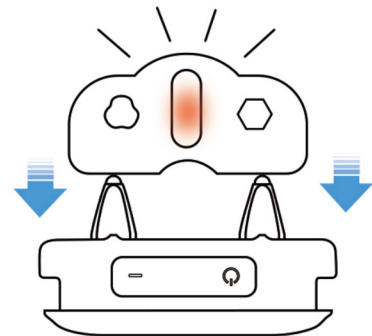

2. Place the bottom of the test light onto the contact points. Make sure the conductive wire inside the test light touches the top of the contact points.
3. Press the shock button on the remote and observe the brightness of the test light.
Level 1: Faintlight, Level 9: High light.