



Pairing (Already paired at the factory)

- 1 Press and hold (CH) for 3 seconds, the icon (Speaker) flashes to enter pairing.
- 2 Short press the (CH) button on the remote control to select the channel you want to pair with your collar.
- 3 When the collar is turned off, press and hold (P) for 3 seconds until the LED light flashes red and green.
- 4 Press the (Speaker) button to confirm pairing. It will beep to indicate pairing is successful.

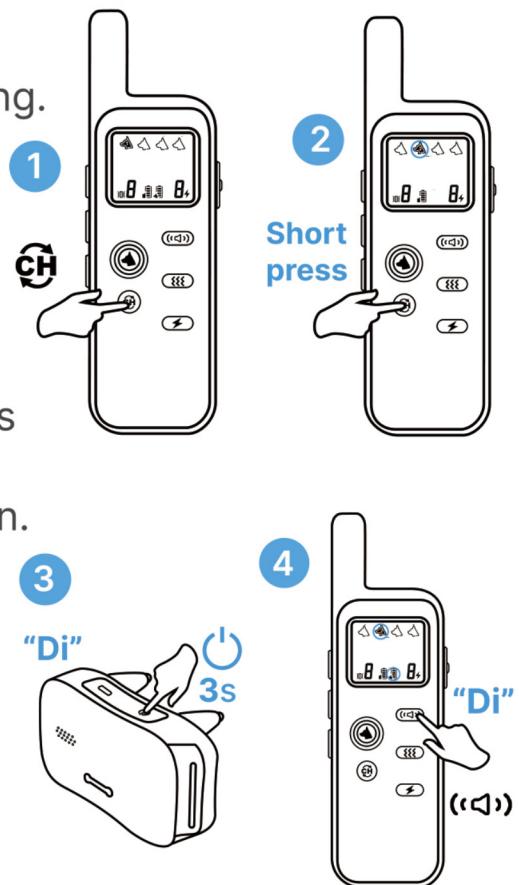


Cancel Pairing

- 1 Press and hold (CH) for 3 seconds, the icon (Speaker) flashes to enter pairing.
- 2 Short press the switch channel to select the collar to unpair.
- 3 Press the (Flash) button to delete the pairing.
- 4 Press the (W) button to exit pairing.

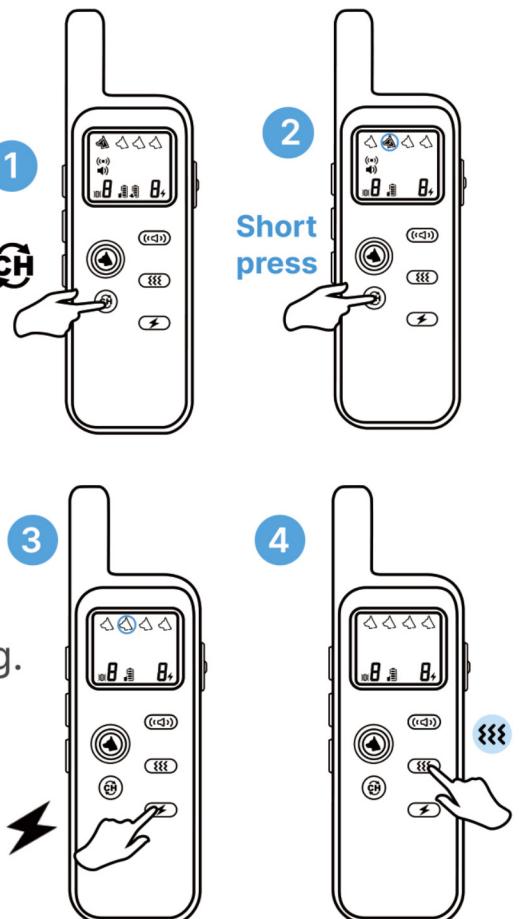


Pairing With Multiple Collars

Repeat the above operations, you can continue to pair other collars.

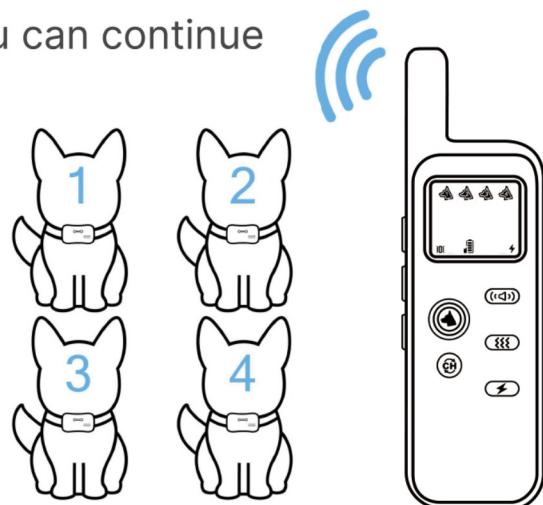

After the four channels are paired, press (CH) to select channels from 1 to 4 to control single collar seperately or control all the collars together at the same time.

Control Multiple Collars In Training Mode

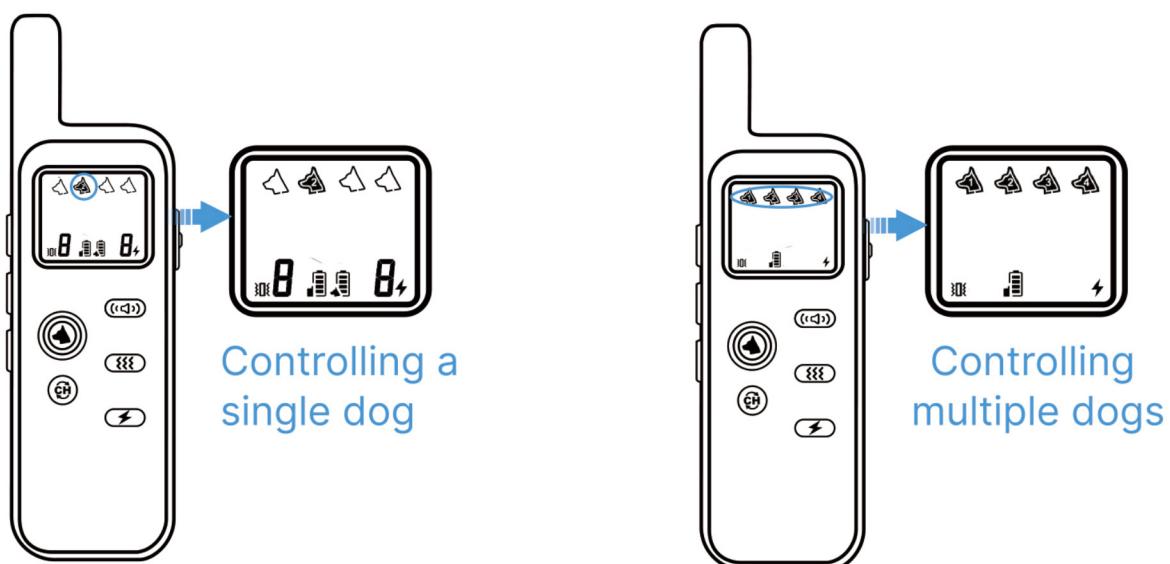

1. When controlling multiple dogs, the vibration and shock levels can be set individually for each dog.
2. When controlling multiple collars, the screen does not display the shock level and vibration level

Wearing Precautions

- Wearing the collar for too long or too tightly can cause abrasion on the dog's skin, leading to redness or bedsores
- Make sure the dog does not wear the collar for more than 12 hours a day.
- Please readjust the position of the collar on the pet's neck every 1 to 2 hours. check the tightness of the collar regularly to prevent excessive pressure.
- Do not tie the leash to the receiver as this will cause excessive pressure on the collar.
- Please clean the contact area between the pet's neck and the receiver with a damp cloth every week.
- Check the contact area every day for signs of rash or pain.
- If you notice a rash or pain on your dog, stop using the collar until the skin heals. If this condition persists for more than 48 hours, see a doctor immediately.

Training Tips


1. Choose suitable contact points for your dog.
2. If the hair is too thick, separate it by hand so that the contact points touches the skin, making sure both electrodes touch the skin at the same time.
3. The tightness of the collar tied to the dog's neck is suitable for inserting a finger.
4. Shock training is not recommended for dogs under 6 months of age, aged, in poor health, pregnant, aggressive, or aggressive towards humans.
5. In order to make your pet less shocked by electric shock, it is recommended to use sound training first, then vibration, and finally use electric shock training. Then you can train your pet step by step.
6. The level of electric shock should start from level 1.

Wearing the Collar



1. Adjust the collar tightness to your dog's neck circumference.

2. When wearing the collar, the tightness is fit if one finger can be inserted underneath.

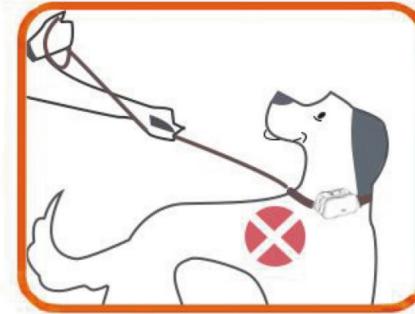

3. If your dog has thick fur, please separate the fur at the neck to enable electrodes to reach the skin.

4. The traction rope cannot be put on the collar. Make sure that the collar is not exposed to other external pressures.

Frequently Asked Questions

If you have any questions, please feel free to contact our customer service team.

Questions	Suggestions
What Is The Center Point Of The Fence?	Remote control is the center point
Will Training Functions Work Normally When The Fence Is On?	The training function can be used in the fence mode, you can manually train your pet through the remote. Note: The training level needs to be set before entering the fence mode. Please refer to page 6 for Preset Operations.
The Boundary Zone Seems To Fluctuate	This is normal for the electromagnetic field of the Wireless System. The field may be affected by surrounding radio frequency or other signals.

Frequently Asked Questions

Questions	Suggestions
Fence False Alarm	<ol style="list-style-type: none"> 1. The remote control or receiver is close to metal items, causing serious signal interference 2. When the dog lies on the ground and covers the collar, causing signal interference, it is recommended to wear the collar on the side of the dog's neck or on the back 3. Check if the collar is turned on 4. Affected by other radio interference in the surrounding area 5. The recommended height for placing the remote control is about 1 meter
When Out Of Range, Do The Warnings Stop Immediately After Returning To Range Or Is There A Delay?	There is usually a delay of about 3-5 seconds
Shock/Vibration Does Not Work	<ol style="list-style-type: none"> 1. Check whether the shock or vibration level setting is 0 or not 2. The dog's hair is too thick, push aside the dog's hair and put the contact points in contact with the dog's skin 3. The collar is too loose, it is recommended to leave a gap of one finger when wearing it
Can Multiple Collars Be Controlled Simultaneously?	Yes, our system can control a single collar separately or all paired collars together at the same time
Will Signals Between Collars Affect Each Other When Controlling Multiple Collar?	No, they will not affect each other
Can Not Be Turned On	Try to turn on the device after fully charging it
Unable To Charge	<ol style="list-style-type: none"> 1. Check whether you are using a normal 5V charger 2. Check if the charging cable is broken
Accessories Damaged	Please take a video or photo and send it to our after-sales team to solve it for you

If you have any questions, please feel free to contact our customer service team.

Important Safety Information

- !** Disassembly of the collar is strictly prohibited under any circumstances, as it may destroy the waterproof function and thus void the product warranty.
- !** If you want to test the electric shock function of the product, please use the delivered neon bulb for testing, do not test with your hands to avoid accidental injury.
- !** Note that interference from the environment may cause the product to not work properly, such as high-voltage facilities, communication towers, thunderstorms and strong winds, large buildings, strong electromagnetic interference, etc.
- !** 1. When pressing buttons such as vibration or electric shock, and there is no response, you should first check:
 - 1.1 Check if the remote control and collar are turned on.
 - 1.2 Check whether the battery power of the remote control and collar is sufficient.
 - 1.3 Check if the charger is 5V, or try another charging cable.
 - 1.4 If the battery has not been used for a long time and the battery voltage is lower than the charging start voltage, it should be charged for a different period of time.
 - 1.5 Verify that the collar is providing stimulation to your pet by placing a test light on the collar.
- !** 2. If the shock is weak, or has no effect on pets at all, you should check first.
 - 2.1 Make sure that the contact points of the collar are snug against the pet's skin.
 - 2.2 Try increasing the shock level.
- !** 3. If the remote control and collar do not respond or cannot receive signals, you should check first:
 - 3.1 Check whether the remote control and the collar are successfully matched first.