



EN V1.2.1


# R10X Electric Scooter User Manual




Please read this manual carefully before using the electric scooter.

# HOW TO CONTACT US ON AMAZON?


Step 1: Log in to your Amazon account.

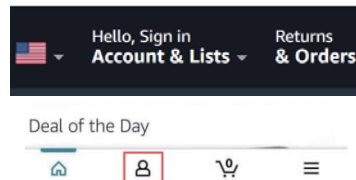


Step 2: Go to **Your Orders**. Select **Problem with order** in the list.

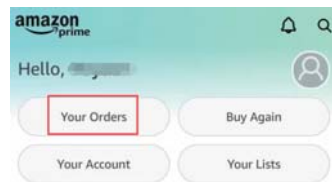

Step 3: Click the **"Ask a Question"** button. Choose your topic from list displayed.

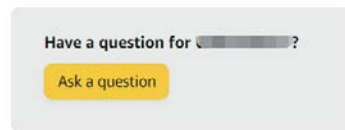

Step 4: Select **Contact seller**.

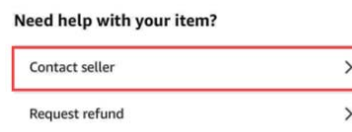


**\*If you purchased RCB products by other platforms or channels, please also find the corresponding seller contact support. Thanks for your support and patience!**

# TABLE OF CONTENTS

|                                     |       |
|-------------------------------------|-------|
| 1. Packing List.....                | 2     |
| 2. Product Structure.....           | 2     |
| 3. Product Parameters.....          | 3     |
| 4. Assembly Instruction.....        | 3-4   |
| 5. Function Description.....        | 4-7   |
| 6. Error Code Indication.....       | 7     |
| 7. Folding Operation.....           | 8     |
| 8. Safty Instructions.....          | 9-10  |
| 9. Safety Reminder.....             | 10-11 |
| 10. Daily Care And Maintenance..... | 11    |

## 1. PACKING LIST

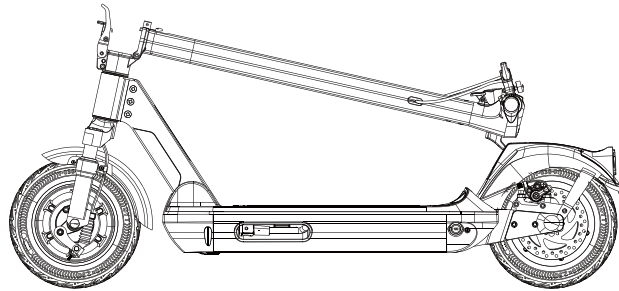

M3 Hexagon Wrench x1



Charger x1




M5 Screw x4



User Manual x1

**After received the electric scooter, please check package carefully, if anything is missing or damaged, please contact our customer service as soon as possible.**

## 2. PRODUCT STRUCTURE

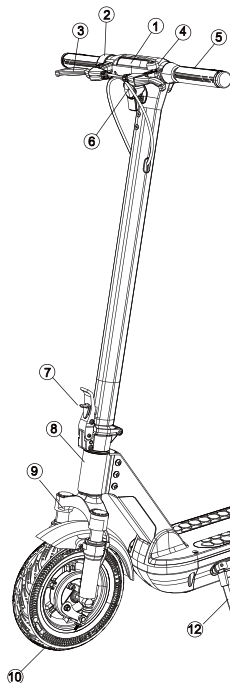

- ① Meter
- ② Throttle Dial
- ③ Right Brake Lever
- ④ Left Brake Lever (with bell type)
- ⑤ Handlebar
- ⑥ Headlight
- ⑦ Folding Large Stem
- ⑧ Head Tilt Stem
- ⑨ Suspension Fork
- ⑩ Front wheel
- ⑪ Foot Pad
- ⑫ Kick Stand
- ⑬ Frame Chassis
- ⑭ Rear Fender (hook type)
- ⑮ Taillight
- ⑯ Disc Brake
- ⑰ Back fork
- ⑱ Motor Wheel

### 3. PRODUCT PARAMETERS


|                     |                                                      |
|---------------------|------------------------------------------------------|
| Model Number        | R10X                                                 |
| Voltage Capacity    | 36V 10Ah                                             |
| Motor Power         | 500W                                                 |
| Max. Riding Mileage | 20miles                                              |
| Speed               | Deceleration mode: 3mph, E: 7mph, D: 12mph, S: 18mph |
| Max. incline        | ≈12°                                                 |
| Waterproof Rating   | IPX4                                                 |
| Front Wheel         | Inner Honeycomb Tire                                 |
| Rear Wheel Motor    | Inner Honeycomb Tire                                 |
| Meter               | LED Digital Display                                  |
| Headlight           | LED                                                  |
| Brake light         | LED                                                  |
| Unfolded Size       | 1186L x 510Wx1167H/mm                                |
| Folded Size         | 1186L x 510W x 520H/mm                               |
| Load/LBS            | Max.Load 330 LBS                                     |
| Net Weight/LBS      | 48 LBS                                               |
| Gross Weight/LBS    | 54 LBS                                               |
| Charger             | 42V 2A                                               |
| Charging Time       | 5-6H                                                 |

\*Fully charged, 75kg load, 30 ℃, 70% humidity, level 3 wind speed, flat road, and measured at a constant speed of 12mph, the actual battery life will vary from factors such as load, temperature, wind speed, road surface and operating habits.


\*All the above data are from RCB laboratory, and errors may occur due to changes in objective conditions during actual use.

### 4. ASSEMBLY INSTRUCTION


1. Raise the riser to make it stand up (see image 1), lock the folding wrench (see image 2), and loose the kick stand (see image 3)

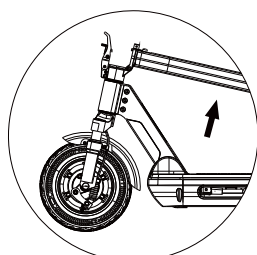

(Image 1)


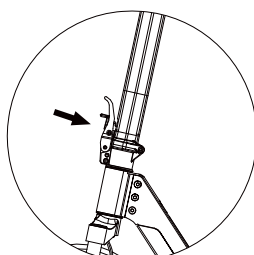


(Image 2)

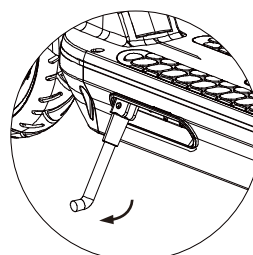


(Image 3)

2. Install the handle bar on the stem (see image 4), and tighten the four M5 screws by the M3 Hexagon Wrench (see image 5)

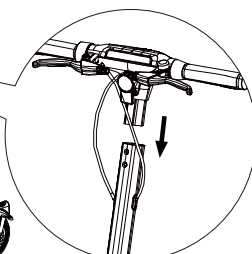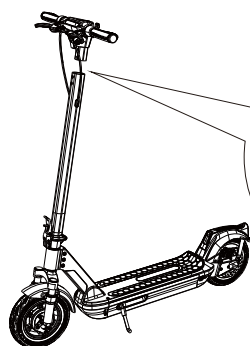

(Image 4)

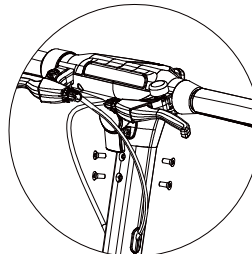


(Image 5)

## 5. FUNCTION DESCRIPTION


### 1. Charge your scooter

Please make sure that the scooter has sufficient power before each use.

The scooter is fully charged when the LED on the charger changes from red to green.

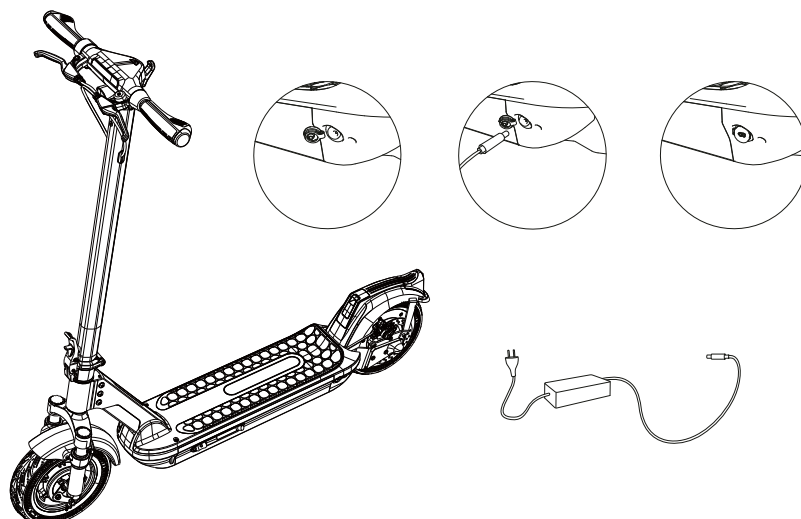


## 2. Start

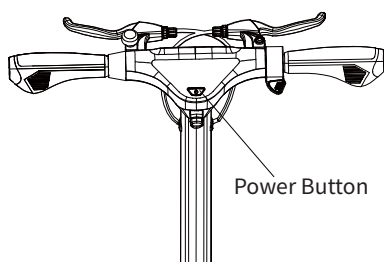


- ① Long press the power button for 2 seconds:  
power on and meter lights
- ② Click the power button one time (short press):  
Switch the gear
- ③ Double click the power button continuously(short press):  
the front and rear lights are on
- ④ Click the power button continuously four  
times (short press): enable cruise control
- ⑤ Click the power button continuously five times (short press):  
Switch between zero start and non-zero start mode
- ⑥ Click the power button continuously six times (short press):  
Switch between TRIP and ODO
- ⑦ Long press the power button for 2 seconds:  
Power off, automatic shutdown after 10 minutes of inactivity


## 3. Meter

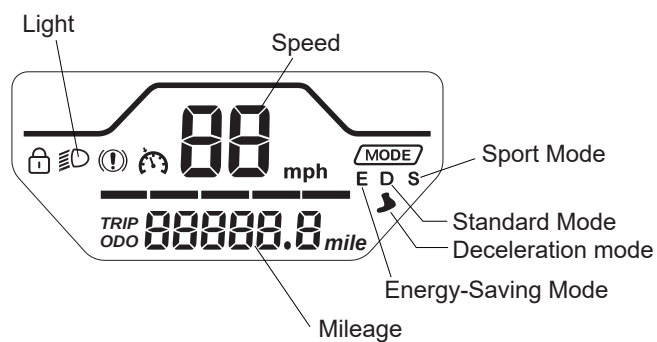


#### 4. How to ride

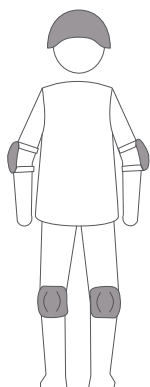


Warning: Wear a helmet, elbow pads and knee pads. Please read the instruction carefully before using. Do not touch the brake system. Refer to the instruction for more information.

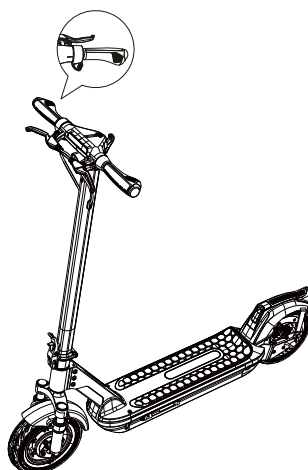

1. Turn on the scooter, and check the power indicator.

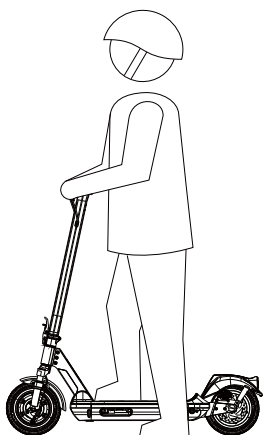

2. Step on the deck with one foot, and slowly kicks off the other on the ground. When the scooter starts to coast, put both feet on the deck and press the accelerator .

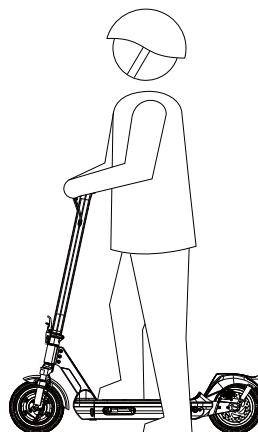

3. When the scooter is at a full stop, the accelerator automatically turns off. To restart the scooter, it is necessary to repeat step 2.