

4. Release the accelerator and the kinetic energy recovery system initiates automatically to brake slowly; And squeeze the brake lever for a sudden brake.

5. Tilt your body to the steering direction as you turn, and slowly turn the handlebar.


## 6. ERROR CODE INDICATION

### Error code:


- 1) E1: Brake failure (F1 means that the power-on self-test failed)
- 2) E2: Throttle failure (F2 means the power-on self-test failed)
- 3) E3: Connection failure
- 4) E4: Overcurrent protection
- 5) E5: Undervoltage protection
- 6) E6: Overvoltage protection
- 7) E7: Motor Hall fault
- 8) E8: Motor phase line fault
- 9) E9: Controller failure

## 7. FOLDING OPERATION

1. Hold the front stem with your right hand and push the safety buckle upwards. After the safety buckle is separated, pull the release handle outward to separate it.

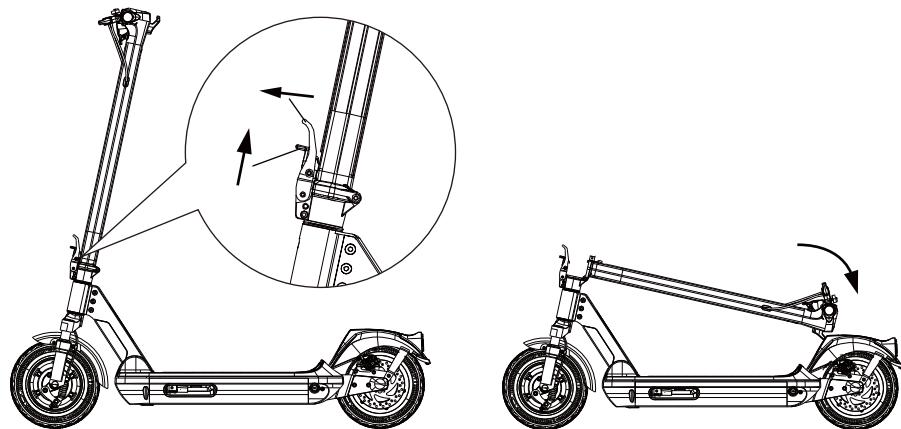

2. Turn the folding stem down, after the hook is fastened to the rear fender, the folding is completed.

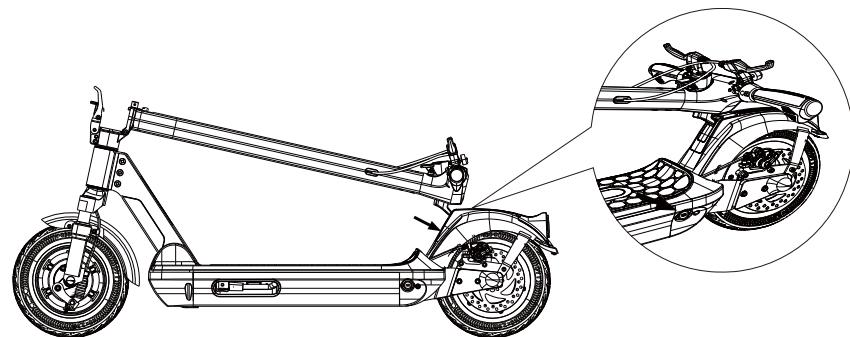


Similarly, open the fold mechanism, press the unlock button on fender by your right hand, turn the folding stem (front stem) up with your left hand and buckle the release handle, confirm whether the safety buckle is fastened before you riding.


## 8. SAFETY INSTRUCTIONS




 Don't ride in the rain

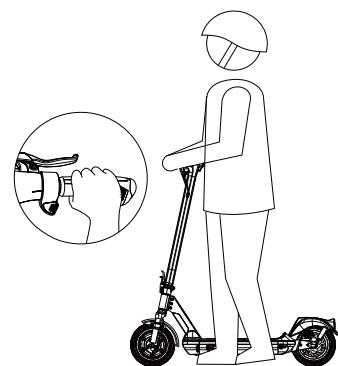

 Don't press the accelerator when you are walking around the scooter

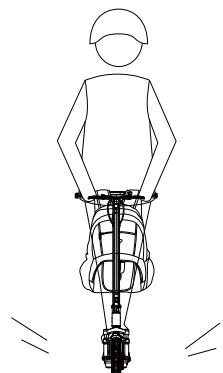


 Don't hang bags or the heavy product on the handlebar

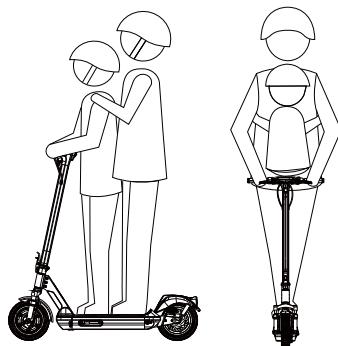

 Don't ride with anyone else, include children



 Don't keep your hands away from the handlebar

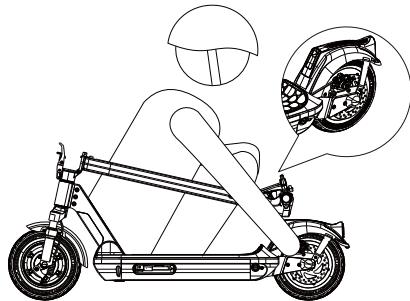

 Don't touch the brake

## 9. SAFETY REMINDER !

- 1.The scooter is intended for riders older than 16 years. Do not ride the scooter if you suffer from reduced physical, sensorial or mental capabilities. Riders with a lack of experience or knowledge should drive carefully.
- 2.This electric scooter is a leisure device. But once they're in a public area, they'll be seen as vehicles, subjecting to any risks faced by vehicles. For your safety, please follow instructions in the manual and traffic laws and regulations set forth by government and regulatory agencies.
- 3.At the same time, you should understand that risks cannot be entirely avoided as others may violate traffic regulations and drive incautiously. The faster the scooter is, the longer it takes to stop. On a smooth surface, the scooter may slip, lose balance, and even result in a fall. Thus it is crucial that you use caution, keep proper speed and distance, especially so when you're unfamiliar with the place.
- 4.Riding with high speed or a speed that is not appropriate or adequate for the situation (bad weather conditions, bad surface conditions, or the like) may lead into a potential loss of stability or loss of control. To reduce any risk, you must follow all instructions in this user manual. Be careful when folding and unfolding the product, it may fall and cause injury.
5. Check the scooter before every use. When you note loosen parts, low battery alerts, flat tires, excessive wear, strange sounds, malfunctions and other abnormal conditions, stop riding immediately and call for professional support.
6. When riding a scooter, you need to hold the handle with both hands to avoid shaking and falling down.

7. Always place the scooter on its stand on a flat and stable surface. The scooter must be placed with the stand against the slope to prevent it from tipping over. Never place the scooter with the front facing down the slope, as the stand may close and tip the machine.

## 10. DAILY CARE AND MAINTENANCE

### **Cleaning and storage**

If you see stains on the scooter's body, wipe them off with a damp cloth. If the stains won't scrub off, put on some toothpaste, and brush them with a toothbrush, then wipe them off with a damp cloth. If you see scratches on plastic parts, use sandpaper or other abrasive materials to polish them.

### **Notes:**

When using RCB electric scooter R10X, please abide by the relevant local laws and regulations.

Do not clean the scooter with alcohol, gasoline, kerosene or other corrosive and volatile chemical solvents to prevent dire damage.

Do not wash the scooter with a high-pressure water spray.

During cleaning, make sure that the scooter's turned off, the charging cable is unplugged, and the rubber flap is closed as water leakage may result in electric shock or other major problems.

When the scooter's not in use, keep it indoors where it is dry and cool. Do not put it outdoors for long time. Excessive sunlight, overheating and overcooling accelerate tire aging and compromise the scooter and the battery pack's lifespan.

### **Maintenance:**

Always charge before exhausting the battery to prolong the battery's lifespan. The battery pack performs better at normal temperature, and poor when it is below 0°C. For instance, when it is below -20°C, the riding range is only half or less at normal state. When the temperature rises, the riding range restores.

22Scooter shall be only be used with original batteries and charging of the Scooter shall only be done by the original charging adapter supplied with the Scooter (or any battery model or charging adapter model approved by the manufacturer as compatible).

Do not place the battery in an environment where the ambient temperature is higher than 50°C or lower than -20°C (e.g., do not leave the scooter or the battery pack in a car under direct sunlight for an extended time).

If the scooter is expected to be left idle for more than 30 days, please fully charge the battery and place it in a dry and cool place. Keep in mind to recharge it every 60 days to protect the battery from potential damage which is beyond limited warranty.

### **MAINTENANCE CONTACT INFORMATION :**

We provide warranty service and lifetime after-sales consulting service for our electric scooters. Please contact [contact@rcb-scooter.com](mailto:contact@rcb-scooter.com) for help you if you have any problems, we'll reply you at the earliest and provide satisfied solutions for you as soon as possible.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could

void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These

limits are designed to provide reasonable protection against harmful interference in a residential

installation. This equipment generates uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in a particular

installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to

correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.