


# OLUMAT

## OLUMAT Smart Lock

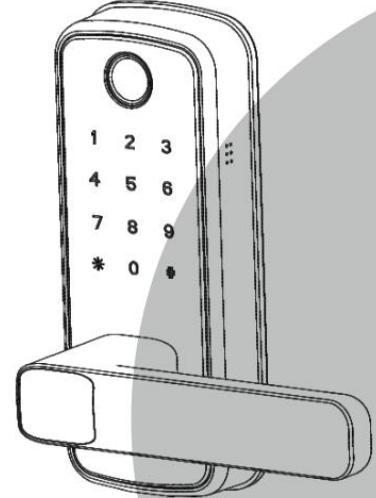

### APP Guide

#### APP UNLOCK/LOCK




To unlock the lock, tap this icon once.  
To lock the lock, press and hold on this icon.


Note: This will only work while you are within bluetooth range of the lock.  
Refer to WiFi Gateway Guide page for remote unlock/lock information.

#### FINGERPRINTS

To add a fingerprint follow these instructions:

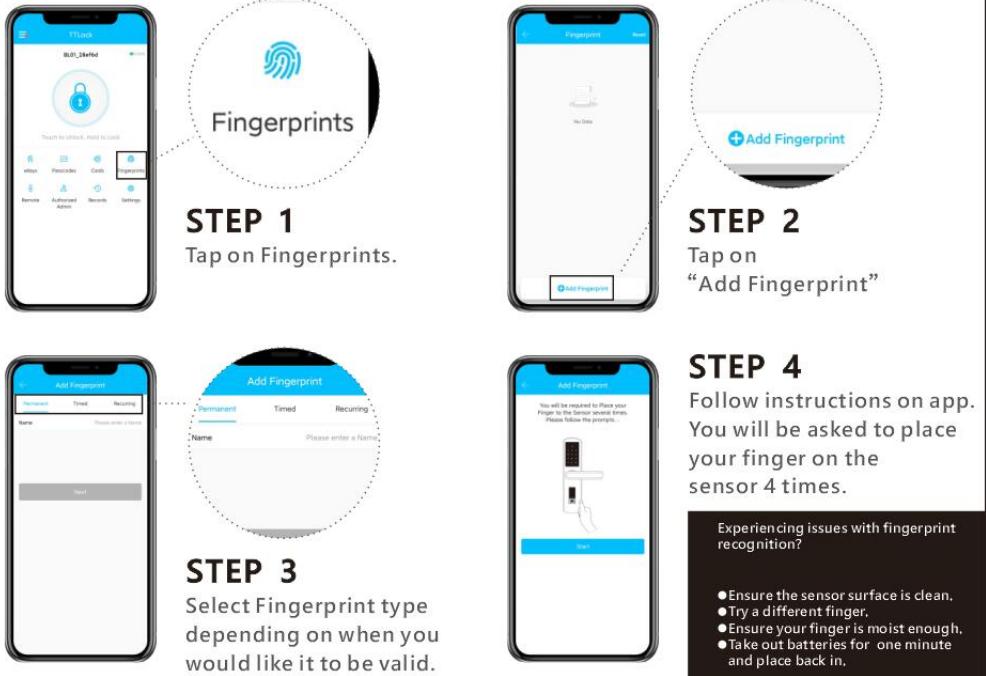


#### LOCK SETTINGS

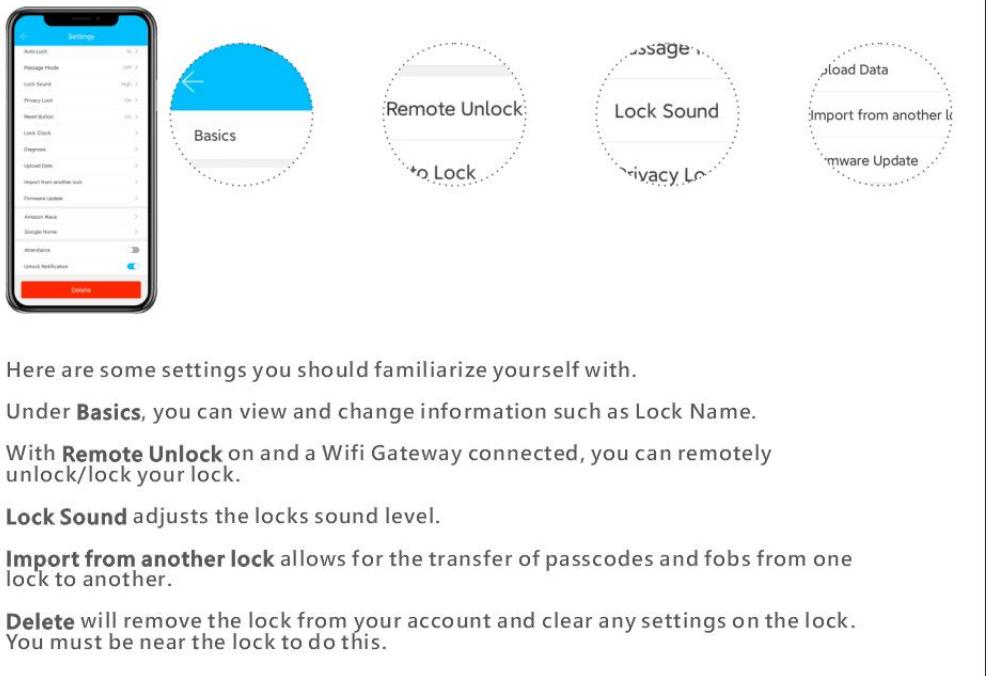


#### HOW TO REGISTER

Download the TTLock app from Google Play or App Store. Search "TTLock."

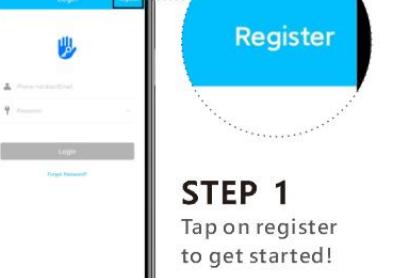

#### STEP 1

Tap on register to get started!

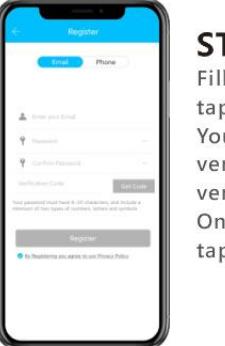

#### STEP 2

Fill out this and then tap "Get Code". You will be sent a verification code to verify your account! Once, you receive it, tap on "Register"

Note: The TTLock app is needed to use this lock. If this lock was professionally installed (or installed by someone other than the homeowner), make sure this step is performed by the homeowner.

#### PAIRING YOUR LOCK



#### STEP 1

Tap on the three horizontal lines.




#### STEP 3

Tap on "Next"



#### STEP 2

Tap on "+Add Lock"

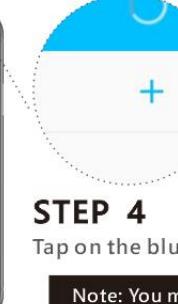

#### STEP 4

Tap on the blue plus sign.

Note: You may need to tap on lock keypad.

#### LOCK PAGE OVERVIEW



##### Unlock/Lock

Unlock/Lock using phone's bluetooth

##### eKeys

Set up and send eKeys

##### Passcodes

Set up and generate 6 different types of passcodes

##### Cards/Fobs

Set up your fobs here

##### Fingerprints

Set up fingerprints


##### Remote

Wireless Key Fob Page

##### Authorized Admin

Create and edit admins

#### IC CARD/FOBS

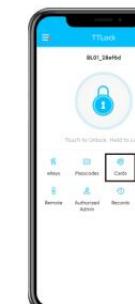

##### Cards

To add a fob to your lock.


Follow these steps.

#### PASSCODES



##### Passcodes

STEP 1  
To access the passcode menu, tap on "Generate Passcode". This will take you to the passcode page.

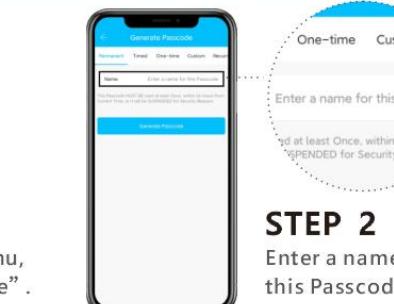

STEP 2  
Enter a name for this Passcode.

Here is a breakdown of the 6 different code types for different durations.


|           |                              |           |  |
|-----------|------------------------------|-----------|--|
| Permanent | Lasts permanently            | Erase     | Erases all codes on lock                                   |
| Timed     | Lasts between selected hours | Custom    | Choose your own digits such as 654321 (permanent or timed) |
| One-time  | Lasts for one use            | Recurring | Lasts during scheduled hours weekly                        |

#### PASSCODES



##### Passcodes


STEP 1  
Pay attention to this text when generating a code. You may experience issues if these instructions are not followed.

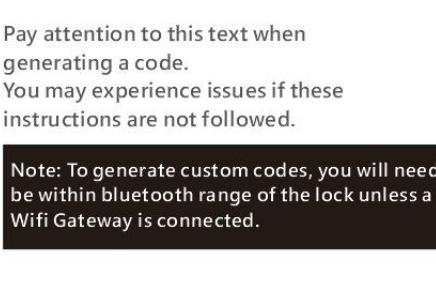

Note: To generate custom codes, you will need to be within bluetooth range of the lock unless a WiFi Gateway is connected.




Best Practice:  
When inputting the passcode, use "Code + #".

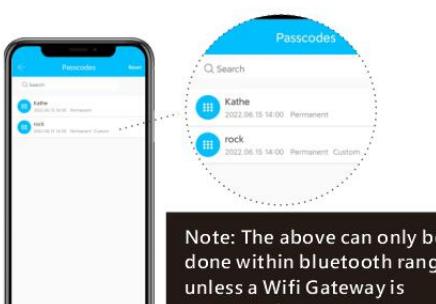

Within this page, you can  
1. Edit a passcode's number, validity, and name.  
2. Delete code and view records.

Note: The above can only be done within bluetooth range unless a WiFi Gateway is connected.

#### PASSAGE MODE & AUTO-LOCK

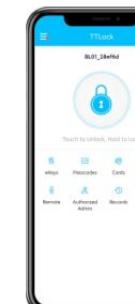

##### Settings

STEP 1  
Auto-lock will automatically lock the lock when it has been opened after 5 second by default. This can be adjusted with Passage Mode and Auto-lock timer. Outlined below is how to adjust these settings related to auto-lock.




##### Passage Mode

STEP 2  
Select Passage Mode



STEP 3  
Passage Mode disables auto-lock during a set schedule.


#### OLUMAT

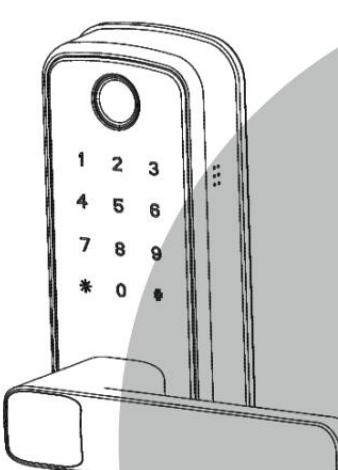

## OLUMAT Smart Lock




### Installation Guide

## Installation Video

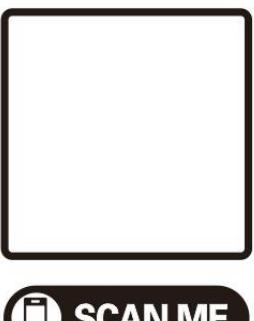


SCAN ME


go to <https://www.olumatsafe.com>  
to watch installation video.

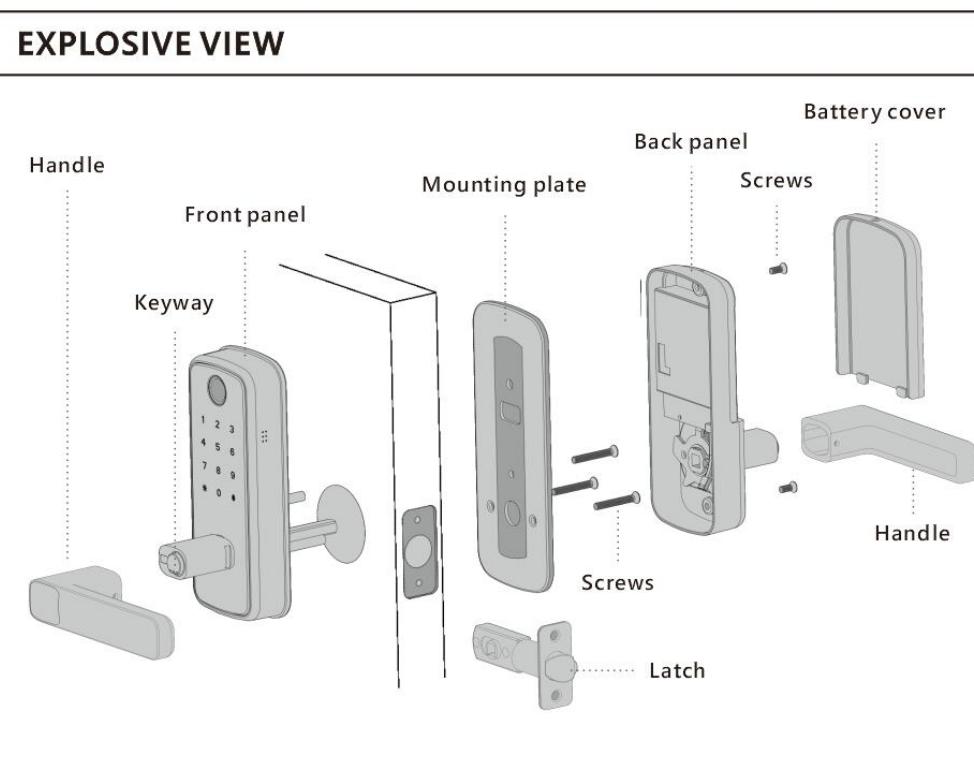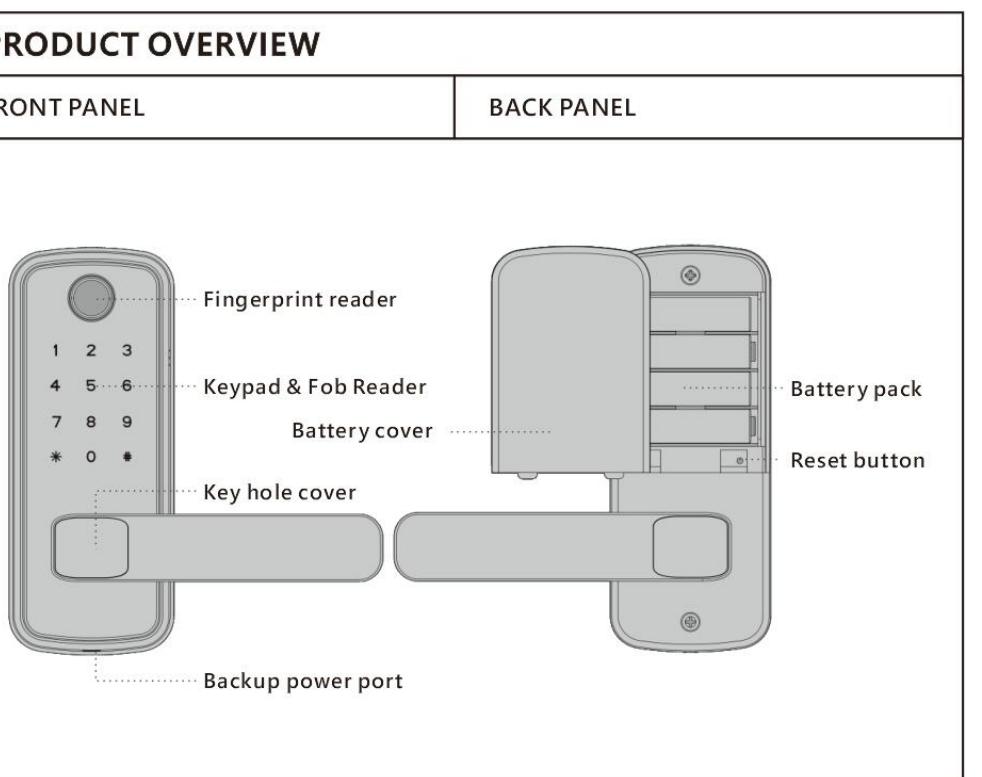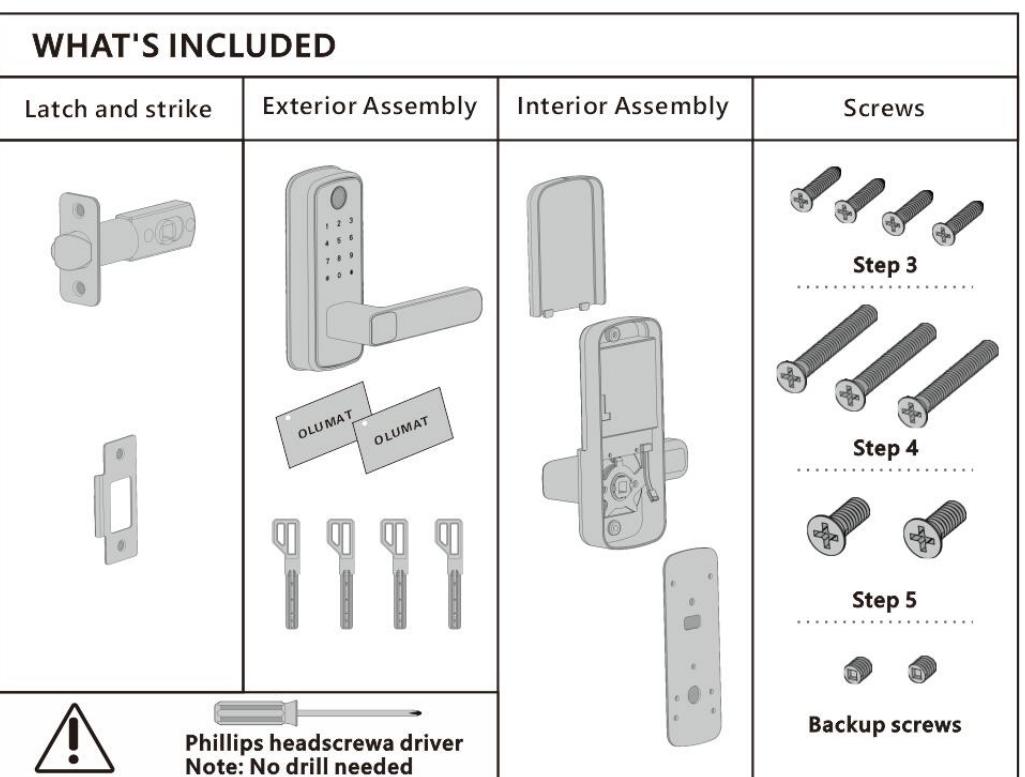


## 1 Adjust the backset of latch (if needed)

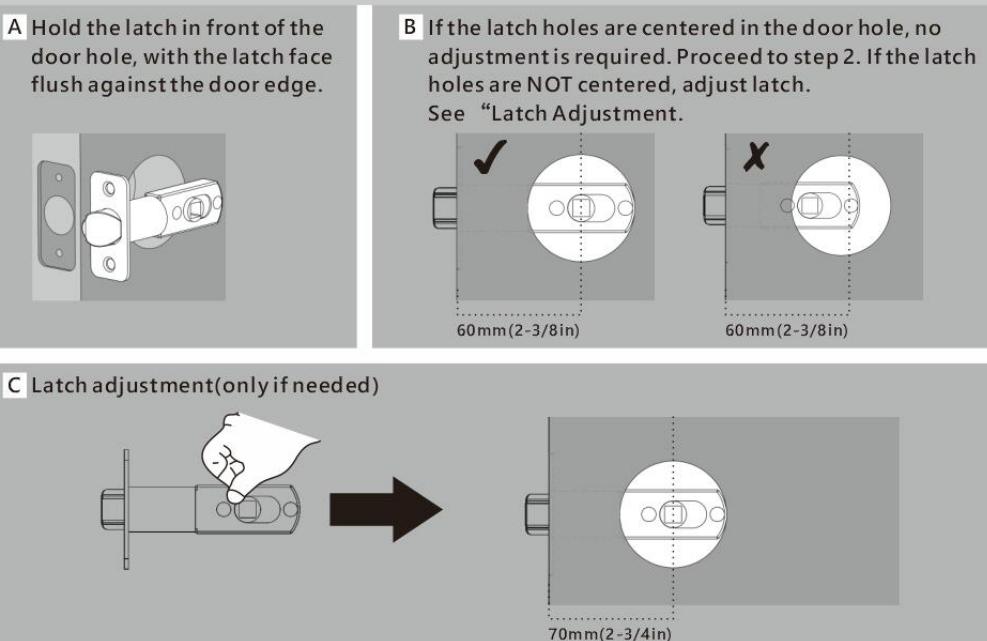


## 2 Determine the handing of your doors (standing outside the door)

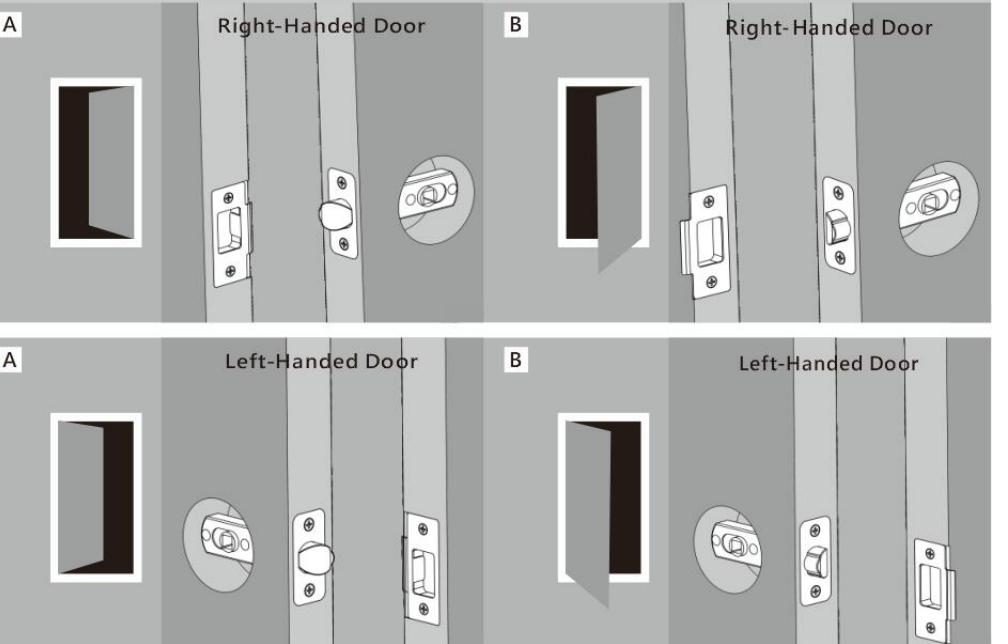


## 3 Install latch

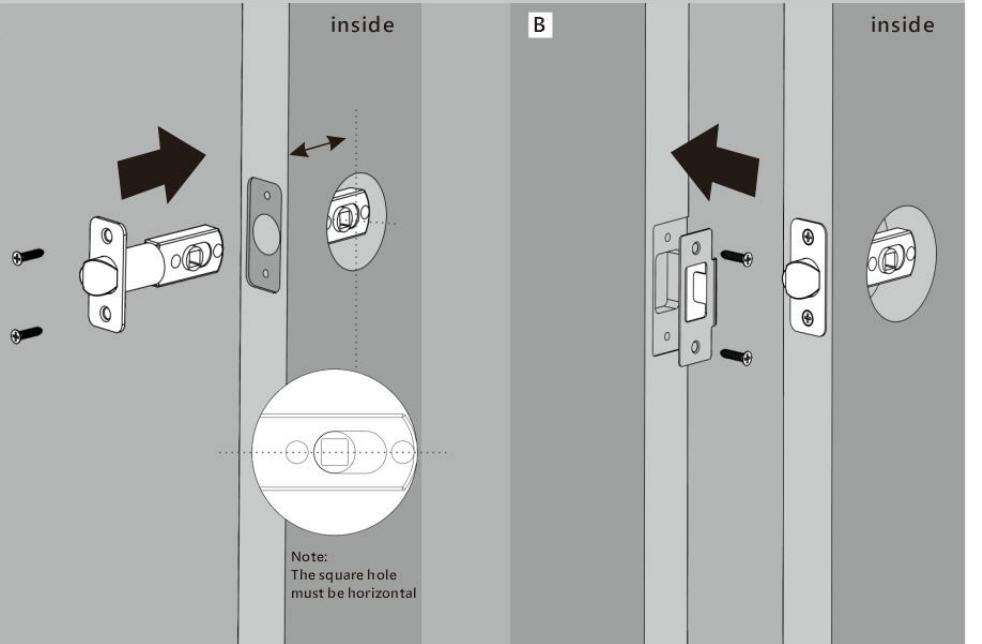


## 4 Install front panel and interior mounting plate

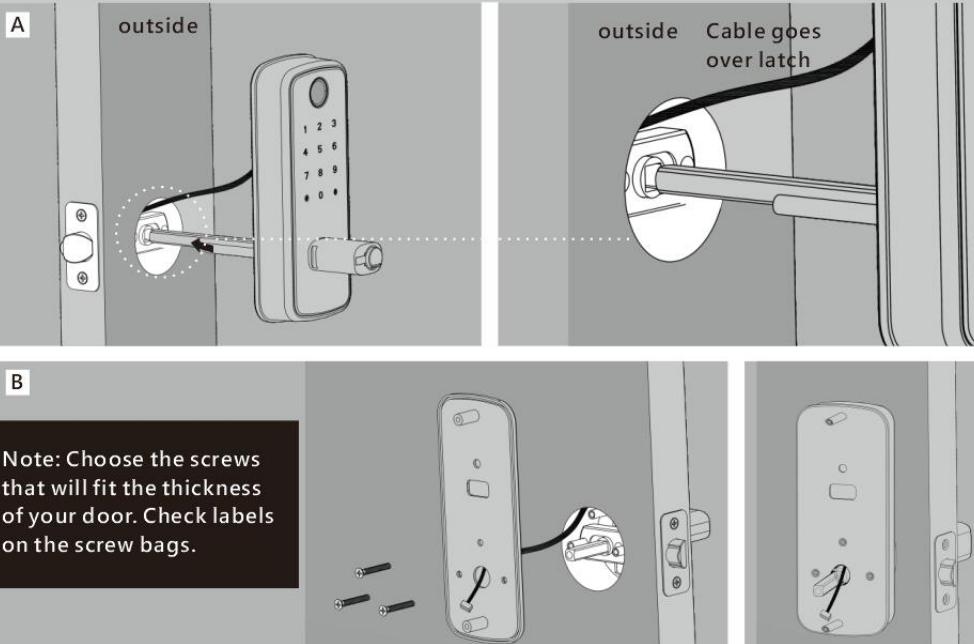


## 5 Connect wire connector and install back panel

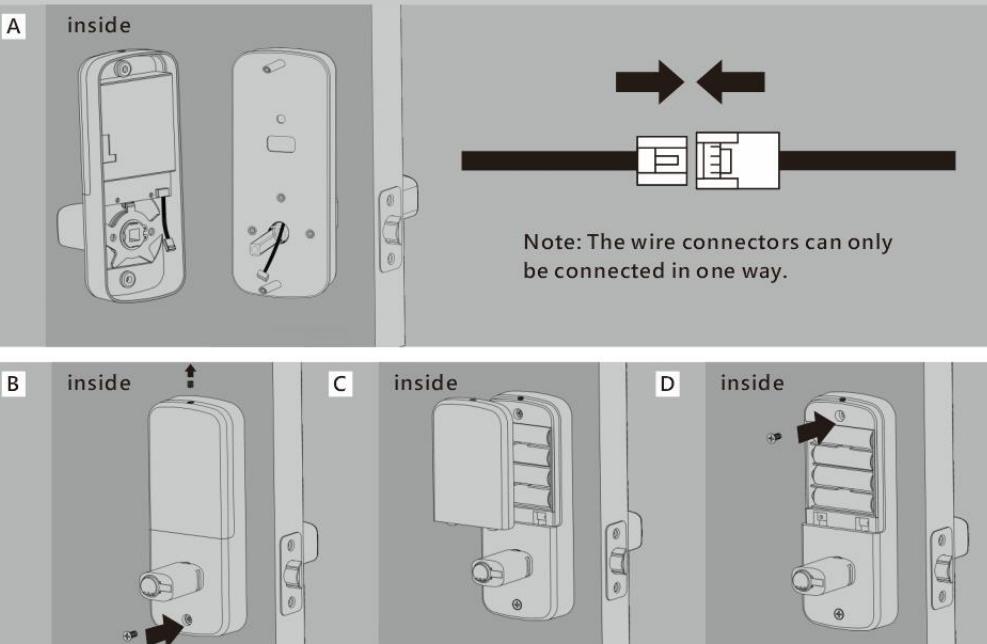


## 6 Install 4 AA batteries and battery cover

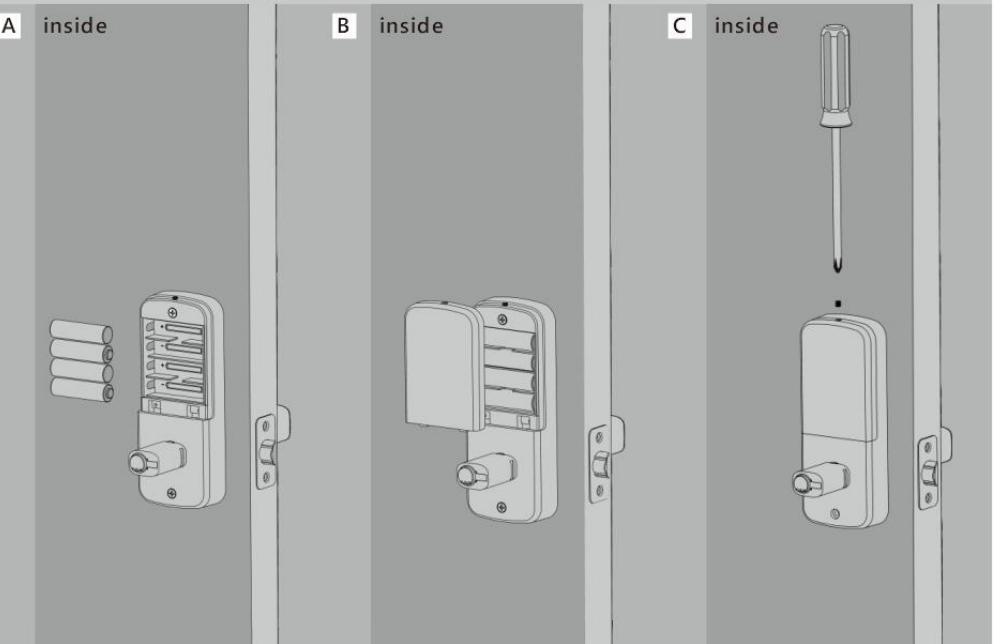

## 7 Install the door handles

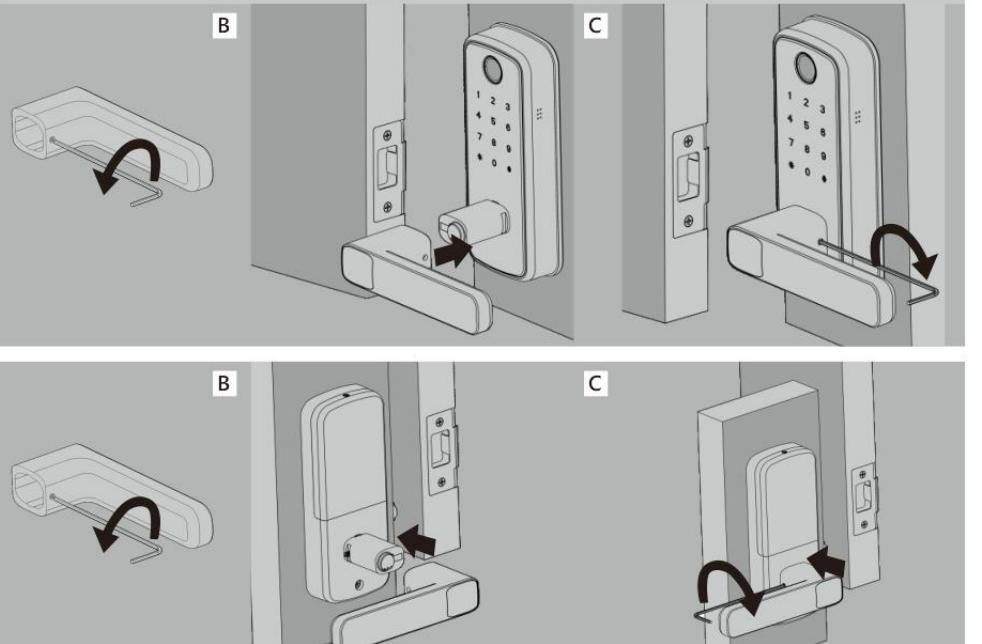

## 8 Insert the key and test the installation

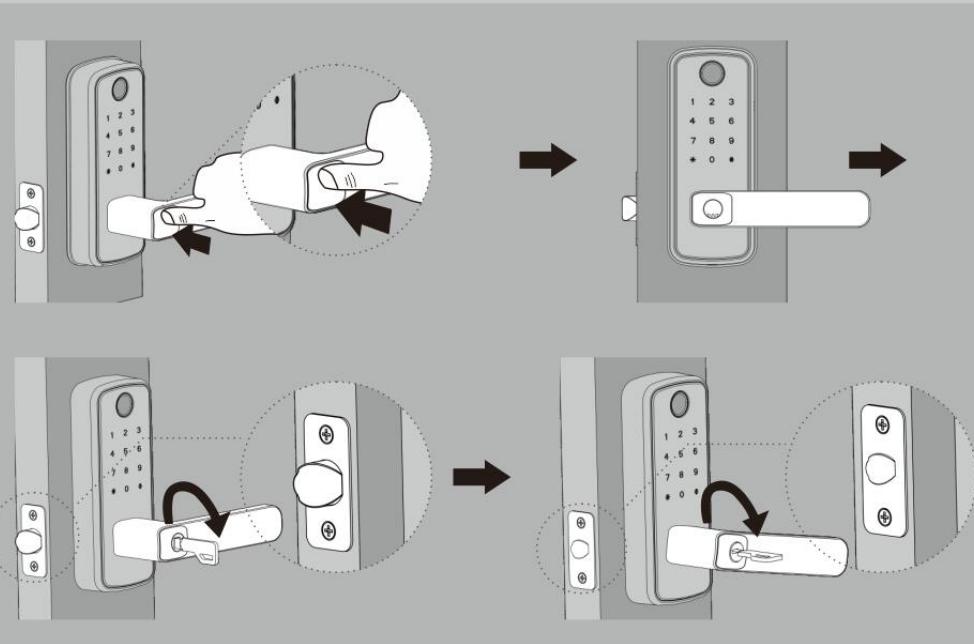

## Install our lock on top (only if needed)



## Return and Warranty Information

### Return Policy

30 day money back guarantee from date of purchase. Some exceptions may be made with a restocking fee on a case by case basis and buyer may be responsible for return shipping cost. For inquiries regarding this, please contact us at [olumatsafe@gmail.com](mailto:olumatsafe@gmail.com).

### Product Warranty

We offer a 1 year free replacement from the date of purchase. To claim your warranty replacement, the first request or inquiry must be made within 1 year of date of purchase. Any requests or inquiries after 1 year from the date of purchase are not eligible for warranty. Olumat reserves the right to deny a replacement request. For inquiries regarding this, please contact us at [olumatsafe@gmail.com](mailto:olumatsafe@gmail.com).

FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

### Email us first! We are here to help.

For any technical questions or support, please email us at [olumatsafe@gmail.com](mailto:olumatsafe@gmail.com) or visit our website [olumatsafe.com](http://olumatsafe.com) to chat with us.

Support is available:  
MON-SUN 9 AM to 5 PM PST  
[www.olumatsafe.com](http://www.olumatsafe.com)