

Remote controller GENERAL INFORMATION

1. INSTALLING RECEIVER IN CEILING FAN

A. Safety precautions:

WARNING: HIGH VOLTAGE! Disconnect power by removing fuse or switching off circuit breaker.
Do not use with solid state fans.


Electrical wire must meet all local and national electrical code requirements.

B. Electrical rating: 110v-240V 50/60Hz

MAX. Motor watts: 45W MAX. Light watts: 100W

C. Installing receiver in fan:

- Remove power from the circuit.
- Remove ceiling fan canopy from the mounting bracket.
- Disconnect existing wiring between ceiling fan and supply in electrical junction box.
- Make connections as follows, using the wire nuts supplied:

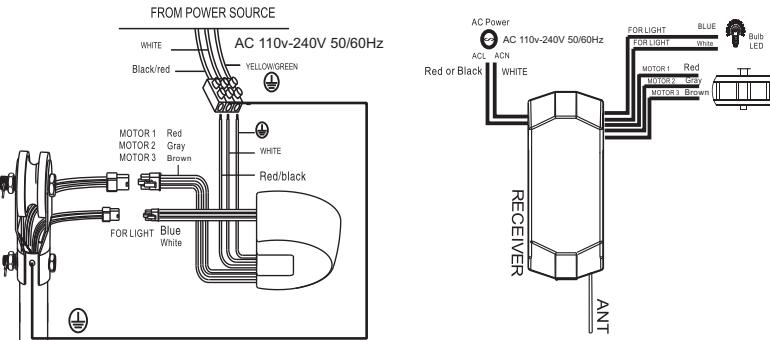

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2. OPERATING TRANSMITTER:

- Install 2*1.5 AAA battery(not included). To prevent damage to transmitter, remove the battery if not used for a long time.
- Store the transmitter away from excessive heat or humidity.

C. Operating the buttons on the panel of the transmitter.

- key -for fan 1 speed.
- key -for fan 2 speed.
- key -for fan 3 speed.
- key -for fan 4 speed.
- key -for fan 5 speed.
- key -for fan 6 speed.
- key -for fan off.
- key-for light on and off.
- key -for fan Foward/Reverse.
- key -for The fan will stop after the time if the fan is working.

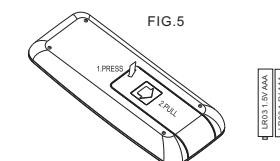

D. Remote control learning code method. FIG.4

Power off the receiver for five minutes. Turn on the power and immediately press and hold these two the key of LIGHT and SPEED3 until the buzzer sounds twice, then learn successfully.

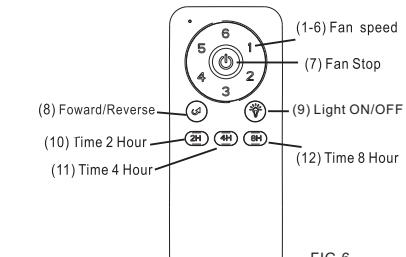
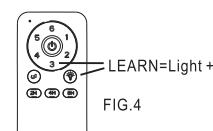


FIG.6

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.