

Operation
guide



Sucking and vibrating buttocks

Product parameter

 
Product name:	Electric Sucking Sex Doll-Electric Sucking Masturbator
Material:	TPE+ABS+Silicone
Description:	Sucking and vibrating
Working time:	Working 90 minutes
Charging time:	120 minutes+10%
Working voltage:	DC5V
Noice Level:	≤55DB

⚠ USB from the computer for charging would be available. If use a charger, please make sure its voltage is 5V.

Products

● The product is for adults aged 18 and above.

Thank you for choosing our product, please read the manual well before using.

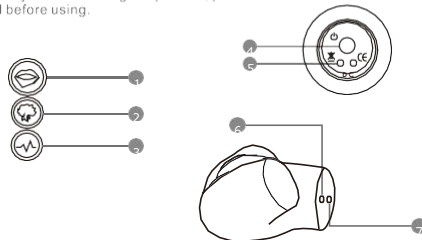

Note: The clear tube is for drainage, the yellow tube is for air releasing.

1	Sucking Button	4	Power Button
2	Exhaust Button	5	Magnetic charging
3	Vibration Button	6	Exhaust hole

 
① Power button: Press and hold this button for 3 seconds to turn on, the indicator light is on. The vibration motor and the sucking motor are in standby state. Click the vibration button and the sucking button to turn on the vibration and sucking mode. A total of <dual 5 frequency>cycle mode. Press and hold for 3 seconds to shut down when the power on.

② Sucking button: Long press for 3 seconds to turn on the remote control, the indicator light is always on, when the power on, click to turn on the sucking function, a total of 5 frequency cycles, long press for 3 seconds to turn off the remote control function, and the host turns off synchronously.


③ Exhaust button: click this button to exhaust, it will automatically exhaust during work

④ Vibration button: click this button to turn on the vibration, a total of 5 frequency cycles, long press for 3 seconds to pause the vibration, and then click again to turn on the vibration

Instructions

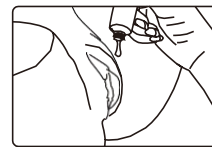

 
1. Squeeze out lubricant to lubricate the vagina

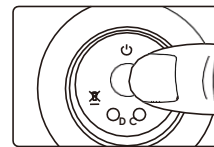

2. Long press the host button for 1.5 seconds to turn on





 3. Start the passion moment

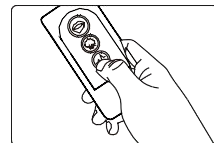

4. Use the remote control to unlock more ways to play

  Charging instructions




USB Magnetic Charging line

1. The indicator light will flash when charging and be on when fully charged


2. Please use a 5V charger to charge the USB interface. It takes about 120 minutes to fully charge

3. Charging is about 120 minutes, and it is forbidden to use it when charging

 
Cleaning instructions

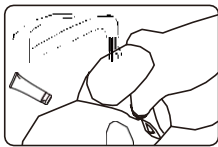

 1. Open the water pipe and Rinse the vagina with water

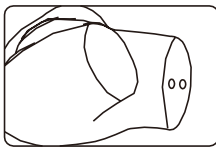

 2. The first frequency function of sucking is turned on, the water in the channel can be discharged

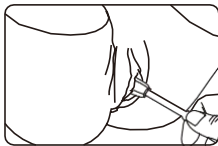

1. Use a cleaning stick to clean and dry the inside of the channel



4. Wipe it with paper towel and store it dry

Attention:The product can not put in the water directly.

Please keep the tube of the air releasing away the water, to avoid the water entering into the tube and damage the product.

Security information

Operation and safety

1. Do not put the product in a place that does not dissipate heat;
2. For personal health, this product can not be shared with other people to avoid infection.
3. This product has many functions, please do not over use, excessive use will lead to lower organ sensitivity;
4. When using this product, please use with condom and water-based lubricant, the effect is better;
5. When using this product, if the product is acting abnormally, or if you feeling any physical discomfort, please stop using immediately;
6. Do not use massage oil, skin cream, gasoline, acetone and other chemicals instead of professional lubricating liquid;
7. After using, please get it cleaned immediately, to avoid bacteria;
8. If you don't use it again, please put it in a dry and cool place and away from Children. The product is rechargeable, please get it charged again before using, to make sure it will work well.

Cleaning

1. Cleaning: after using, there are a lot of secretions and residual liquid left, if not cleaned in time, it will be breeding grounds for bacteria. So wash the machine with warm water and scented soap, please wash it in hot water (50 degrees). Pay attention to avoid water into the switch and charging hole when you cleaning. Wash and knead with the fingers instead of using any brushes or acidic cleaner.
2. Wiping: After washing, wipe it up with lint-free cloth or towel.
3. Maintenance: Remember to turn off the power after use to avoid any possible damage to products or power supply. Store it with flannelette bags or dust bags and keep it in a cool and dry place.
4. Forbiddance: Any cleanser containing alcohol and gasoline is not available. Avoid water and direct sunlight

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment