

## **SUITABLE FOR OUTDOOR USE ONLY**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Children aged less than 3 years should keep a distance of the appliance, unless constant supervision is provided.
- Children aged from 3 to 8 years are allowed to switch the appliance on and off, when the appliance is placed or installed in a normal position and these children have been given supervision or instruction concerning use of the appliance in a safe way and understands the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- ATTENTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Place the appliance in an open space, at least 1 meter away from twigs or other combustible materials.
- If the cord is damaged, it must be replaced by the manufacturer, a service agent or a similarly qualified person in order to avoid a hazard.
- Use only for intended household as designed and described in this manual.
- Check before plugging in the power cord if the voltage of the appliance compares to the voltage in your circuit.
- Check if your socket is connected to a 30 mA differential circuit breaker.
- The power cord of this appliance must be connected to a grounded socket.
- It is not recommended to use an extension cable with this appliance.
- Never immerse the appliance, the power cord or the plug in water or another liquid.
- Never use the appliance:
  - when the power cord or the plug is damaged;
  - when you notice even the smallest malfunction;
  - when the appliance has fallen or is damaged;
  - when the appliance is not assembled correctly.
- Never repair the appliance yourself; incorrect repairs can cause the user considerable risk. Only authorized maintenance personnel is allowed to repair the appliance.
- Never touch the appliance or the plug with wet or moist hands or feet, because this can cause an electrical shock. Make sure your hands are dry before you connect or disconnect the appliance.
- Always turn off the appliance and unplug the power cord before moving or cleaning the appliance.
- This appliance is intended for household use only. Every professional or semi-professional use is excluded.
- The parts of the appliance, close to the halogen, may get hot when in use. Do not touch the grill or hood while the appliance is in use, or just after turning the appliance off. Caution! Risk of burns.
- Do not cover the appliance to avoid overheating.
- Never disconnect the appliance when in use.
- The appliance must be placed with the clearance of 100 cm to a wall and 30 cm to a ceiling.
- Never use the appliance near explosive or flammable vapours.
- Never leave the appliance unsupervised within reach of children, regardless of it is in use or not.
- Always unplug the appliance after use and before cleaning. Never unplug by pulling by its power cable from the socket.
- Do not use the appliance with a programmer, timer, separate remote-control system or any other device that switches the appliance on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
- The protective grill of this appliance is meant for blocking direct access to the heating elements and must be in proper position when the appliance is in use.
- Do not cover or block the fire protection.
- The protective grill does not provide complete protection for young children and weaker people.
- Do not place the appliance under a socket. The used socket must be visible and accessible.

- Do not use the appliance near a bath, shower or swimming pool.
- Do not move the appliance when in use, or when it's still hot after use.
- Do not use this appliance as hairdryer, sauna or inside radiator.
- Caution! This appliance is not provided with a device to regulate the temperature in the room or space where the appliance is being used. Do not use this appliance in too small spaces or occupied with persons who are not capable of leaving the room by their selves, unless there is constant supervision.
- The heating part must be placed at least 1.8 m above the floor.
- Never leave the appliance in use without supervision, especially when there are children or pets nearby.
- Do not wind the power cord around the appliance.
- 
- FCC Statement:
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help. Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

#### **COLLECTING ELECTRONIC WASTE**



##### **Environmental Protection**

Electronic devices should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.