



Oncheer® - 8070BT 3 Band (FM /AM /SW) Wood classic multi-function Radio

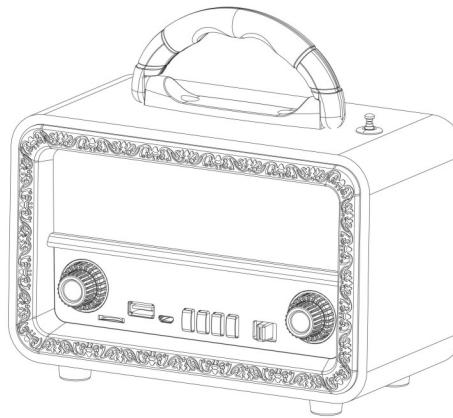

User Manual

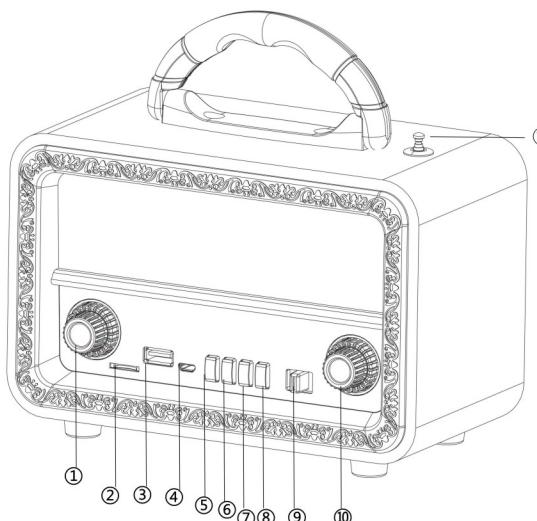

*** RADIO OPERATION:**
Turn on the VOLUME switch.
1. Choose bands: tune band switch, can choose AM,FM,SW.
2. Turn the "TUNING" button to choose the required station.
3. Adjust antenna position to get the best receiving effect.

*** USB/TF OPERATION:**
During radio program playing, insert USB/TF card, it will automatically switch to play from USB/TF card.
You can press **◀◀** or **▶▶** button on radio to select the music.

*** Bluetooth(BT) FUNCTION OPERATION**
1.Turn on the radio, push the band button to MP3.
2.Speaking "BT MODE" from the radio, then turn on the BT of cellphone.
3.Search "8070BT" in cellphone and connect it.
4.Play the music.
Your cellphone will remember 8070BT and connect to it automatically next time.

Specifications:

Output Power	7W
Speaker	57MM 3Ω 8W
Noise rate	≥45DB
FM	87-108 MHz
AM	522-1710 KHz
SW	5.6-22.0 MHz
Battery	Over 3 hours using time in USB/TF/Radio mode. Built in lithium battery, please charge 8 hours to full battery capacity before using.

FCC Compliance Statement for USA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Note

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.